

Rowenta SO9330F0

Rowenta Intense Comfort Heater SO9330F0 User Manual

1. INTRODUCTION

The Rowenta Intense Comfort Heater SO9330F0 provides powerful and efficient heating for spaces up to 35 m². Featuring ceramic technology, it delivers instant warmth with 2000 W of power. Designed for comfort, it operates silently at just 29 dB(A) in Eco mode, making it suitable for any room. Its modern design, compact size, and integrated handle ensure easy transport and storage, blending seamlessly into any interior.



Image: Rowenta Intense Comfort Heater SO9330F0.

2. SAFETY INSTRUCTIONS

This appliance incorporates enhanced safety features including anti-tip protection, automatic shut-off, and overheating protection. It is constructed with flame-retardant materials and includes child safety measures. Always ensure the heater is placed on a stable, flat surface and is not covered. Keep flammable materials away from the appliance. Do not use in bathrooms or near water sources.

- Always unplug the appliance when not in use or before cleaning.
- Do not insert objects into the grilles of the appliance.
- Do not use the appliance in dusty rooms or where there is a risk of fire.
- Ensure the power cord is not damaged or placed under carpets or furniture.
- Supervise children and individuals with reduced physical, sensory, or mental capabilities when near the appliance.



Image: Heater demonstrating anti-tip safety feature.

3. PRODUCT OVERVIEW

The Rowenta Intense Comfort Heater SO9330F0 features intuitive controls for ease of use.



Image: Top control panel with power/mode and thermostat dials.

Components:

- **Control Panel:** Located on top, with two rotary dials.
- **Air Inlet/Outlet Grilles:** Front and rear for air circulation.
- **Integrated Handle:** For easy portability.
- **Power Cord:** For electrical connection.

Controls:

- **Left Dial (Power/Mode):** Selects fan-only, Eco (1000W), or Turbo (2000W) heating modes.
- **Right Dial (Thermostat):** Adjusts the desired room temperature.

4. SETUP

Unpacking:

1. Carefully remove the heater from its packaging.
2. Remove all protective materials and labels.
3. Inspect the appliance for any signs of damage. Do not use if damaged.

Placement:

- Place the heater on a firm, flat, and stable surface.
- Ensure there is at least 50 cm (20 inches) of clear space around the heater to allow for proper air circulation.
- Do not place the heater directly below a wall socket.
- Avoid placing the heater near curtains, furniture, or other flammable materials.
- Ensure the voltage indicated on the appliance corresponds to your mains voltage.



Image: Heater's compact size and integrated handle for easy transport.

5. OPERATING INSTRUCTIONS

Powering On/Off:

1. Plug the power cord into a suitable electrical outlet.
2. Turn the left dial (Power/Mode) to the desired setting (Fan, Eco, or Turbo).
3. To turn off, rotate the left dial to the '0' position and unplug the appliance.

Mode Selection:

- **Fan Mode:** For air circulation without heat.
- **Eco Mode (1000 W):** Provides continuous, energy-efficient heating. Ideal for maintaining a comfortable temperature and saving up to 50% energy compared to maximum power.
- **Turbo Mode (2000 W):** Delivers maximum heating power for rapid warming of the room.



Image: Heater providing powerful warmth in a workspace.

CONFORT MUY SILENCIOSO

Solo 29 dB(A)



Image: Heater providing silent comfort in a living area.



Image: Eco mode energy saving feature.

Temperature Adjustment:

- Rotate the right dial (Thermostat) to set your desired room temperature.
- The heater will automatically adjust its operation to maintain the set temperature.

6. MAINTENANCE

Cleaning:

1. Always unplug the heater and allow it to cool completely before cleaning.
2. Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
3. Use a vacuum cleaner with a brush attachment to gently clean the air inlet and outlet grilles to remove dust and lint.
4. Never immerse the appliance in water or any other liquid.

Storage:

- Ensure the heater is clean and completely dry before storing.
- Store the appliance in its original packaging in a cool, dry place, away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

Common Issues and Solutions:

Problem	Possible Cause	Solution
Heater does not turn on.	Not plugged in; power switch off; power outage; safety cut-off activated.	Check power connection; ensure power dial is on; check household circuit breaker; unplug, wait 10 minutes, then plug back in.
Heater stops working unexpectedly.	Overheating protection activated; anti-tip safety activated.	Unplug, allow to cool, check for obstructions; ensure heater is upright on a stable surface.
Insufficient heating.	Incorrect mode selected; thermostat set too low; room size too large.	Select Turbo mode; increase thermostat setting; ensure heater is appropriate for room size (up to 35 m²).
Unusual noise or smell.	Dust accumulation; new product smell.	Clean air grilles; new product smell is normal and dissipates with use. If persistent or strong, discontinue use and contact support.

8. SPECIFICATIONS

Technical Details:

Feature	Value
Brand	Rowenta
Model Number	SO9330F0
Color	Black
Dimensions (L x W x H)	19 x 16 x 28.5 cm
Weight	2 kg
Power	Up to 2000 W (Eco: 1000 W, Turbo: 2000 W)
Voltage	220 V

Feature	Value
Number of Speeds	2 (heating modes)
Special Features	Lightweight, Ceramic Technology, Eco Mode, Silent Operation, Anti-tip Protection, Automatic Shut-off, Overheating Protection
Heating Coverage	Up to 35 m²



Image: Product dimensions.

9. WARRANTY AND SUPPORT

Warranty Information:

Rowenta is committed to product durability. This product is designed for **15 years of reparability at a fair price**. This commitment is supported by a network of 6200 authorized repair centers worldwide.



Image: Rowenta Intense Comfort branding.

Customer Support:

For further assistance, troubleshooting not covered in this manual, or to locate an authorized repair center, please visit the official Rowenta website or contact their customer service department. Keep your purchase receipt as proof of purchase for warranty claims.

You can find more information and support at the official [Rowenta Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question