

[Manuals.plus](#) /

› [Tefal](#) /

› Tefal Ingenio Serenity L829SB04 11-Piece Cookware Set Instruction Manual

Tefal L829SB04

Tefal Ingenio Serenity L829SB04 11-Piece Cookware Set Instruction Manual

Model: L829SB04

INTRODUCTION

This manual provides essential instructions for the safe and effective use, care, and maintenance of your Tefal Ingenio Serenity 11-Piece Cookware Set. Please read all instructions carefully before first use and retain this manual for future reference.

PRODUCT OVERVIEW AND CONTENTS

The Tefal Ingenio Serenity 11-Piece Cookware Set is designed for versatile cooking and space-saving storage. The set includes:

- 1x Frypan 22 cm
- 1x Frypan 28 cm
- 1x Wok 26 cm
- 1x Saucepan 16 cm
- 1x Saucepan 20 cm
- 2x Ingenio Removable Handles
- 2x Glass Lids (16 cm / 20 cm)
- 2x Plastic Storage Lids (16 cm / 20 cm)



Image: Overview of the Tefal Ingenio Serenity 11-Piece Cookware Set, showing pans, wok, saucepans, handles, and lids.



Image: The Tefal Ingenio Serenity cookware stacked neatly for compact storage, demonstrating its space-saving design.

11 PIECE COOKWARE SET



Frypan 28cm



Frypan 22cm



Wokpan 26cm



Saucepan 20cm



Saucepan 16cm



2 ingenio handles



2 glass lids
(16/20cm)



2 plastic storage lids
(16/20cm)

Image: Detailed breakdown of the 11-piece set, illustrating each component with its size (e.g., Frypan 28cm, Saucepan 16cm, 2 Ingenio handles, 2 glass lids, 2 plastic storage lids).

KEY FEATURES

- **Space-Saving Design:** Stackable cookware saves up to 50% space in cabinets.
- **Removable Handle:** Allows for seamless transfer from hob to oven to fridge, and compact storage. The handle is ultra-secure, supporting up to 10 kg.
- **Mineralia Non-Stick Coating:** Durable non-stick surface for easy cooking and cleaning.
- **Versatile Compatibility:** Suitable for all hob types, including gas, electric, ceramic, and induction.
- **Easy Cleaning:** Dishwasher safe, though hand washing is recommended for extended lifespan.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all components from the packaging.
2. **Initial Cleaning:** Wash all cookware items and lids with warm soapy water, then rinse and dry thoroughly.

3. **Handle Preparation:** Before first use, operate the removable handle's opening and closing mechanism a few times to ensure smooth operation.
4. **Seasoning (Optional but Recommended):** For optimal non-stick performance, lightly coat the interior of the pans with a small amount of cooking oil and heat gently for 30 seconds. Let cool, then wipe clean with a paper towel.

OPERATING INSTRUCTIONS

Attaching and Detaching the Handle

- To attach: Align the handle with the designated slot on the cookware rim and press the button to secure it firmly. Ensure it clicks into place.
- To detach: Press the release button on the handle and gently pull it away from the cookware.
- **Safety Note:** Always ensure the handle is securely attached before lifting or moving cookware. Only one handle is needed at a time for cooking.

Cooking on Hobs

- **Heat Settings:** Use low to medium heat for most cooking tasks. High heat can damage the non-stick coating and is generally not necessary due to the cookware's efficient heat distribution.
- **Induction Compatibility:** The cookware is suitable for induction hobs. Ensure the base of the pan fully covers the induction zone for optimal performance.
- **Utensils:** Use wooden, silicone, or plastic utensils to protect the non-stick coating. Avoid metal utensils that can scratch the surface.

Oven Use

- The cookware (without the removable handle) is oven-safe.
- Always remove the handle before placing cookware in the oven.
- Plastic storage lids are not oven-safe. Glass lids are oven-safe to a certain temperature (refer to specific product details if available, otherwise use caution).

Fridge Storage

- After cooking, allow food to cool before covering with the plastic storage lids and placing in the refrigerator.
- Remove the handle for compact storage in the fridge.

CARE AND MAINTENANCE

- **Cleaning:** While the cookware is dishwasher safe, hand washing with warm soapy water and a soft sponge is recommended to preserve the non-stick coating and extend the product's lifespan.
- **Avoid Abrasives:** Do not use abrasive cleaners, steel wool, or harsh scouring pads, as these can damage the non-stick surface.
- **Stubborn Food:** For stubborn food residues, soak the cookware in warm soapy water before cleaning.
- **Handle Care:** The removable handles can be wiped clean with a damp cloth. Do not immerse them in water for extended periods.

STORAGE

The Ingenio Serenity cookware is designed for optimal space-saving. To stack:

1. Ensure all items are clean and dry.
2. Remove all handles.

- 3. Place smaller pans/saucepans inside larger ones.
- 4. The glass lids feature butterfly handles that flatten for stacking.
- 5. Consider using pan protectors (not included) between stacked items to prevent scratches, especially if stacking frequently.

TROUBLESHOOTING

- **Handle not attaching securely:** Ensure the handle mechanism is clean and free of debris. Operate the opening/closing mechanism a few times. If issues persist, contact customer support.
- **Food sticking:** Ensure you are using appropriate heat settings (low to medium). Avoid overheating empty pans. Ensure the non-stick surface is clean and not damaged.
- **Discoloration:** Minor discoloration can occur over time, especially on the exterior, and does not affect cooking performance.

SPECIFICATIONS

Feature	Detail
Brand	Tefal
Model Number	L829SB04
Material	Aluminium
Coating	Mineralia Non-Stick
Colour	Blue Salt
Handle Material	Stainless Steel
Hob Compatibility	All types, including Induction
Dishwasher Safe	Yes (hand wash recommended)
BPA Free	Yes
Product Dimensions	33.2 x 33.2 x 21 cm
Item Weight	5.75 kg

WARRANTY AND SUPPORT

The Tefal Ingenio removable handle comes with an impressive 10-year warranty, covering manufacturing defects under normal household use. For warranty claims or technical support, please refer to the contact information provided with your purchase documentation or visit the official Tefal website.

For more information, visit the [Tefal Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FGY2P91L>

More documents and user manuals: <https://manuals.plus/>