

- › [Crayola](#) /
- › [Crayola Kids Bluetooth PA Stereo Speaker System with Karaoke Microphone - Model B0FGYDFH7M User Manual](#)

## Crayola B0FGYDFH7M



# Crayola Kids Bluetooth PA Stereo Speaker System

MODEL: B0FGYDFH7M - USER MANUAL

## INTRODUCTION

---

This manual provides essential instructions for the safe and efficient operation of your Crayola Kids Bluetooth PA Stereo Speaker System. Please read this manual thoroughly before use and retain it for future reference.



© 2025 CRAYOLA OFFICIAL LICENSED PRODUCT

Image: The Crayola Kids Bluetooth PA Stereo Speaker System in black, shown with its wired microphone.

## SETUP

---

### 1. Unboxing and Initial Inspection

- Carefully remove all components from the packaging.
- Verify that the package contains the speaker unit, one wired microphone, and a USB-C charging cable.
- Inspect the unit for any signs of damage. If damage is present, do not use the product and contact customer support.

### 2. Charging the Speaker

- Before first use, fully charge the speaker.
- Connect the supplied USB-C charging cable to the USB-C charge port on the speaker.
- Connect the other end of the cable to a compatible USB power adapter (not included).
- The charging indicator light will illuminate. Once fully charged, the light may change color or turn off.
- A full charge provides approximately 2 hours of playback time.

### 3. Powering On/Off

- Locate the power button on the control panel.
- Press and hold the power button for a few seconds to turn the speaker ON or OFF.

## OPERATING INSTRUCTIONS

---

### 1. Bluetooth Pairing



Image: The Crayola speaker shown with icons representing connectivity to a phone, MP3 player, iPad, and TV, illustrating its multifunctional Bluetooth capabilities.

- Ensure the speaker is powered ON and in Bluetooth mode. The speaker will typically enter Bluetooth pairing mode automatically upon power-on, indicated by a flashing LED.
- On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
- Select "Crayola Speaker" from the list of devices.
- Once paired, the speaker will emit a confirmation sound, and the LED indicator will stop flashing.

### 2. Using the Microphone

- Plug the wired microphone into the designated microphone input port on the speaker.
- Ensure the microphone's ON/OFF switch is in the ON position.
- Speak into the microphone. The sound will be amplified through the speaker.

- Note: The microphone volume is fixed and cannot be adjusted independently from the main speaker volume.

### 3. True Wireless Stereo (TWS) Pairing

TWS allows two Crayola Bluetooth speakers to connect wirelessly for a stereo sound experience.

- Ensure both speakers are powered ON and in Bluetooth mode, but not yet paired with any device.
- On one speaker, press and hold the 'MODE' button until you hear a pairing tone. This speaker will become the primary unit.
- The two speakers will automatically connect to each other. A confirmation tone will sound once connected.
- Now, pair your device with the primary speaker via Bluetooth as described in the "Bluetooth Pairing" section.

### 4. FM Radio Function

- Press the 'MODE' button to switch to FM Radio mode.
- Press the 'SCAN' button to automatically scan and save available FM radio stations.
- Use the 'V-/K' and 'V+/L' buttons to navigate between saved stations.

### 5. Controls and Functions



Image: A hand pressing one of the control buttons on the top panel of the Crayola speaker, demonstrating user interaction.

Button	Function
MODE	Switches between Bluetooth, FM Radio, and other input modes. Long press for TWS pairing.
V-/K	Short press: Volume Down. Long press (in FM mode): Previous Station.
SCAN	Short press: Play/Pause (Bluetooth). Long press (in FM mode): Auto-scan FM stations.



Button	Function
V+/L	Short press: Volume Up. Long press (in FM mode): Next Station.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Recharge the speaker regularly, even if not in use for extended periods.
- **Water Exposure:** This speaker is not waterproof. Avoid exposure to water or excessive moisture.

## TROUBLESHOOTING

Problem	Possible Solution
Speaker does not power on.	Ensure the battery is charged. Connect the USB-C cable and charge for at least 30 minutes before attempting to power on again.
No sound from speaker.	Check the volume level on both the speaker and your connected device. Ensure the speaker is correctly paired via Bluetooth or in the correct mode (e.g., FM radio).
Bluetooth pairing fails.	Ensure the speaker is in pairing mode. Turn off Bluetooth on your device and turn it back on. Move the speaker closer to your device. Disconnect any other Bluetooth devices from the speaker.
Microphone has excessive echo.	The microphone's volume is fixed. Ensure you are not too close to the speaker when using the microphone, as this can cause feedback or echo.
FM radio reception is poor.	Relocate the speaker to an area with better signal. Perform an auto-scan again to find stronger stations.

## PRODUCT SPECIFICATIONS



SIZE : W 6.5 X H 9.29 X D 3.62 IN

© 2025 CRAYOLA OFFICIAL LICENSED PRODUCT

Image: Diagram illustrating the dimensions of the Crayola Kids Bluetooth PA Stereo Speaker System.

Feature	Detail
Model Number	B0FGYDFH7M
Brand	Crayola
Connectivity Technology	Bluetooth 5.0
Driver Size	4 inches
Peak Power	10W
Battery Capacity	1200mAh
Playback Time	Up to 2 hours (on a single charge)
Sensitivity	>85dB
Charging Port	USB-C
Features	Bluetooth, TWS, FM Radio, Microphone Input, LED Lights
Dimensions (L x W x H)	6.49 x 3.72 x 1.57 inches
Item Weight	1.58 pounds
Material	Plastic
UPC	605832373966

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Crayola website. Keep your proof of purchase for warranty claims.

## Related Documents - B0FGYDFH7M



# Crayola CBT450 Karaoke Speaker Instruction Manual

Official instruction manual for the Crayola CBT450 Karaoke Speaker, covering setup, features, safety, and specifications. Learn how to connect via Bluetooth, use TWS, and charge your speaker.



# Cravola CBT300 Portable Wireless Speaker User Manual

User manual for the Crayola CBT300 Portable Wireless Speaker, detailing its functions, specifications, battery information, and FCC compliance. Learn how to power on, pair, and use your speaker.



# Crayola Boost Active Wireless Headphones CHPBT348 User Manual

User manual for the Crayola Boost Active Wireless Headphones, model CHPBT348. Includes instructions on how to connect via Bluetooth, key operating instructions, LED indicator guide, LINE connection, specifications, and FCC statements.



## DIY Fairy Lantern & Lightning Bug Jar Craft Instructions

Step-by-step instructions for creating a DIY Fairy Lantern or Lightning Bug Jar using Crayola art supplies. Learn how to decorate mason jars with paint, glitter, and beads for a glowing craft project.



[Crayola and Zildjian Kids Band Coloring Page](#)

A fun coloring page featuring children playing musical instruments, a collaboration between Crayola and Zildjian, perfect for young artists.



## Crayola x Zildjian Drumming Coloring Page

A fun coloring page featuring a child playing drums, a collaboration between Crayola and Zildjian, inspired by their kids' drumstick set.

