



[Manuals.plus](#) /

> [CRAFTSMAN](#) /

> CRAFTSMAN Horizontal Shed BMSC2550 Instruction Manual

CRAFTSMAN BMSC2550

CRAFTSMAN Horizontal Shed BMSC2550 Instruction Manual

MODEL: BMSC2550

Product Overview

This manual provides instructions for the assembly, operation, and maintenance of your CRAFTSMAN Horizontal Shed. This compact outdoor storage system is designed for durability and security, offering 34 cubic feet of storage capacity for various outdoor items.

Important Safety Information

- Always keep the shed locked when not in use.
- Ensure proper weight distribution when storing heavy items.
- Secure the shed to the ground to prevent tip-overs.
- Read all instructions thoroughly before assembly and use.

Setup and Assembly

The CRAFTSMAN Horizontal Shed is designed for easy assembly with minimal tools required. Follow these general steps for proper installation:

1. **Site Preparation:** Choose a level, stable surface for your shed. Ensure the area is clear of debris and provides adequate drainage.
2. **Unpack Components:** Carefully unpack all parts and verify against the parts list (refer to packaging for full list).
3. **Assemble Base:** Construct the shed's base according to the diagrams. The reinforced floor is designed to support heavier items.
4. **Install Wall Panels:** Attach the multi-wall resin panels, ensuring they are securely interlocked for strength and stability.
5. **Attach Doors and Lid:** Install the double doors and the lid. Ensure metal hinges are properly aligned

for smooth operation.

6. **Secure Latches:** Verify that the lower foot latch and lid prop rod mechanisms are functioning correctly.




This diagram illustrates the main structural components and features of the shed, including its multi-wall panels for durability, low-profile design, and easy assembly. It also points out the lockable doors, metal hinges for smooth operation, and the lower latch for secure closure.

Operating Your Shed

Your horizontal shed offers convenient access and secure storage.

- **Opening the Lid:** The lid can be opened from the top. A prop rod is included to hold the lid open, making it easier to add or remove items.
- **Opening the Doors:** The shed features double doors for wide access. Use the integrated handles to open and close the doors.
- **Securing the Shed:** The doors are pad-lockable (lock not included) to keep contents safe and secure. A lower foot latch ensures the doors remain closed when not locked.

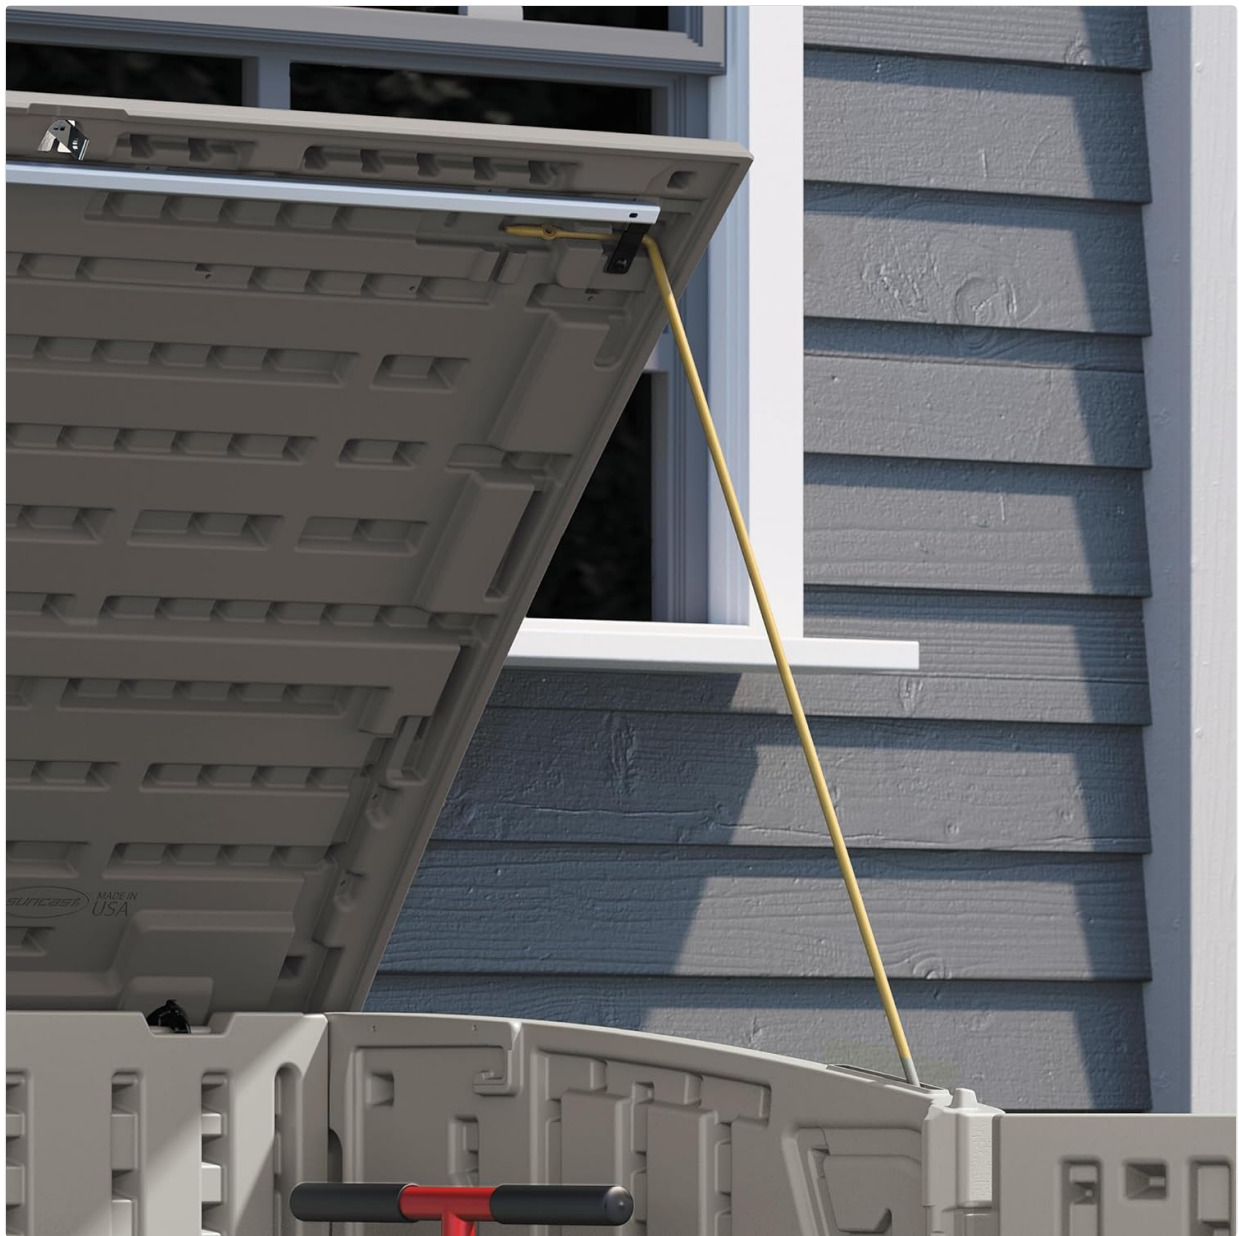

This image shows the shed's lid in an open position, supported by the integrated prop rod. This feature allows for hands-free access to the shed's interior, simplifying the loading and unloading of items.



This image highlights the shed's lockable door mechanism, demonstrating how a padlock (not included) can be used to secure the contents. The design ensures enhanced security for stored items.



This image provides a view of the shed's interior, showcasing its 34 cubic feet capacity. It demonstrates how various items such as potting mix, garden tools, and a small wheelbarrow can be efficiently stored.

Care and Maintenance

The CRAFTSMAN Horizontal Shed is designed for low maintenance and easy cleaning.

- **Cleaning:** To clean the shed, simply wipe down the multi-wall resin panels with a damp cloth and mild soap. Avoid abrasive cleaners that could damage the finish.
- **Inspection:** Periodically check all hinges, latches, and panels for any signs of wear or damage. Ensure all connections remain secure.
- **Winter Care:** While durable, clearing heavy snow accumulation from the roof can prolong the shed's lifespan.

Troubleshooting

If you encounter any issues with your shed, consider the following:

- **Difficulty Closing Doors/Lid:** Ensure the shed is on a level surface. Check for any obstructions inside the shed that might prevent full closure.















- **Water Leakage:** Verify that all panels are correctly assembled and sealed. Inspect the roof for any gaps or damage.
- **General Instability:** Confirm that the shed is securely anchored to the ground, especially in windy conditions. Re-check all assembly points.

For persistent issues, please contact customer support.

Product Specifications

Feature	Detail
Brand	CRAFTSMAN
Model Number	BMSC2550
Capacity	34 Cu. Ft.
Product Dimensions (D x W x H)	32.5"D x 53"W x 45.5"H
Base Material	Alloy Steel
Top Material Type	Resin
Frame Material	Alloy Steel
Door Style	Single/Double Hinged Doors
Water Resistance Level	Water Resistant
Assembly Required	Yes

WHAT DO YOU WANT TO STORE?

	 PATIO ACCESSORIES	 LAWN CARE EQUIPMENT	 LONG HANDLED TOOLS	 FIREWOOD	 PUSH MOWER	 LADDERS	 PATIO FURNITURE	 WASTE CONTAINERS	 BICYCLES	 WHEEL BARROW	 RIDING MOWER
STORAGE SHED 	■	■	■	■	■	■	■	■	■	■	■
VERTICAL SHED 	■	■	■	■	■	■					
HORIZONTAL SHED 	■	■	■	■	■	■	■	■	■	■	■

This chart provides a visual guide to the storage capabilities of a horizontal shed compared to other shed types (storage shed, vertical shed) for common items like patio accessories, lawn care equipment, long-handled tools, firewood, mowers, ladders, patio furniture, waste containers, bicycles, wheelbarrows, and riding mowers. It indicates that the horizontal shed is suitable for a wide range of items.

Warranty Information

This CRAFTSMAN Horizontal Shed comes with a **10 Year Limited Warranty**.

CRAFTSMAN will repair or replace only the parts that failed under the terms of the warranty. In some cases, the replacement parts may not be identical, but they shall be of equal or greater performance than the original part. Proof of purchase may be required, such as the original dated store receipt. Evidence of failure may include photographs or returning failed components to CRAFTSMAN.

10 YEAR LIMITED* WARRANTY

WE BUILD PRIDE.™

* CRAFTSMAN® WILL REPAIR OR REPLACE ONLY THE PARTS THAT FAILED UNDER THE TERMS OF THE WARRANTY. IN SOME CASES, THE REPLACEMENT PARTS MAY NOT BE IDENTICAL, BUT THEY SHALL BE OF EQUAL OR GREATER PERFORMANCE THAN THE ORIGINAL PART. WE MAY REQUIRE PROOF OF PURCHASE. PROOF OF PURCHASE MAY BE THE ORIGINAL DATED STORE RECEIPT. WE MAY REQUIRE EVIDENCE OF THE FAILURE. EVIDENCE OF FAILURE MAY INCLUDE PHOTOGRAPHS OR RETURNING FAILED COMPONENTS TO CRAFTSMAN.

This image confirms the product's 10-year limited warranty, assuring customers of CRAFTSMAN's commitment to quality and support for their product.

Customer Support

For further assistance, missing parts, or warranty claims, please contact CRAFTSMAN customer support. Refer to your product packaging or the official CRAFTSMAN website for the most current contact information.