

[Manuals.plus](#) /

› [SANODESK](#) /

› SANODESK Electric Standing Desk 48x24 Inch Height Adjustable Stand Up Desk Instruction Manual

SANODESK Electric Standing Desk 48x24

SANODESK Electric Standing Desk 48x24 Inch Instruction Manual

Model: Electric Standing Desk 48x24 | Brand: SANODESK

INTRODUCTION

Thank you for choosing the SANODESK Electric Standing Desk. This manual provides essential information for the safe and efficient assembly, operation, and maintenance of your new desk. Please read all instructions carefully before use and retain this manual for future reference.



The SANODESK Electric Standing Desk provides a versatile workstation for home or office use.

SAFETY INFORMATION

- Ensure all components are securely fastened before use.
- Keep children and pets away from the desk during operation.
- Do not overload the desk. Refer to specifications for maximum weight capacity.
- Avoid placing liquids directly on the control panel or near electrical components.
- If any unusual sounds or movements occur, discontinue use and consult the troubleshooting section or contact support.

SETUP AND ASSEMBLY

The SANODESK Electric Standing Desk is designed for simple and quick assembly. Follow these general steps:

1. Unpack all components and verify against the parts list (not provided in this manual).
2. Attach the lifting columns to the desktop using the provided screws.
3. Secure the foot supports to the bottom of the lifting columns.
4. Connect the control box and motor cables according to the wiring diagram (refer to separate assembly guide if provided).
5. Place the control panel in its designated slot on the desktop.
6. Plug the power cord into a suitable electrical outlet.

| Simple Installation

Installation within 30 minutes



Designed for straightforward assembly, the desk can be set up efficiently.

OPERATING INSTRUCTIONS

Height Adjustment

The desk features an electric height adjustment system. Use the up and down arrow buttons on the control panel to adjust the desk height. The LED display will show the current height.



The intuitive control panel allows for easy height adjustments and saving preferred height settings.

Memory Presets

The control panel includes three preset buttons (1, 2, 3) to save and recall your preferred sitting and standing heights.

1. Adjust the desk to your desired height using the up/down arrows.
2. Press the 'M' button (or similar memory set button, if present) followed by the desired preset number (1, 2, or 3). The display will confirm the setting.
3. To recall a saved height, simply press the corresponding preset number button.

Sit-Stand Transition

Easily switch between sitting and standing positions to promote a healthier work routine. The desk's dual motors ensure a smooth and stable transition.

This video demonstrates the smooth and quiet electric height adjustment of the SANODESK standing desk, showcasing its transition from sitting to standing positions and highlighting its dual motor power for stable operation.

Height adjustment from 28.9-46.5"



The desk offers a wide height adjustment range from 28.9 to 46.5 inches, suitable for various user preferences and ergonomic needs.

KEY FEATURES

- **Ergonomic Workspace:** The spacious 48" x 24" adjustable desktop provides ample room for your setup.
- **Outstanding Stability:** Constructed with an industrial-grade steel frame for enhanced stability.
- **Silent Operation:** The desk operates quietly, with noise levels typically below 50dB.



The spacious desktop offers ample room for various work essentials, promoting an organized and ergonomic setup.

Silent and stable operation



The desk operates quietly, maintaining a noise level below 50dB for an undisturbed work environment.

MAINTENANCE

- **Cleaning:** Wipe the desktop and frame with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals.
- **Inspection:** Periodically check all screws and connections to ensure they are tight.
- **Cable Management:** Ensure cables are neatly managed to prevent interference with the desk's movement.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Desk does not move.	Power cable disconnected, motor error.	Check power connection. Unplug and replug the power cord.
Desk moves unevenly.	Overload, loose connections.	Reduce weight on the desk. Check and tighten all assembly screws.

Problem	Possible Cause	Solution
Error code on display.	Specific system fault.	Refer to the full user manual for specific error code meanings or contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	SANODESK
Product Dimensions	24"D x 48"W x 29"H (minimum height)
Color	Black Frame + Black Top
Style	Modern
Base Material	Alloy Steel
Top Material Type	Wood
Height Adjustment Range	28.9" to 46.5"
Assembly Required	Yes
UPC	840460486743

WARRANTY AND SUPPORT

SANODESK products are designed for durability and performance. For warranty information, technical support, or any inquiries regarding your Electric Standing Desk, please refer to the official SANODESK website or contact their customer service directly. Contact details are typically found on the product packaging or the brand's official online presence.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question