



[Manuals.plus](#) /

> [HOOBRO](#) /

> HOOBRO Narrow Console Table BF95UXG01 User Manual

HOOBRO BF95UXG01

HOOBRO Narrow Console Table BF95UXG01 User Manual

Model: BF95UXG01 | Brand: HOOBRO

1. INTRODUCTION

Thank you for choosing the HOOBRO Narrow Console Table BF95UXG01. This manual provides essential information for the safe assembly, operation, and maintenance of your new console table. Please read these instructions carefully before assembly and retain them for future reference.



Image 1.1: The HOOBRO Narrow Console Table BF95UXG01, showcasing its rustic brown top and black metal frame, with an integrated charging station and height adjustment mechanism.

2. SAFETY INSTRUCTIONS

To ensure safe use and prevent damage, please observe the following safety guidelines:

- **Read All Instructions:** Familiarize yourself with all assembly and usage instructions before proceeding.
- **Keep Children Away:** During assembly, keep small children and pets away from the work area. Small parts can be a choking hazard.
- **Use on Level Surface:** Assemble and place the table on a flat, stable, and level surface to prevent tipping.
- **Do Not Overload:** The maximum weight recommendation for this table is 44 pounds (20 kg). Do not exceed this limit.
- **Anti-Tip Kit:** Always install the included anti-tip kit to secure the table to a wall, especially if children are present. This prevents accidental tipping.
- **Electrical Safety:**
 - Ensure the power cord is not pinched or damaged.
 - Do not expose the charging station to moisture or liquids.

- Only use the charging station for devices within its specified voltage and current limits (AC outlets: 120V/12A, USB/Type-C: 5V/2A).
- Unplug the table from the power outlet when not in use or before cleaning.
- **Proper Tools:** Use only the tools specified in the assembly instructions.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact HOOBRO customer service.

- 1 x Console Table (Disassembled components)
- 1 x Charging Station (Pre-installed or separate unit)
- 1 x Accessory Kit (Screws, bolts, etc.)
- 1 x Anti-Tip Kit
- 1 x Instructions Manual

4. SETUP AND ASSEMBLY INSTRUCTIONS

Assembly of the HOOBRO Narrow Console Table BF95UXG01 is designed to be straightforward. Please follow the detailed instructions provided in the included manual. All necessary tools are supplied.

4.1. Tools Required

- Allen Key (Included)

4.2. Assembly Steps


1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Identify Parts:** Refer to the parts list in the included instruction manual to identify each component. Parts are clearly labeled.
3. **Assemble Frame:** Follow the step-by-step diagrams in the manual to connect the metal frame components using the provided screws and Allen key. Ensure all connections are secure but do not overtighten until fully assembled.
4. **Attach Tabletop:** Secure the rustic brown particleboard tabletop to the assembled frame.
5. **Install Charging Station:** If not pre-installed, carefully integrate the charging station into its designated slot on the tabletop and secure it.
6. **Attach Adjustable Feet:** Screw the four adjustable feet into the bottom of the table legs. These can be adjusted later to ensure stability on uneven floors.
7. **Install Anti-Tip Kit:** For safety, attach the anti-tip kit to the table and secure it to a wall stud using appropriate hardware. This is a critical step to prevent accidental tipping.



Stable Structure



Rustic Wooden Panel

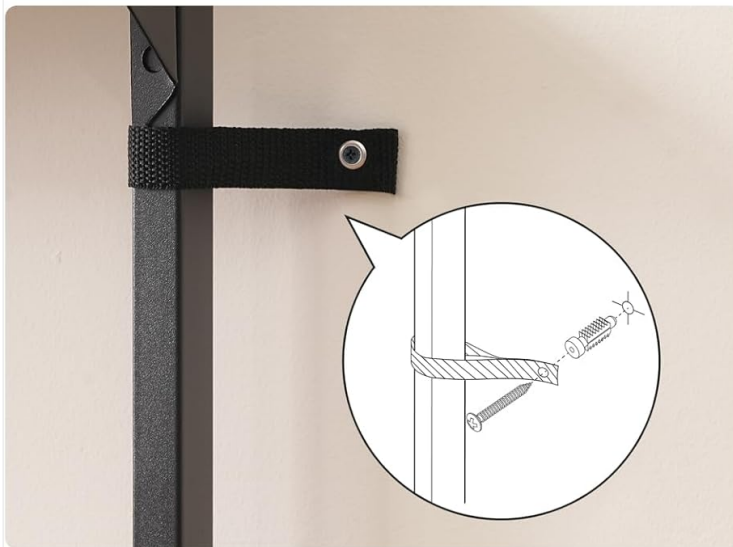

Anti-Tip Devices



Adjustable Feet

Image 4.1: Detailed view of the table's construction, highlighting the stable metal frame, rustic wooden panel, anti-tip device for wall mounting, and adjustable feet for leveling.

5. OPERATING INSTRUCTIONS

5.1. Adjustable Height Feature

The HOOBRO Narrow Console Table offers 5 adjustable height settings to suit various needs and environments.

- **Height Range:** The table height can be adjusted from 25 inches (63.5 cm) to 32.9 inches (83.5 cm).
- **Adjustment Mechanism:** To adjust the height, locate the adjustment knobs on the table legs. Loosen the knobs, slide the upper section of the legs to the desired height, and then securely tighten the knobs. Ensure both sides are adjusted to the same height for stability.



Image 5.1: Illustration of the 5-level adjustable height feature, showing the table adapting to different sofa heights, ranging from 25 inches to 32.9 inches.

5.2. Built-in Charging Station

The integrated charging station provides convenient power access for your electronic devices.

- **Power Outlets:** The charging station includes 2 standard AC outlets (120V/12A).
- **USB Ports:** It features 1 USB-A port (5V/2A) and 1 Type-C port (5V/2A) for charging smaller electronic devices.
- **Power Cord:** The table is equipped with a 6.5-foot (approximately 1.98 meters) power cord for ample reach to a wall outlet.
- **Usage:** Plug the table's power cord into a wall outlet. You can then plug in lamps, phones, tablets, and other compatible devices into the charging station.



Image 5.2: A detailed view of the charging station, showing the two AC outlets, one USB-A port, and one USB-C port, ready for device connection.

6. MAINTENANCE

Proper care will extend the life and appearance of your HOOBRO console table.

- **Cleaning:** Wipe the table surfaces with a dry, soft cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish.
- **Spills:** Immediately wipe up any spills to prevent staining or damage to the wood grain finish.
- **Tighten Fasteners:** Periodically check and tighten all screws and bolts to ensure the table remains stable.
- **Avoid Direct Sunlight/Heat:** Prolonged exposure to direct sunlight or heat sources can cause fading or warping.

7. TROUBLESHOOTING

If you encounter any issues with your console table, refer to the following common solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Table is wobbly/unstable.	Uneven floor; loose fasteners.	Adjust the leveling feet at the bottom of the legs. Ensure all assembly screws are tightened.
Charging station not working.	Power cord not plugged in; device not compatible; faulty outlet.	Ensure the table's power cord is securely plugged into a working wall outlet. Check device compatibility. Test the wall outlet with another appliance.
Difficulty adjusting height.	Adjustment knobs not fully loosened; obstruction.	Ensure the adjustment knobs on both legs are completely loosened before attempting to slide the legs. Check for any obstructions.

If the problem persists, please contact HOOBRO customer service for further assistance.

8. SPECIFICATIONS

Feature	Detail
Brand	HOOBRO
Model Name	Console Table
Model Number	BF95UXG01
Product Dimensions (D x W x H)	5.9"D x 39.4"W x 25"-32.9"H (Adjustable)
Item Weight	10.4 Pounds (4.7 kg)
Maximum Weight Recommendation	44 Pounds (20 kg)
Color	Rustic Brown + Black
Material Type	Engineered Wood, Metal
Number of Height Positions	5
Charging Station	2 AC Outlets (120V/12A), 1 USB Port (5V/2A), 1 Type-C Port (5V/2A)
Power Cord Length	6.5 feet (approx. 1.98 meters)
Product Care Instructions	Wipe with Dry Cloth
Assembly Tools Included	Yes (Allen Key)

9. WARRANTY AND SUPPORT

HOOBRO is committed to providing quality products. While specific warranty details are not provided in this manual, please retain your proof of purchase for any warranty claims.

For product support, missing parts, or troubleshooting assistance, please contact HOOBRO customer service through the retailer where the product was purchased or visit the official HOOBRO website.

HOOBRO Customer Service: [Visit the HOOBRO Store on Amazon](#)

