

[Manuals.plus](#) /

› [EagleStone](#) /

› EagleStone Kids Indoor Basketball Hoop Model ES74 Instruction Manual

EagleStone ES74

EagleStone Kids Indoor Basketball Hoop Model ES74 Instruction Manual

1. INTRODUCTION

Thank you for choosing the EagleStone Kids Indoor Basketball Hoop, Model ES74. This manual provides essential information for the safe and effective use of your new basketball toy. Designed for children, this portable and durable hoop offers an engaging way to develop motor skills, hand-eye coordination, and a love for physical activity. It features an electronic scoreboard with sound effects to enhance the playing experience.

2. COMPONENTS

Please ensure all components are present before assembly:

- Basketball Hoop Assembly (Backboard, Rim, Net)
- Mounting Hooks
- Mini Basketballs (4 included)
- Electronic Scoreboard (integrated)

Premium Quality Durable & Reliable



Reinforced Backboard



Stable Hook



Thick Padding



Strong Steel Rim

This image highlights the durable construction of the hoop, featuring a reinforced backboard for resilience, a stable hook for secure mounting, thick padding for protection and noise reduction, and a strong steel rim for realistic play.

3. SETUP AND INSTALLATION

The EagleStone basketball hoop is designed for quick and easy assembly and installation, making it portable for various locations.

1. **Unpack Components:** Carefully remove all items from the packaging.
2. **Attach Mounting Hooks:** Secure the provided mounting hooks to the top of the backboard. Ensure they are firmly attached.
3. **Select Location:** Choose a suitable location such as a door frame, a sturdy fence, or a wall. The hoop is designed for both indoor and outdoor use.
4. **Mount the Hoop:** Hang the hoop securely using the attached hooks over the chosen surface. Verify that the hoop is stable and does not wobble. The protective foam padding on the backboard helps reduce noise and protect surfaces.

5. **Prepare for Play:** Inflate the mini basketballs if necessary.

Various Play Ways



Door Frame



In Bed



Swimming Pool



Out Door

This image illustrates the versatility of the basketball hoop, showcasing its easy installation on a door frame, above a bed, near a swimming pool, or on an outdoor fence, highlighting its portability and adaptability to different play environments.

FOLD UP TO SAVE SPACE



This image illustrates the space-saving design of the hoop, showing it mounted on a door with an inset demonstrating how the rim can be folded upwards for compact storage when not in use.

4. OPERATING INSTRUCTIONS

The EagleStone basketball hoop is designed for interactive play with an electronic scoreboard.

- **Electronic Scoreboard:** The integrated electronic scoreboard automatically tracks points and plays exciting sounds when a basket is made. This feature encourages continuous play and provides immediate feedback.
- **Playing the Game:** Aim and shoot the mini basketballs into the hoop. The scoreboard will register each successful shot.
- **Spring-Loaded Rim:** The detachable rim features a spring design, allowing it to flex up to 60 degrees. This provides a more realistic basketball experience and reduces stress on the backboard during dunks or aggressive play.
- **Foldable Design:** For storage or when not in use, the rim can be folded upwards to save space.



This image shows a child actively engaging with the basketball hoop, demonstrating its use for shooting and scoring.



This image depicts a child and an adult enjoying a game of basketball outdoors, demonstrating the hoop's suitability for family fun and outdoor activity.

Parent & Child Play Challenge



This image shows a child and an adult playing basketball indoors, emphasizing the hoop's use for parent-child interaction and indoor recreational challenges.

5. MAINTENANCE

To ensure the longevity and optimal performance of your basketball hoop, follow these maintenance guidelines:

- **Cleaning:** Wipe the backboard and rim with a damp cloth to remove dust and dirt. Avoid using abrasive cleaners.
- **Net Care:** Periodically check the net for any tears or damage. Replace if necessary.
- **Storage:** When not in use, especially for extended periods, store the hoop in a dry place away from direct sunlight and extreme temperatures. Utilize the foldable rim feature to save space.
- **Battery Replacement:** If the electronic scoreboard sounds become faint or stop working, replace the batteries according to the instructions on the scoreboard unit (typically located on the back).


6. TROUBLESHOOTING

If you encounter any issues with your EagleStone basketball hoop, refer to the following common solutions:

- **Scoreboard Not Working:**
 - Check if batteries are correctly installed.
 - Replace old batteries with new ones.
 - Ensure the sensor is clear of obstructions.
- **Hoop Instability:**
 - Ensure mounting hooks are securely attached to the backboard and the chosen surface.
 - Verify that the surface (e.g., door, fence) is stable enough to support the hoop during play.
- **Rim Not Folding Smoothly:**
 - Check for any debris or obstruction in the folding mechanism.
 - Ensure the rim is properly aligned.

7. SPECIFICATIONS

Brand	EagleStone
Model Name	ES74
Material	Plastic
Color	Red (Foldable)
Product Dimensions	2.5D x 20.3W x 25.4H cm (approx. 15.37" W x 10.2" H for backboard)
Item Weight	1.5 Pounds
Indoor/Outdoor Use	Outdoor (also suitable for indoor use)
Special Feature	Portable, Foldable Rim, Electronic Scoreboard
Target Audience	Children
Included Components	Basketballs

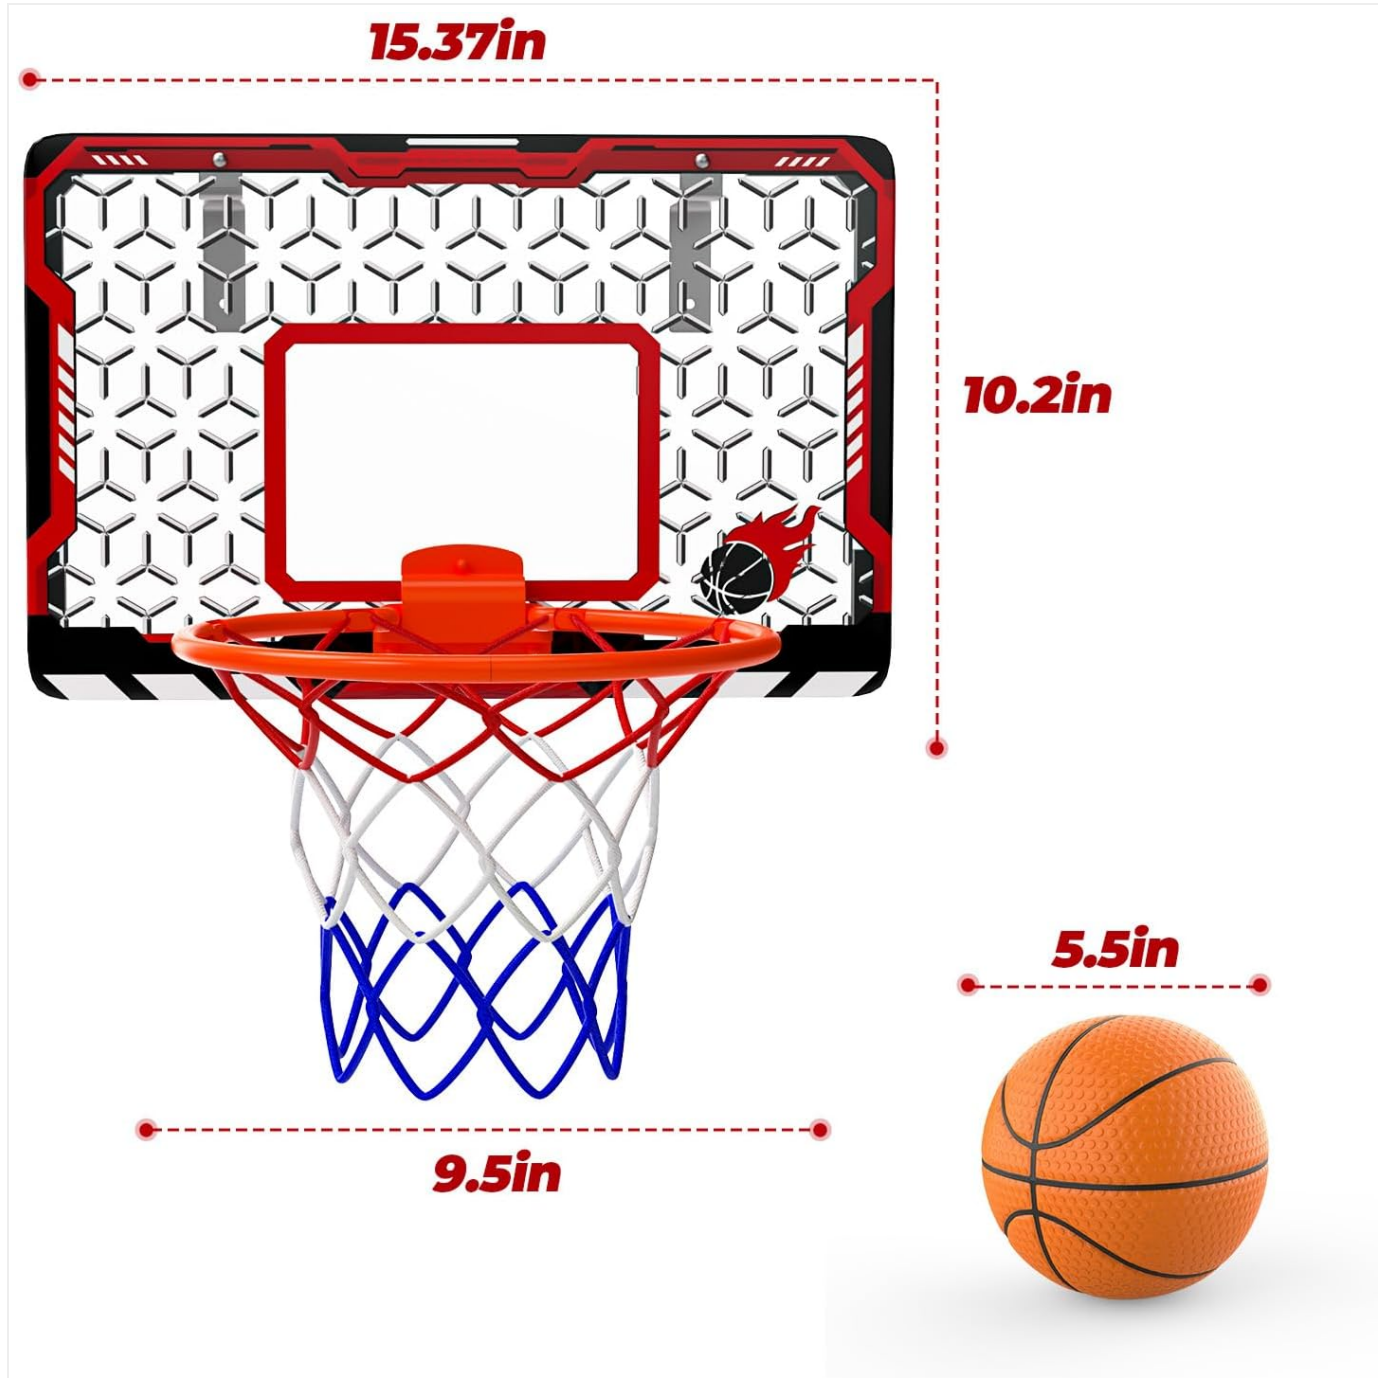

This diagram provides precise measurements for the basketball hoop's backboard (15.37 inches wide, 10.2 inches high) and the included basketball (5.5 inches diameter, 9.5 inches circumference), aiding in understanding the product's size.

8. SAFETY INFORMATION

Please read and follow these safety precautions to prevent injury and damage:

- **Adult Supervision:** Always ensure children are supervised by an adult during play.
- **Secure Mounting:** Ensure the hoop is securely mounted to a stable surface before use. Do not hang or swing on the rim.
- **Clear Play Area:** Keep the play area clear of obstacles and other people to prevent collisions.
- **Age Appropriateness:** This product is suitable for children aged 5-12 years.
- **Small Parts:** Keep small parts away from very young children to avoid choking hazards.

9. WARRANTY AND SUPPORT

EagleStone is committed to providing high-quality products. For any questions, concerns, or support needs regarding your basketball hoop, please contact our customer service. Details for contacting support are typically found on the product packaging or the retailer's website where the product was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question