

MZK ET2405-1110

MZK 23-Inch Electric Walk-Behind Snow Blower User Manual

Model: ET2405-1110

1. IMPORTANT SAFETY INFORMATION

Read and understand all safety warnings and instructions before operating this snow blower. Failure to follow these instructions may result in electric shock, fire, and/or serious injury.

- Always keep hands and feet away from rotating parts.
- Wear appropriate safety gear, including gloves and eye protection.
- Keep the snow blower clean and dry when not in use.
- Do not operate in enclosed spaces to avoid carbon monoxide risk.
- Ensure the power cord is always clear of the auger and discharge chute during operation.

2. PRODUCT OVERVIEW

The MZK Electric Walk-Behind Snow Blower is designed for efficient snow removal from driveways, walkways, and patios. It features a powerful 15-Amp motor and a durable rubber auger.



Figure 1: Front view of the MZK Electric Snow Blower, highlighting its compact design and LED headlights.

3. SETUP AND ASSEMBLY

Your MZK snow blower requires minimal assembly. Ensure all components are present before beginning.

1. **Handle Assembly:** Attach the upper handle to the lower handle using the provided knobs and bolts. Ensure the handle is securely fastened. The handle is height adjustable for user comfort.

2. **Chute Control Rod:** Connect the chute control rod to the discharge chute mechanism and the handle lever. This allows for 180-degree directional control of snow discharge.
3. **Power Connection:** This is a corded electric unit. Connect a suitable outdoor-rated extension cord (not included) to the snow blower's power inlet. Ensure the extension cord is rated for the 15-Amp motor.



Figure 2: Illustration of the height-adjustable handle for ergonomic operation.

4. OPERATING INSTRUCTIONS

Follow these steps for safe and effective snow removal.

1. **Pre-Operation Check:** Inspect the snow blower for any loose parts, damage, or obstructions in the auger housing or discharge chute. Ensure the power cord is in good condition.
2. **Starting the Unit:** Connect the snow blower to a power source. Press the safety button and then squeeze the operating lever to start the motor. The unit starts instantly without preheating.
3. **Snow Clearing:** Push the snow blower forward at a steady pace. The 22-inch clearing width and 13-inch clearing depth allow for efficient removal of light to moderate snowfall. The powerful 15-Amp motor ensures consistent performance.
4. **Directing Snow:** Use the 180-degree directional chute control to adjust the snow throwing direction. This allows for precise placement of snow, up to 30 feet away.
5. **Nighttime Operation:** The dual bright LED headlights provide increased visibility for snow removal tasks in low-light conditions.
6. **Stopping the Unit:** Release the operating lever to stop the motor. Disconnect the power cord from the outlet after use.

22" CLEARING WIDTH 13" CLEARING DEPTH



Figure 3: Demonstrating the 22-inch clearing width and 13-inch clearing depth.

MZK

**UP TO
30 FT
THROWING
DISTANCE**



Figure 4: The snow blower in action, demonstrating its 30-foot throwing distance.



MZX



**DUAL BRIGHT LED HEADLIGHTS
PROVIDE INCREASED VISIBILITY**

Figure 5: Dual bright LED headlights providing illumination during operation.



Figure 6: The 180-degree rotating chute for directing snow.

Your browser does not support the video tag.

Video 1: An introductory video showcasing the MZK Snow Blower's features and operation.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your snow blower.

- **Cleaning:** After each use, disconnect the power and clean any snow, ice, or debris from the auger housing, chute, and exterior surfaces. Use a damp cloth; do not use harsh chemicals.
- **Storage:** Store the snow blower in a clean, dry area. The foldable design allows for easy storage in compact spaces.
- **Auger Inspection:** Periodically inspect the durable rubber auger for wear or damage. Replace if necessary to maintain efficient snow clearing.

- **Cord Inspection:** Regularly check the power cord and extension cord for cuts, fraying, or damage. Replace damaged cords immediately.



Figure 7: The snow blower's foldable design for convenient storage.

6. TROUBLESHOOTING

If you encounter issues with your snow blower, refer to the following common troubleshooting steps.

Problem	Possible Cause	Solution
Snow blower does not start	No power; safety button not pressed; operating lever not engaged.	Check power connection; ensure safety button is pressed before engaging lever.
Reduced snow throwing distance	Clogged chute; worn auger; wet, heavy snow.	Clear chute (after disconnecting power); inspect auger; adjust pace for heavy snow.

Problem	Possible Cause	Solution
Excessive vibration	Loose components; damaged auger.	Check for loose fasteners; inspect auger for damage.

If problems persist, contact MZK customer support for assistance.

7. SPECIFICATIONS

Feature	Detail
Brand	MZK
Model Number	ET2405-1110
Power Source	AC Electric (Corded)
Motor	15-Amp
Clearing Width	22 Inches
Clearing Depth	13 Inches
Throwing Distance	Up to 30 Feet
Chute Rotation	180 Degrees
Auger Type	Durable Rubber
Product Dimensions	38"D x 22"W x 49"H
Color	Black, Red

8. WARRANTY AND SUPPORT

For warranty information, technical support, or to order replacement parts, please contact MZK customer service. Refer to your product packaging or the official MZK website for the most current contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question