

[Manuals.plus](#) /

› [BUXFMHT](#) /

› BUXFMHT Mini Portable Electric Sewing Machine 705 Instruction Manual

BUXFMHT 705

BUXFMHT Mini Portable Electric Sewing Machine 705

Instruction Manual

1. INTRODUCTION

Thank you for choosing the BUXFMHT Mini Portable Electric Sewing Machine 705. This compact and versatile sewing machine is designed for various sewing projects, offering 12 built-in stitch patterns, an LED light, and an extension table for enhanced functionality. This manual provides essential information for safe operation, setup, maintenance, and troubleshooting to ensure optimal performance and longevity of your machine.



Image: BUXFMHT Sewing Machine 705, designed for beginners with 12 stitch modes, reverse stitch, speed adjustment, buttonhole, and built-in light.

SEWING MACHINE FOR BEGINNERS

Machine-705 BUXFMHT

Multi-functional electric sewing machine
Meet all the needs of the daily household

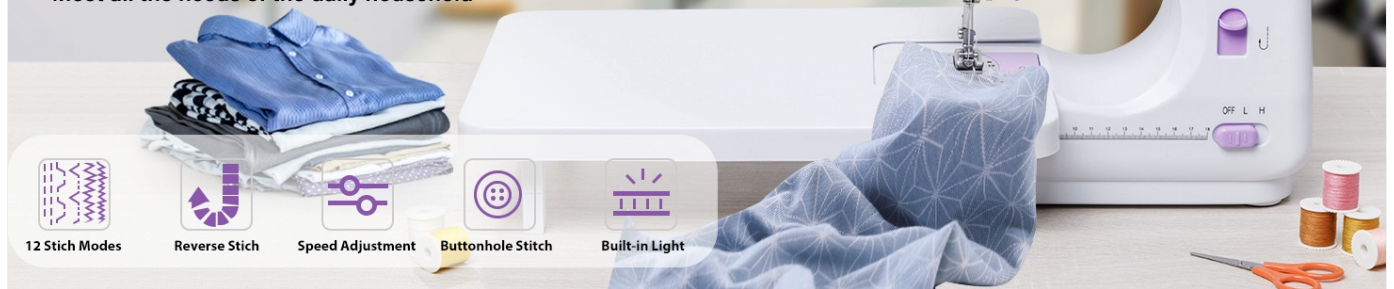 


Image: The BUXFMHT Sewing Machine 705 shown with its extension table, highlighting features such as sewing up to 5 layers of fabric, a storage drawer, LED light, anti-skid base pad, and battery power option.

2. PRODUCT COMPONENTS

Familiarize yourself with the various parts of your sewing machine:



Jeans



Pillow



Children's clothes



Skirt



Purchase bag



Briefcase



Tablecloths



Munecas

Image: Top view of the sewing machine with labels for Take-up Lever, Upper Thread Tension Dial, Pattern Selection Dial, Hand Wheel, Reverse Sewing Button, Bottom Bobbin, LED Light, Cutter, and Power Off & Speed Switch.

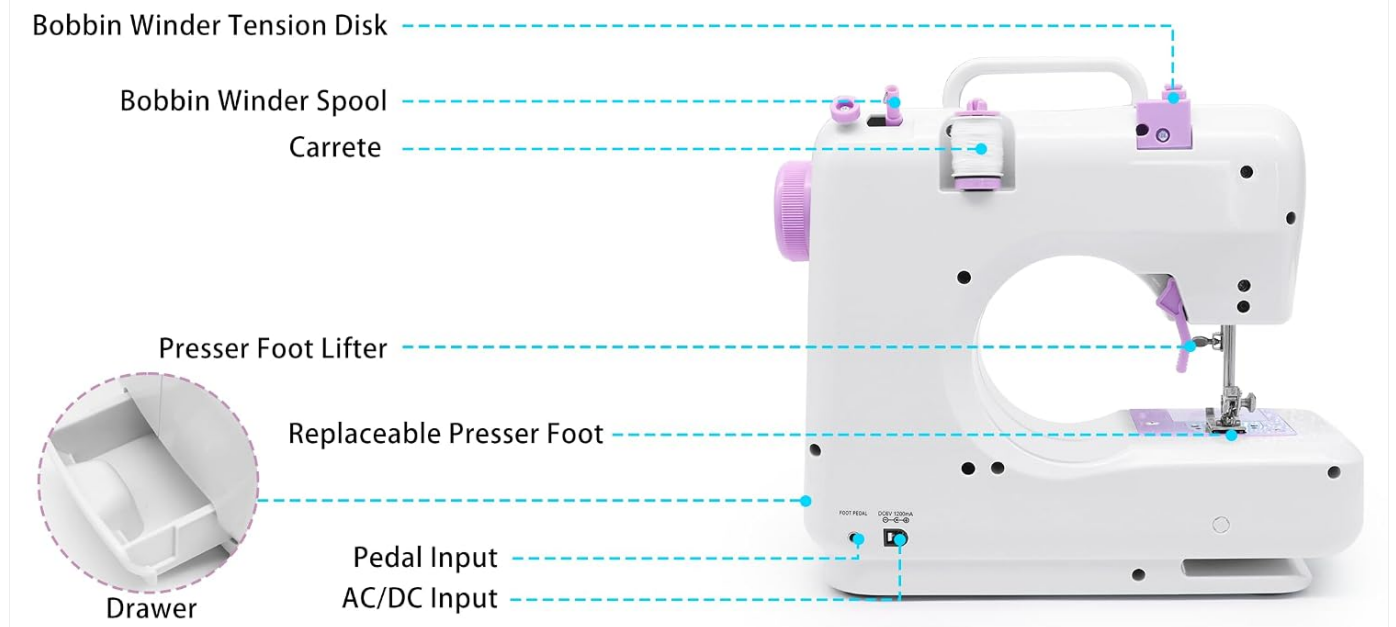 
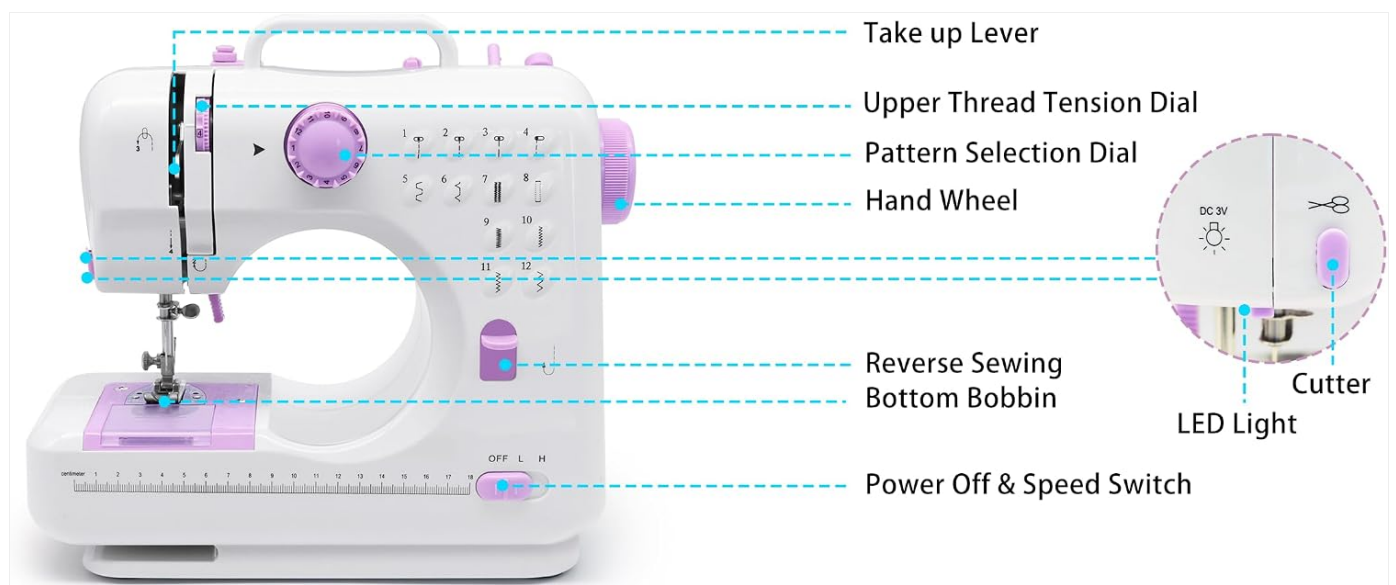 


Image: Side view of the sewing machine with labels for Bobbin Winder Tension Disk, Bobbin Winder Spool, Presser Foot Lifter, Replaceable Presser Foot, Pedal Input, AC/DC Input, and Drawer.



Image: Detailed view of the sewing machine demonstrating double thread stitching, replaceable presser feet, and capabilities for sewing buttonholes and buttons.

Set 5

Use the foot pedal or button to start the sewing machine



Image: Features of the sewing machine including replaceable sewing needles, convenient storage drawers, its portable design, and integrated tangential thread knives.

3. SETUP

3.1 Powering the Machine

The sewing machine can be powered by either the included AC/DC power adapter or 4 AA batteries (not included). Ensure the power switch is in the "OFF" position before connecting power. Do not use both power sources simultaneously.



Image: The sewing machine demonstrating its power options (AC adapter or 4 AA batteries) and the attachment of the original expansion table.

3.2 Attaching the Extension Table

Align the pins on the extension table with the corresponding holes on the sewing machine and gently push to secure it. This provides a larger working surface for your projects.

3.3 Threading the Machine

Correct threading is crucial for proper operation. Follow these steps carefully:

1. **Upper Threading:** Follow the numbered guides on the machine for the upper thread path. Ensure the thread passes through the take-up lever and needle eye correctly.
2. **Bobbin Winding:** Place an empty bobbin on the bobbin winder spool. Guide the thread from the spool pin through the bobbin winder tension disk and onto the bobbin. Start the machine briefly to wind the bobbin.

3. **Lower Bobbin:** Insert the wound bobbin into the bobbin case located under the needle plate. Ensure the thread is correctly positioned in the tension spring.



Image: Step-by-step guide (Set 1) illustrating the correct threading path for the BUXFMHT Sewing Machine 705, emphasizing the importance of not missing any steps.

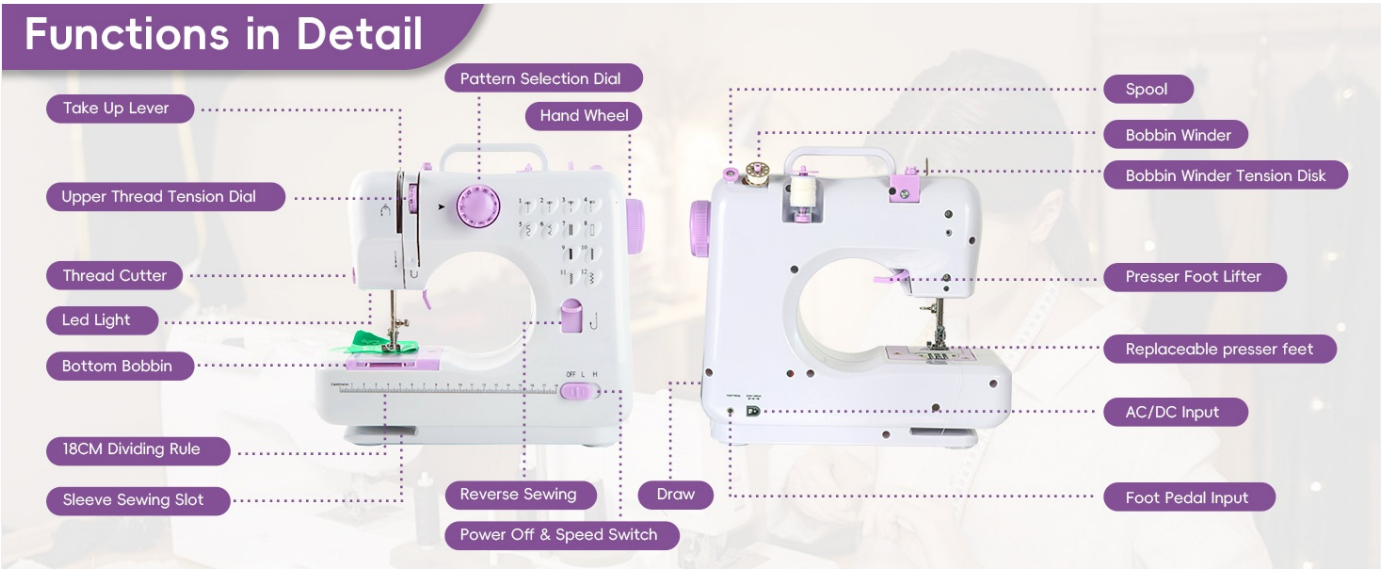 


Image: Instructions (Set 3) on winding the handwheel and threading the bottom thread before powering on the machine.

4. OPERATING INSTRUCTIONS

4.1 Selecting Stitch Patterns

Your machine offers 12 built-in stitch patterns. Turn the Pattern Selection Dial to choose the desired stitch. Refer to the stitch pattern guide on the machine for visual reference.

Sewing Machine Kit



Image: Instructions (Set 2) on how to twist the gear knob to select the appropriate stitch pattern on the sewing machine.



Image: Display of the 12 built-in stitch patterns available on the BUXFMHT Sewing Machine 705, including twisted stitch modes (#9-#12) and button modes (#7-#8), and how they appear on fabric.

4.2 Adjusting Thread Tension

Before sewing, adjust the tightness of the upper thread using the Upper Thread Tension Dial. Incorrect tension can lead to thread breakage or uneven stitches.

Functions in Detail

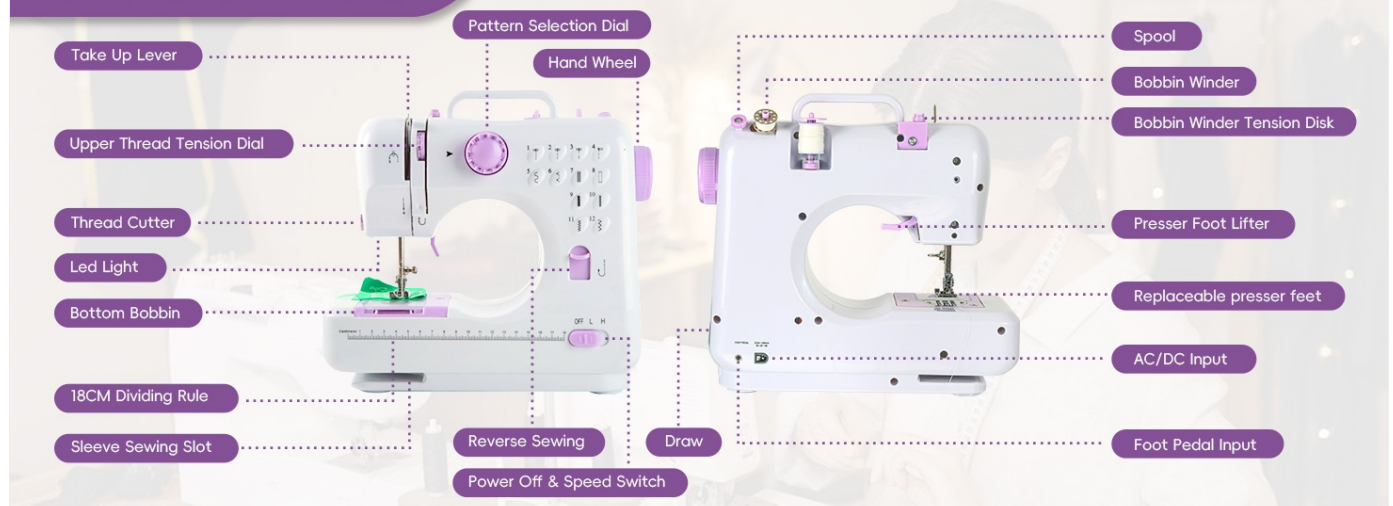 


Image: Instructions (Set 4) on adjusting the tightness of the thread before sewing to prevent breakage and ensure proper stitch formation.

4.3 Speed Control and Reverse Sewing

Use the Power Off & Speed Switch to select between low (L) and high (H) sewing speeds. The reverse sewing button allows you to reinforce stitches at the beginning and end of seams.

Set 3

Before turning on the power please wind the handwheel and thread the bottom thread according to the steps

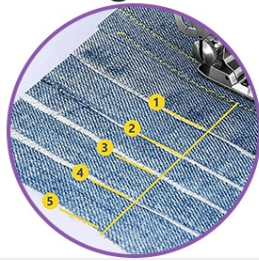 


Image: Features including the backstitch function, fast/slow speed control, cylinder sewing capability, and the integrated floodlight (LED light).

4.4 Starting and Stopping

You can operate the machine using either the foot pedal or the button switch on the machine. Press the foot pedal or slide the button switch to start sewing. Release or slide back to stop.

Functions in Detail

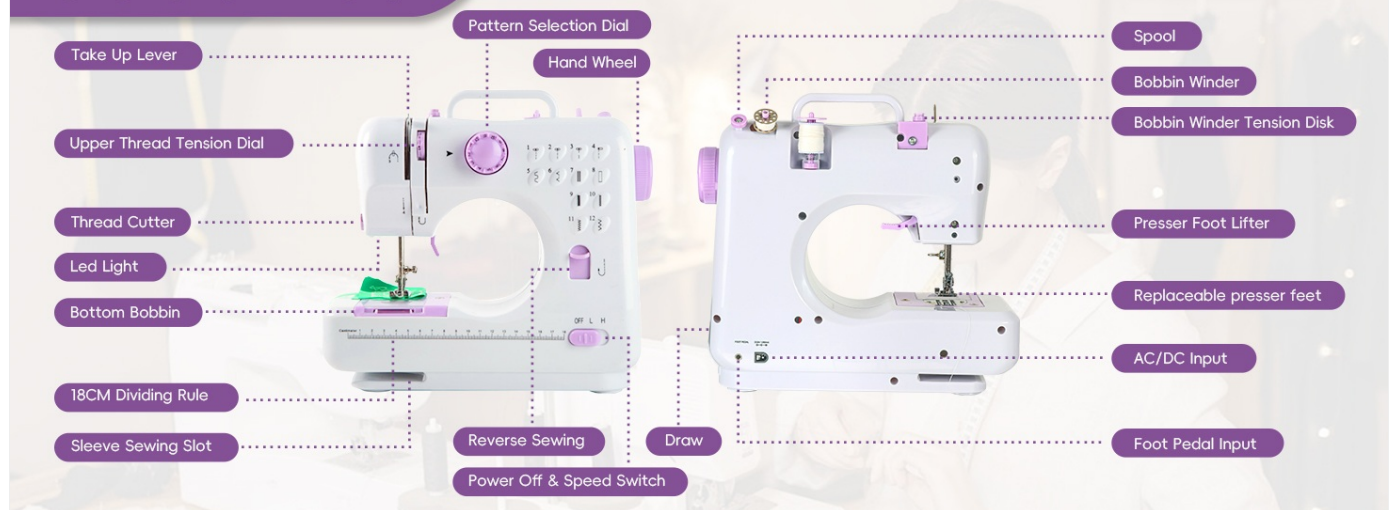 


Image: Instructions (Set 5) showing the option to use either the foot pedal or the button switch to start the sewing machine.

4.5 Finishing a Seam

Once your seam is complete, lift the presser foot, pull the fabric away, and use the integrated thread cutter or a pair of scissors to trim the threads.

Functions in Detail

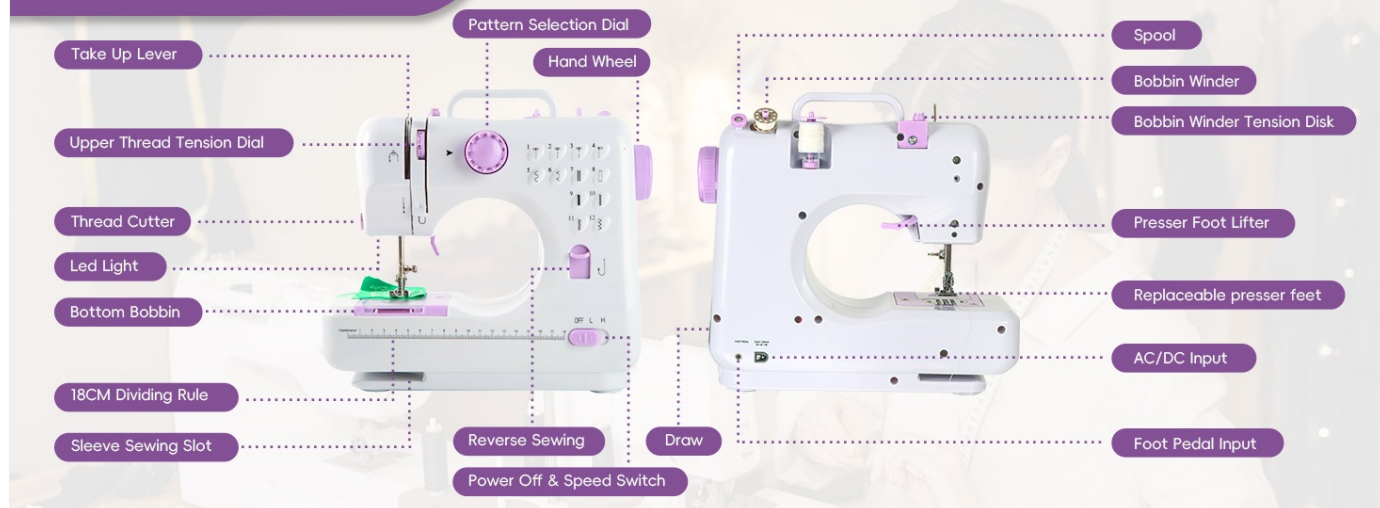 


Image: Instructions (Set 6) on how to remove excess thread after sewing, using either the built-in thread cutter or complimentary scissors.

5. MAINTENANCE

5.1 Cleaning

Regularly clean lint and dust from the bobbin area and feed dogs using a small brush. Ensure the machine is unplugged before cleaning.

5.2 Needle Replacement

Replace the needle regularly, especially if it becomes bent, dull, or if you are experiencing skipped stitches. Always use the correct needle type and size for your fabric.

5.3 Storage

When not in use, store the machine in a dry, dust-free environment. The compact design and storage drawers make it easy to keep accessories organized.

6. TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

- **Thread Breaking:** Check if the thread is correctly tensioned (refer to section 4.2). Ensure the needle is not bent or dull and is inserted correctly. Verify the thread path is clear and not snagged.
- **Skipped Stitches:** Replace the needle with a new one. Ensure the needle is inserted fully and correctly. Check that the fabric is properly placed under the presser foot.
- **Bottom Thread Tangling:** This often indicates incorrect bobbin threading or tension. Re-thread the bobbin carefully, ensuring it sits correctly in its case and the thread is properly guided. Adjust upper thread tension if necessary.
- **Machine Not Starting:** Ensure the power adapter is securely connected or that fresh batteries are installed. Check that the power switch is in the 'ON' position.
- **Reverse Sewing Malfunction:** Ensure the reverse sewing button is fully engaged. If the issue persists, re-check threading and needle condition.

For further assistance, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Model Number	705
Product Dimensions	7.3"D x 14.7"W x 12"H (11.81 x 3.94 x 3.94 inches)
Item Weight	6 Pounds
Power Source	AC Adapter or 4*AA Batteries
Material	Acrylonitrile Butadiene Styrene (ABS)
Stitch Patterns	12 Built-in
Special Features	LED Light, Extension Table, Double Thread, Two Speed, Automatic Rewind, Reverse Sewing, Thread Cutter, Storage Drawer
UPC	727370275974

8. WARRANTY & SUPPORT

Your BUXFMHT Mini Portable Electric Sewing Machine 705 comes with a **12-month quality guarantee** from the date of purchase. This warranty covers manufacturing defects under normal use.

If you have any questions, require technical assistance, or need to claim warranty service, please do not hesitate to contact BUXFMHT customer support. We are committed to resolving any issues within 24 hours.

For support, please visit the [BUXFMHT Store on Amazon](#) or refer to the contact information provided with your purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question