



Manuals.plus /

› Genérico /

› SJGAM Retro Console Pro User Manual

Genérico Retro Console Pro

SJGAM Retro Console Pro User Manual

Model: Retro Console Pro

INTRODUCTION

Welcome to the SJGAM Retro Console Pro user manual. This guide provides essential information for setting up, operating, and maintaining your new retro gaming console. The console features 23 emulators and over 20,000 pre-installed video games, offering a vast library of classic entertainment.

Please read this manual carefully before using the product to ensure proper functionality and to maximize your gaming experience.

PACKAGE CONTENTS

Ensure all items listed below are present in your package:

- Game Stick 4K Console (Retro Console Pro)
- 2 White Wireless Controllers
- 64GB Micro SD memory card (pre-inserted in the stick)
- USB Power Cable
- HDMI Cable
- USB Connector Receiver Signal for Controllers
- User Manual (this document)



Image: Included accessories for the SJGAM Retro Console Pro.

SETUP INSTRUCTIONS

Follow these steps to set up your SJGAM Retro Console Pro:



Image: Visual setup guide for the console.

1. **Insert Micro SD Card:** Ensure the 64GB Micro SD card is securely inserted into the console. It is typically pre-inserted from the factory.

ZONA
OUTLET

INSTRUCCIONES DE MONTAJE ¡SÚPER FÁCIL!



Tarjeta micro SD de 64GB
(Insertada de fábrica)



Introducir adaptador USB Wireless
(da señal de los mandos)



Enchufar parte pequeña cable USB
(da electricidad a la consola)



Enchufar cable HDMI a la consola
y a una salida HDMI de la TV



Enchufar parte ancha cable USB una salida
USB de la TV o a un cargador de móvil



Poner 2 pilas AAA , poner botón en ON
Seleccionar canal HDMI de la TV y ¡a jugar!

Image: Micro SD card inserted into the console.

2. **Insert USB Wireless Adapter:** Plug the USB wireless adapter into the USB port on the console. This adapter provides the signal for the wireless controllers.



Image: USB wireless adapter connected to the console.

3. **Connect USB Power Cable:** Connect the small end of the USB power cable to the console's power input.
4. **Connect HDMI Cable:** Plug one end of the HDMI cable into the console and the other end into an available HDMI input on your television or monitor.
5. **Connect Power Source:** Connect the wider end of the USB power cable to a USB output on your TV or a compatible mobile charger (5V/1A or 5V/2A recommended).
6. **Prepare Controllers:** Open the battery compartment on each wireless controller and insert 2 AAA batteries (not included), ensuring correct polarity. Close the compartment.
7. **Power On and Select Input:** Turn on your television and select the corresponding HDMI input channel where the console is connected. Turn on the wireless controllers.

Your console is now ready for use.

OPERATING INSTRUCTIONS

Starting a Game

Once the console is set up and powered on, the main menu will appear on your screen. You can navigate through the game library using the wireless controllers.

- Use the directional pad or analog stick to browse through the list of emulators and games.
- Press the **A** button (or equivalent action button) to select an emulator or game.
- To exit a game and return to the main menu, consult the in-game menu options or controller shortcuts (often a combination of **SELECT** and **START** buttons).

Saving and Loading Games

The console supports saving and resuming games. Specific instructions for saving and loading may vary slightly between emulators, but generally, you can:

- Access the in-game menu (often by pressing a specific button combination on the controller, such as **SELECT + START** simultaneously).
- Look for options like "Save State" or "Load State" to save your progress at any point, or "Save Game" to use the game's internal save feature.

Multiplayer Gaming

The SJGAM Retro Console Pro includes two wireless controllers, allowing for multiplayer gaming on supported titles.

- Ensure both controllers have fresh batteries and are powered on.
- Most games that support two players will automatically detect the second controller once it's active.



Image: Front view of a wireless controller.



Image: Side view of a wireless controller.

MAINTENANCE

Proper care and maintenance will extend the life of your SJGAM Retro Console Pro:

- **Cleaning:** Use a soft, dry cloth to clean the console and controllers. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the console and accessories in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Remove batteries from the wireless controllers if they will not be used for an extended period to prevent leakage.
- **Handling:** Avoid dropping the console or controllers, and do not expose them to water or excessive moisture.

TROUBLESHOOTING

If you encounter issues with your console, refer to the following common solutions:

- **No Power/No Display:**

- Ensure the USB power cable is securely connected to both the console and a working power source (TV USB port or wall adapter).
- Verify the HDMI cable is firmly connected to both the console and the TV.
- Check that your TV is set to the correct HDMI input channel.
- Try a different USB power source or HDMI port on your TV.

- **Controllers Not Responding:**

- Check if the controllers have fresh AAA batteries and are inserted with correct polarity.
- Ensure the USB wireless adapter is properly plugged into the console.
- Make sure the controllers are powered on (check for an ON/OFF switch or button).
- Try re-pairing the controllers if applicable (refer to specific controller instructions if provided separately).

- **Games Not Loading/Freezing:**

- Ensure the 64GB Micro SD card is correctly inserted and not damaged.
- Restart the console by unplugging and replugging the power cable.
- Some games may have specific requirements or known issues; try other games to see if the problem is isolated.

If problems persist, contact customer support.

TECHNICAL SPECIFICATIONS

Feature	Detail
Model	Retro Console Pro
CPU	Cortex-A7 Dual Core, up to 1.0 GHz
RAM	DDRIII 256 MB
Storage	64GB Micro SD (expandable up to 128GB TF)
Emulators	23 Emulators
Pre-installed Games	Over 20,000
Wireless Connection	2.4 GHz, range 8-10 meters
Video Output	HDMI 4K Ultra HD (Supports 1080P/720P)
Input Voltage	5V/1A/2A/0.5A
Controller Power	2 x AAA batteries per controller (not included)
Product Dimensions	16.6 x 11 x 12 cm
Item Weight	420 g
Manufacturer	FKM

WARRANTY AND SUPPORT

Information regarding specific warranty terms and customer support contact details is not available in the provided product data. Please refer to the product packaging or the retailer's website for warranty information and support contacts.

