

Oneach AMZ-F1244WT-RC

Oneach Boho Floor Lamp Instruction Manual

Model: AMZ-F1244WT-RC

1. SAFETY INFORMATION

- Ensure the lamp is unplugged before assembly, cleaning, or replacing the bulb.
- Do not exceed the maximum wattage specified for the bulb (Max 60W or Max 9W LED).
- Place the lamp on a stable, level surface to prevent tipping.
- Keep the lamp away from water and moisture.
- Do not use harsh chemicals or abrasive cleaners on the lamp.
- Keep out of reach of children and pets.

2. PACKAGE CONTENTS

Verify that all components are present before beginning assembly.



Figure 2.1: Included Components

- Lamp Base
- Lamp Body (multiple sections)
- Lamp Shade (Rattan)
- Remote Control

- E26 Smart Dimmable Bulb
- Convenient Foot Switch
- Instruction Manual

3. SETUP AND ASSEMBLY

Follow these steps to assemble your Oneach Boho Floor Lamp. Assembly typically takes less than 10 minutes.



Figure 3.1: Assembly Steps

1. **Attach the Lamp Base:** Carefully insert the first section of the lamp body into the lamp base. Rotate clockwise until securely tightened. Ensure the power cord passes through the center of the base.
2. **Assemble the Lamp Body:** Connect the remaining sections of the lamp body one by one, rotating each section clockwise until firmly connected. Guide the power cord through each section as you assemble.
3. **Install the Lampshade:** Once the lamp body is fully assembled, locate the plastic ring on the lamp holder. Unscrew this ring, place the rattan lampshade over the lamp holder, and then screw the plastic ring back on to secure the lampshade.
4. **Insert the Light Bulb:** Screw the provided E26 smart dimmable bulb into the lamp socket.
5. **Connect to Power:** Plug the lamp's power cord into a standard electrical outlet.

4. OPERATING INSTRUCTIONS

Your Oneach Boho Floor Lamp can be operated using the included remote control or the integrated foot switch.

4.1 Remote Control Functions

The remote control offers comprehensive control over the lamp's settings. Ensure 2 AAA batteries (not included) are installed in the remote.



Figure 4.1: Remote Control and Dimmable Bulb

- **On/Off:** Press the power button to turn the lamp on or off.
- **Brightness Adjustment (1%-100%):** Use the brightness increase (+) and decrease (-) buttons to adjust the light intensity.
- **Color Temperature Adjustment (3000K-6000K):** Use the color temperature increase (K+) and decrease (K-) buttons to cycle through warm white (3000K), natural white (4000K), and cool white (6000K) settings.
- **Pre-set Modes:** The remote includes buttons for various scene modes such as Read, Nursery, Work, and Night Light.
- **Timer Setting:** Press the '1H' button to activate a 1-hour timer, after which the lamp will automatically turn off.
- **Memory Function:** The lamp will remember the last brightness and color temperature setting used when turned back on.

4.2 Foot Switch Operation

The lamp also features a convenient foot switch located on the power cord for basic on/off control.

- **On/Off:** Press the foot switch to toggle the lamp on or off.

5. MAINTENANCE

- **Cleaning:** Disconnect the power before cleaning. Wipe the metal parts with a soft, dry cloth. For the rattan shade, gently dust with a soft brush or cloth. Do not use liquid cleaners or sprays directly on the lamp.

- **Bulb Replacement:** Ensure the lamp is unplugged and the bulb has cooled before attempting to replace it. Use only E26 base bulbs, not exceeding 60W incandescent or 9W LED.
- **Storage:** If storing the lamp, disassemble it carefully and store in its original packaging in a dry place to protect components.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on.	No power connection.	Check if the power cord is securely plugged into a working outlet.
	Bulb is loose or faulty.	Tighten the bulb or replace it with a new E26 bulb.
	Foot switch or remote control issue.	Ensure the foot switch is pressed. For remote, check batteries and ensure line of sight.
Remote control not working.	Batteries are dead or incorrectly inserted.	Replace batteries (2 AAA) and ensure correct polarity.
	Obstruction between remote and lamp.	Ensure there is a clear path between the remote and the lamp's receiver.
Brightness or color temperature not adjusting.	Remote control issue.	Refer to remote control troubleshooting steps above.

7. SPECIFICATIONS

- **Model Number:** AMZ-F1244WT-RC
- **Product Dimensions:** 21"D x 13"W x 62.5"H
- **Lamp Type:** Floor Lamp
- **Style:** Walnut wood-Remote
- **Brand:** Oneach
- **Color:** Remote Control - Walnut with Woven Lampshade
- **Special Feature:** Corded, Dimmable, 3 Color Temperatures, Remote Control, Foot Switch
- **Light Source Type:** LED (E26 Smart Dimmable Bulb included)
- **Max Wattage:** 60W (incandescent) or 9W (LED)
- **Material:** Metal, Rattan
- **Item Weight:** 11.36 pounds
- **Batteries Required for Remote:** 2 x AAA (not included)

8. WARRANTY AND SUPPORT

This Oneach floor lamp comes with a 1-year after-sale warranty. For any product concerns or support, please contact Oneach customer service.

Additional protection plans may be available for purchase:

- 3-Year Protection Plan
- 4-Year Protection Plan
- Complete Protect (monthly plan)

