

[Manuals.plus](#) /

› [Roxy](#) /

› ROXY 10x10 Pop Up Canopy Instruction Manual, Model 614821-1NS

Roxy 614821-1NS

ROXY 10x10 Pop Up Canopy Instruction Manual

Model: 614821-1NS

1. INTRODUCTION

Thank you for choosing the ROXY 10x10 Pop Up Canopy. This canopy is designed to provide portable shade and shelter for various outdoor activities, including beach trips, tailgates, festivals, and camping. It features UPF 50+ fabric for sun protection and a water-resistant design for durability. This manual provides essential information for safe and efficient setup, operation, and maintenance of your canopy.



Image 1.1: The ROXY 10x10 Pop Up Canopy in Teal, fully assembled.

2. SAFETY INFORMATION

While no specific safety warnings are applicable to this product beyond general outdoor equipment use, please observe the following precautions:

- Always secure the canopy with the provided stakes and guy lines to prevent wind displacement.
- Do not use the canopy in severe weather conditions, including strong winds, heavy rain, or lightning.
- Keep all flame and heat sources away from the canopy fabric.
- Ensure all locking mechanisms are fully engaged during setup to prevent collapse.
- Supervise children around the canopy to prevent accidents.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Canopy Top (Fabric)
- Steel Frame (Pre-assembled)

- 8 Stakes
- 4 Guy Lines
- Wheeled Carry Bag

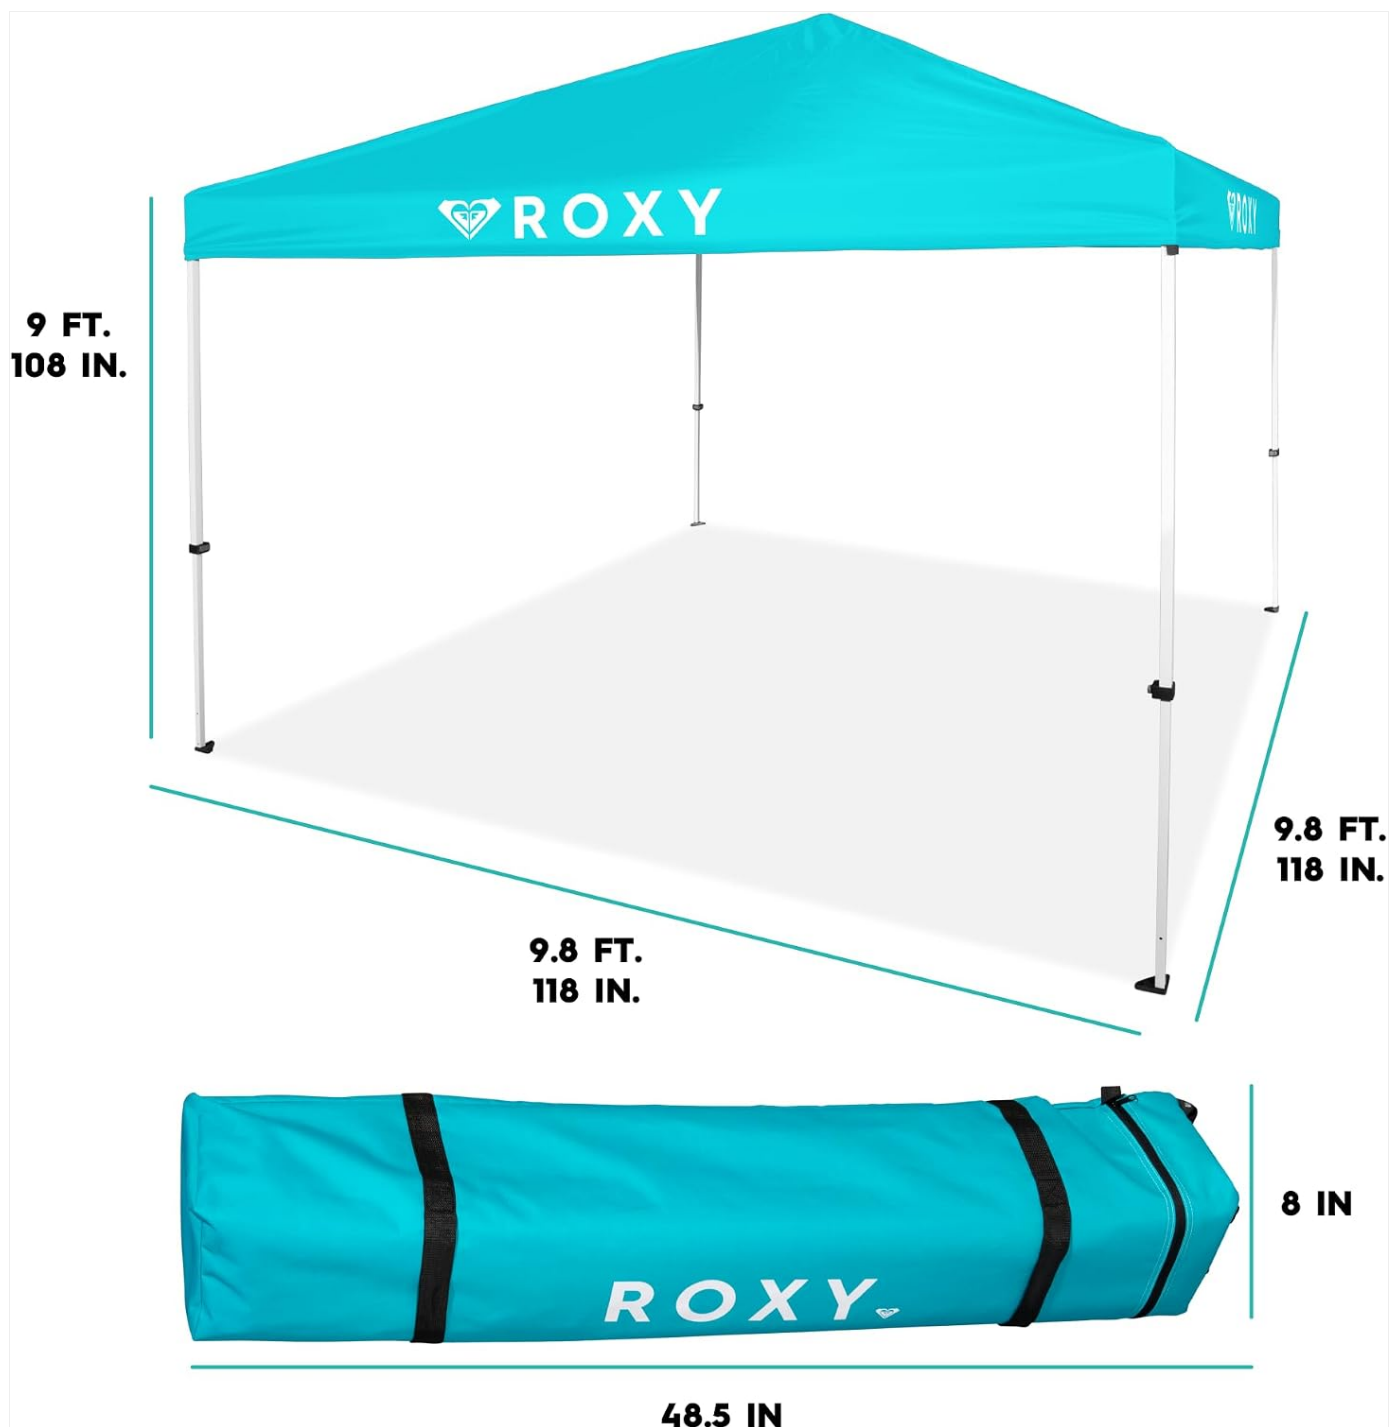


Image 3.1: All components included with the ROXY 10x10 Pop Up Canopy.

4. SETUP INSTRUCTIONS

The ROXY 10x10 Pop Up Canopy features a one-button setup for quick assembly. While one person can set it up, two people are recommended for easier handling.

1. **Step 1: Open the Canopy Frame.** Remove the frame from the wheeled carry bag. With a partner, gently pull the legs of the frame outwards until it is partially open.
2. **Step 2: Attach the Canopy Top.** Drape the canopy fabric over the partially opened frame, ensuring the ROXY logo is correctly oriented. Secure the corners of the fabric to the frame.

3. **Step 3: Push the Central Button.** Locate the central hub mechanism underneath the canopy. Push upwards on the central button until the frame fully extends and locks into place. This action will raise the canopy roof.
4. **Step 4: Adjust the Height.** Extend each leg to the desired height by pressing the no-pinch buttons and sliding the inner leg section downwards until it locks. Ensure all four legs are at the same height.
5. **Step 5: Secure with Stakes and Guy Lines.** Use the provided stakes to anchor each leg to the ground. For added stability, attach the guy lines to the canopy corners and stake them into the ground at an angle.

ONE BUTTON SETUP



1 BUTTON

+



1 PERSON

+



1 MINUTE



► STEP 1

OPEN THE CANOPY



STEP 2 ◀

PUSH THE CENTRAL BUTTON



► STEP 3

ADJUST THE HEIGHT



Secure canopy with stakes

Image 4.1: Visual guide for the one-button setup process.



Image 4.2: Detail of the central hub for easy canopy extension.

5. OPERATING INSTRUCTIONS (USAGE)

Your ROXY 10x10 Pop Up Canopy is designed for ease of use and provides reliable outdoor shelter.

- **Sun Protection:** The canopy fabric offers UPF 50+ protection, blocking over 98% of harmful UV rays. This helps keep you cool and protected during sunny conditions.
- **Water Resistance:** The material is water-resistant, providing protection from light rain. In heavy rain, it is advisable to take down the canopy to prevent water accumulation and potential damage.

- **Ventilation:** The open design allows for good airflow, enhancing comfort.
- **Capacity:** The 10x10 ft area comfortably accommodates 3-5 people.

QUICK AND EASY STORAGE ON THE GO

Rugged, wheeled carrying case makes transport a breeze



BEACH



PARTY



CAMPING



TAIL GATE



PARK



Image 5.1: Key features of the ROXY Pop Up Canopy.

6. CARE AND MAINTENANCE

Proper care will extend the life of your canopy:

- **Cleaning:** Clean the canopy fabric with mild soap and water. Do not use harsh chemicals or abrasive cleaners. Allow the fabric to air dry completely before storing to prevent mildew.
- **Frame Care:** Wipe down the metal frame with a damp cloth to remove dirt or sand. Ensure the frame is dry before folding and storing.
- **Storage:** Always store the canopy in its wheeled carry bag in a cool, dry place, away from direct sunlight and extreme temperatures.

- **Inspection:** Periodically inspect the frame, fabric, stakes, and guy lines for any signs of wear or damage. Replace damaged components as needed.



Image 6.1: The wheeled carry bag facilitates easy transport and storage.

7. TROUBLESHOOTING

Here are solutions to common issues you might encounter:

Problem	Possible Cause / Solution
Canopy difficult to open or close.	Ensure all leg pins are disengaged. Check for any obstructions in the frame's moving parts. Lubricate joints if necessary. Sometimes a white hollow bar can get pushed up inside the top portion, preventing full extension; pull it down to resolve.

Problem	Possible Cause / Solution
Canopy unstable in light wind.	Ensure all legs are fully extended and locked. Use all provided stakes to anchor the legs. Attach and properly tension all four guy lines. Consider adding sandbags or weights to the legs for extra stability in windy conditions.
Water pooling on canopy top.	This can occur during heavy rain. It is recommended to take down the canopy in such conditions to prevent damage to the frame and fabric. Ensure the canopy is fully extended and taut during setup.

8. SPECIFICATIONS

Feature	Detail
Brand	Roxy
Model Number	614821-1NS
Size	10 x 10 feet (117.7"L x 117.7"W x 74.8"H)
Material	Metal (Frame), Fabric (Canopy)
Color	Teal
Item Weight	34 Pounds
UV Protection	UPF 50+
Water Resistance Level	Water Repellent
Assembly Required	No (Pop-up design)
UPC	192995614826
Manufacturer	Jakks Pacific Inc.

9. WARRANTY AND SUPPORT

For information regarding warranty coverage, product support, or to purchase replacement parts, please contact the manufacturer, Jakks Pacific Inc., or refer to the product's original packaging for contact details. Keep your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question