

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [HousesAid](#) /

› [HousesAid YD-1833B 12-Cup Programmable Touchscreen Drip Coffee Maker Instruction Manual](#)

HousesAid YD-1833B

HousesAid YD-1833B 12-Cup Programmable Touchscreen Drip Coffee Maker

INSTRUCTION MANUAL

INTRODUCTION

Thank you for choosing the HousesAid YD-1833B 12-Cup Programmable Touchscreen Drip Coffee Maker. This manual provides essential information for the safe and efficient operation of your new appliance. Please read it thoroughly before first use and keep it for future reference.

The HousesAid YD-1833B is designed to deliver consistent, full-flavored drip coffee for both home and office environments. Featuring an intuitive digital touchscreen, this model offers programmable auto-brew, a 1-4 cup option, adjustable brew strength, a keep-warm function, and an auto shut-off for safety and convenience.

IMPORTANT SAFETY INFORMATION

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.

- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off,” then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Scalding may occur if the lid is removed during the brewing cycle.

PRODUCT OVERVIEW

Familiarize yourself with the components of your HousesAid YD-1833B coffee maker:

- **Water Reservoir:** Clearly marked for easy filling.
- **Touchscreen Control Panel:** For setting time, programming, strength, and on/off functions.
- **Brew Basket:** Removable for easy cleaning, accommodates a permanent filter.
- **Permanent Filter:** Reusable filter for convenience and environmental friendliness.
- **Glass Carafe:** 12-cup capacity with measurement markings.
- **Keep-Warm Plate:** Maintains coffee temperature after brewing.
- **Anti-Drip Design:** Prevents drips when carafe is removed during brewing.



Figure 1: HousesAid YD-1833B Coffee Maker - Front View

TOUCH SCREEN FOR SIMPLE




OPERATION
LCD Display

Figure 2: Close-up of the Touchscreen Control Panel for simple operation.

CLEANING CONVENIENT

Removable brew basket



Figure 3: The removable brew basket with permanent filter for convenient cleaning.

SETUP

1. **Unpack:** Carefully remove all packaging materials and inspect the coffee maker for any damage.
2. **Clean:** Before first use, wash the carafe, permanent filter, and brew basket in warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the coffee maker with a soft, damp cloth.
3. **First Brew Cycle (Cleaning):** Fill the water reservoir to the MAX (12-cup) line with fresh, cold water. Place the empty permanent filter in the brew basket and close the lid. Place the empty carafe on the keep-warm plate. Plug the coffee maker into a standard electrical outlet. Run a full brew cycle without coffee grounds to clean the internal components. Discard the water.
4. **Set Clock:** After plugging in, the display will show 12:00 AM. Use the 'Hour' and 'Min' buttons on the touchscreen to set the current time.

OPERATING INSTRUCTIONS

Brewing Coffee

1. **Fill Water Reservoir:** Open the top lid and fill the water reservoir with fresh, cold water using the carafe. Refer to the water level indicator on the side of the coffee maker. Do not exceed the MAX (12-

cup) line.

2. **Add Coffee Grounds:** Place the permanent filter into the brew basket. Add the desired amount of ground coffee. A general guideline is 1 tablespoon of coffee per cup, but adjust to your personal preference.
3. **Select Brew Strength (Optional):** On the touchscreen, press the 'Strength' button to cycle through available brew strength options (e.g., Regular, Strong).
4. **Select Cup Size (Optional):** The coffee maker features a 1-4 cup option for smaller batches. If brewing 1-4 cups, select this option to optimize flavor extraction.
5. **Start Brewing:** Place the empty carafe on the keep-warm plate. Press the 'On/Off' button on the touchscreen to begin the brewing cycle. The indicator light will illuminate.
6. **Pause & Serve:** The anti-drip feature allows you to temporarily remove the carafe during brewing to pour a cup. Replace the carafe within 20 seconds to prevent overflow.
7. **Keep-Warm Function:** After brewing, the coffee maker will automatically switch to the keep-warm function, maintaining the coffee's temperature for up to 120 minutes before automatically shutting off.

Programming Auto-Brew

Set your coffee maker to automatically brew at a specific time:

1. **Prepare Coffee Maker:** Follow steps 1 and 2 from the 'Brewing Coffee' section (fill water, add grounds).
2. **Enter Program Mode:** Press the 'Prog' button on the touchscreen. The display will flash, indicating it's in program mode.
3. **Set Desired Brew Time:** Use the 'Hour' and 'Min' buttons to set the time you want the coffee to start brewing.
4. **Confirm Program:** Press the 'Prog' button again to confirm the setting. The program indicator light will illuminate.
5. **Automatic Start:** The coffee maker will automatically start brewing at the set time.

Keep warm countdown



120 minutes
automatic shutdown



Figure 4: The keep-warm plate maintains coffee temperature, with a 120-minute automatic shut-off for safety.



Make different flavors of coffee

Coffee, lattes and cappuccinos



variety of coffee cup sizes

1-4,6,8 and 12 cups



Figure 5: The coffee maker supports various coffee types and offers flexible cup size options (1-4, 6, 8, 12 cups).

MAINTENANCE & CLEANING

Regular cleaning ensures optimal performance and extends the life of your coffee maker.

1. **Daily Cleaning:** After each use, discard used coffee grounds and rinse the permanent filter and brew basket. Wash the carafe and lid in warm, soapy water. Rinse thoroughly.
2. **Exterior Cleaning:** Wipe the exterior of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads. Never immerse the coffee maker in water.
3. **Descaling:** Mineral deposits from water can build up over time and affect performance. Descale your coffee maker every 2-3 months, or more frequently if you have hard water.
 - Fill the water reservoir with a mixture of white vinegar and water (1:2 ratio).
 - Place the empty carafe on the keep-warm plate.
 - Run a full brew cycle.
 - After the cycle, let the coffee maker cool for 15 minutes.
 - Run 2-3 cycles with fresh, cold water to rinse thoroughly.

TROUBLESHOOTING

If you encounter issues with your coffee maker, refer to the following common problems and solutions:

- **Coffee not brewing:** Ensure the coffee maker is plugged in, the 'On/Off' button is pressed, and the water reservoir has sufficient water. Check if the carafe is correctly placed on the keep-warm plate.
- **Coffee tastes weak:** Increase the amount of coffee grounds, select a stronger brew setting (if available), or ensure the permanent filter is clean and not clogged.
- **Coffee overflows:** Do not overfill the water reservoir beyond the MAX line. Ensure the carafe is properly seated and the anti-drip mechanism is not blocked.
- **Brewing is slow:** This often indicates mineral buildup. Perform a descaling cycle as described in the Maintenance section.
- **Display not working:** Check the power connection. If the issue persists, unplug the unit for a few minutes and plug it back in to reset.

SPECIFICATIONS

Feature	Specification
Brand	HousesAid
Model Name	YD-1833B
Capacity	1.6 Liters (12 Cups)
Product Dimensions	9.65"D x 7.8"W x 14.37"H
Item Weight	4.29 pounds
Voltage	110 Volts
Coffee Input Type	Ground
Special Feature	Programmable, Touchscreen, Keep-Warm, Auto Shut-Off
Included Components	Carafe, Permanent Filter
Is Dishwasher Safe	No (for main unit), Carafe and filter are generally hand-washable.

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the documentation included with your purchase or visit the official HousesAid website. Keep your proof of purchase for any warranty claims.

For additional assistance, you may contact HousesAid customer service through their official channels.