

## Gamrombo Controller

# Gamrombo Wireless Controller User Manual

Model: Controller

Brand: Gamrombo

## INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Gamrombo Wireless Controller. Designed for a versatile gaming experience, this controller is compatible with various platforms including Xbox One, Xbox Series X/S, Windows PCs, Steam, Android, and iOS devices. Please read this manual thoroughly to ensure optimal performance and longevity of your device.

## PRODUCT OVERVIEW

The Gamrombo Wireless Controller features advanced functionalities to enhance your gaming experience. Key features include:

- **Wireless Connectivity:** Enjoy freedom of movement with reliable wireless technology.
- **Dual Vibration:** Experience immersive feedback with adjustable vibration motors.
- **TURBO Function:** Activate rapid-fire for competitive gameplay.
- **Macro Function:** Customize and assign complex button sequences.
- **6-Axis Gyro Sensor:** Provides precise motion sensing for compatible games.
- **3.5mm Audio Jack:** Connect your headset directly to the controller.
- **Multi-Platform Support:** Compatible with Xbox One, Xbox Series X/S, Windows, Steam, Android, and iOS.



Image: Two Gamrombo wireless controllers, showcasing their design and color.

## SETUP INSTRUCTIONS

---

### 1. Initial Pairing

To pair your Gamrombo Wireless Controller with your device, follow these general steps:

1. Ensure the controller is charged or has sufficient battery power.
2. Turn on your gaming console (Xbox) or device (PC, Android, iOS).
3. Press and hold the pairing button on the controller (usually a small button near the top or back) until the indicator lights begin to flash rapidly.
4. On your device, navigate to the Bluetooth settings or controller pairing menu and select "Gamrombo Controller" from the list of available devices.
5. Once connected, the indicator light on the controller will become solid.

### 2. Connecting to Xbox Systems

For Xbox One and Xbox Series X/S consoles, it is crucial to ensure your controller's software is up-to-date for proper functionality. If you encounter connection issues, an update may be required.

## If you are unable to connect to the Xbox system

Please download the updated software through this URL:

**<https://we.tl/t-Y125bCGsJb>**

There is a **software upgrade video** tutorial in the listing. Please check it out. It **only takes 2 minutes** to complete the upgrade



Image: A single orange Gamrombo controller with instructions for updating software if unable to connect to Xbox. The text indicates downloading updated software from a provided URL.

**Important:** If you are unable to connect to your Xbox system, please download the updated software from this URL: <https://we.tl/t-Y125bCGsJb>. A software upgrade video tutorial is available to guide you through the process, which typically takes approximately 2 minutes to complete.

### 3. Connecting to PC (Windows/Steam)

Connect via Bluetooth or a wired USB connection. For Bluetooth, ensure your PC has Bluetooth enabled and follow the general pairing steps. For wired connection, simply plug the controller into a USB port on your PC.

### 4. Connecting to Android/iOS

Enable Bluetooth on your mobile device and follow the general pairing steps. The controller will appear as "Gamrombo Controller" in your Bluetooth device list.

# New Upgrade Wireless Technology & Compatible With Multiple Platforms & Various Connection Methods



Image: A Gamrombo controller displayed alongside icons representing PC Windows, Steam, iOS/Android phones, and connection methods including Wi-Fi, Wired, and Bluetooth, illustrating its multi-platform compatibility.

## OPERATING INSTRUCTIONS

### 1. TURBO Function

The TURBO function allows for rapid, continuous input of a button press. To activate:

- Press and hold the **TURBO button** (often indicated by a fan or speed icon).
- While holding TURBO, press the desired action button (e.g., A, B, X, Y, RT, LT) to assign the TURBO function.
- Release both buttons. The assigned button will now activate rapid-fire when pressed.
- To deactivate, repeat the process: hold TURBO and press the assigned action button again.

# TURBO FUNCTION

Gain a competitive edge with the Turbo Function, allowing you to easily activate rapid-fire mode for quick and efficient gameplay.



Image: A Gamrombo controller with an overlay illustrating the TURBO function, showing different shot rates (5, 12, 20 shots/s) in a gaming scenario.

## 2. Macro Function

The Macro function allows you to record a sequence of button presses and assign them to a single button for quick execution. Up to 16 buttons can be defined at the same time.

- Consult your controller's specific instructions for Macro recording, as the process can vary. Typically, it involves a dedicated Macro button or a combination of buttons to enter recording mode, press the desired sequence, and then assign it to a back paddle or other programmable button.



Image: The underside of a Gamrombo controller, highlighting customizable macro buttons (P1, P2) and a diagram showing various assignable buttons (A, B, X, Y, LT, LB, RB, RT, L, R, D-PAD).

### 3. Adjustable Vibration

The controller features dual vibration motors with adjustable intensity. The method for adjusting vibration strength may vary, but often involves a combination of the TURBO button and the D-pad up/down, or a dedicated button.



Image: A Gamrombo controller with visual representations of its 6-axis gyro sensor functionality and adjustable vibration, showing weak, medium, and strong settings.

#### 4. 3.5mm Audio Jack

Connect any standard 3.5mm headset to the audio jack located at the bottom of the controller for in-game audio and voice chat.

# 3.5mm Audio Jack

Compatible with any 3.5mm headphone jack



Image: A Gamrombo controller with a close-up view of the 3.5mm audio jack located at its base, indicating compatibility with standard headphones.

## MAINTENANCE

---

- **Cleaning:** Use a soft, dry cloth to clean the controller. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** If the controller has a rechargeable battery, avoid fully discharging it frequently to prolong its lifespan. Charge regularly.
- **Avoid Drops:** Protect the controller from physical impact to prevent damage to internal components.

## TROUBLESHOOTING

---

### Controller Not Connecting to Xbox

If your controller fails to connect or maintain a connection with your Xbox console, it is likely due to an outdated software version. Microsoft periodically updates its console software, which may require corresponding updates for

third-party accessories.

- **Software Update:** Visit <https://we.tl/t-Y125bCgsJb> to download the latest software update for your controller. Follow the instructions provided with the download or refer to the video tutorial mentioned on the product page.
- **Re-pairing:** After updating, attempt to re-pair the controller with your Xbox console.
- **Check Console Updates:** Ensure your Xbox console itself is running the latest system software.
- **Wired Connection:** As a temporary measure or for initial setup, try connecting the controller directly to the Xbox via a USB cable.

Controller Not Responding

- **Charge Battery:** Ensure the controller has sufficient battery charge.
- **Reset Controller:** Look for a small reset button (often recessed) on the controller and press it with a thin object (like a paperclip).
- **Re-pair:** Attempt to re-pair the controller with your device.

Buttons Not Functioning Correctly

- **Clean Buttons:** Ensure no debris is lodged around the buttons.
- **Test on Another Device:** If possible, test the controller on a different compatible device to determine if the issue is with the controller or the original device/game.

SPECIFICATIONS

Feature	Detail
Model Number	Controller
Connectivity	Wireless (Bluetooth), Wired (USB)
Compatibility	Xbox One, Xbox Series X/S, Windows, Steam, Android, iOS
Special Features	TURBO Function, Macro Function, Dual Vibration, 6-Axis Gyro Sensor, 3.5mm Audio Jack
Package Dimensions	9.61 x 6.97 x 2.84 inches
Item Weight	1.3 pounds
Date First Available	August 15, 2025

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official Gamrombo website. Keep your proof of purchase for any warranty claims.

Related Documents - Controller

