

[manuals.plus](#) /› [Karinear](#) /› [Karinear 36L Mini Air Fryer Oven KNI-GR36BRAL User Manual](#)

Karinear KNI-GR36BRAL

Karinear 36L Mini Air Fryer Oven KNI-GR36BRAL User Manual

Model: KNI-GR36BRAL



1. INTRODUCTION

Thank you for choosing the Karinear 36L Mini Air Fryer Oven. This appliance is designed to provide versatile cooking options, combining the functions of an air fryer, toaster, roaster, baker, re heater, and grill in one compact unit. This manual provides essential information for safe and efficient operation, maintenance, and troubleshooting.

Please read this manual thoroughly before first use and keep it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.

- Do not use appliance for other than intended use.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Karinear Mini Air Fryer Oven.

- Main Unit (Oven Housing)
- Control Knobs (Temperature, Function, Timer)
- Glass Door
- Air Fry Basket
- Baking Pan
- Wire Rack
- Crumb Tray (removable)

Image description: A diagram showing the front view of the Karinear 36L Mini Air Fryer Oven, highlighting the control panel with three knobs (temperature, function, timer), the glass door, and the interior accessories such as the air fry basket, baking pan, and wire rack.

4. SETUP AND FIRST USE

4.1 Unpacking

1. Carefully remove the appliance and all accessories from the packaging.
2. Remove any protective film or stickers.
3. Check for any damage during transit. If damaged, do not operate and contact customer support.

4.2 Placement

- Place the oven on a stable, heat-resistant, and level surface.
- Ensure adequate ventilation around the appliance (at least 10 cm clearance on all sides).
- Do not place near flammable materials or under wall cabinets.

4.3 Cleaning Before First Use

- Wipe the exterior of the oven with a damp cloth.
- Wash all removable accessories (air fry basket, baking pan, wire rack, crumb tray) in warm, soapy water. Rinse thoroughly and dry completely.
- Do not immerse the main unit in water.

4.4 Initial Burn-Off

It is normal for a slight odor or smoke to be emitted during the first use as manufacturing residues burn off. This is harmless and will dissipate quickly.

1. Plug the oven into a grounded electrical outlet.
2. Set the temperature to 230°C and the function to "Air Fry".
3. Set the timer for 15 minutes.
4. Ensure the area is well-ventilated during this process.
5. After 15 minutes, turn the timer to "OFF" and unplug the appliance. Allow it to cool completely.

5. OPERATING INSTRUCTIONS

5.1 Control Panel Overview

- **Temperature Knob:** Adjusts cooking temperature up to 230°C.
- **Function Knob:** Selects cooking mode (Air Fry, Toast, Roast, Bake, Reheat, Grill).
- **Timer Knob:** Sets cooking time up to 60 minutes. Includes an "OFF" position.

Image description: A close-up view of the control panel of the Karinear 36L Mini Air Fryer Oven, clearly showing the three rotary knobs for temperature, function, and timer, with their respective markings.

5.2 General Operation

1. Place food on the appropriate accessory (air fry basket, baking pan, or wire rack).
2. Insert the accessory into the oven.
3. Close the glass door securely.
4. Plug the oven into a grounded electrical outlet.
5. Turn the **Function Knob** to select the desired cooking mode.
6. Turn the **Temperature Knob** to set the desired temperature.
7. Turn the **Timer Knob** to set the desired cooking time. The oven will start heating.
8. The oven will automatically turn off when the timer reaches zero. A bell will sound.
9. Carefully remove cooked food using oven mitts.
10. Unplug the appliance after use.

5.3 Cooking Functions

- **Air Fry:** Ideal for crispy foods like fries, chicken wings, and vegetables. Uses 360° hot air circulation for even cooking with minimal oil.
- **Toast:** For toasting bread, bagels, and waffles.
- **Roast:** Suitable for meats, poultry, and larger vegetables.
- **Bake:** For cakes, cookies, casseroles, and other baked goods.
- **Reheat:** Gently warms up leftovers without drying them out.
- **Grill:** For browning and crisping the top of dishes, or grilling thinner cuts of meat.

Tip: For optimal air frying results, preheat the oven for 3-5 minutes before adding food. Shake or flip food halfway through cooking for even browning.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your appliance.

6.1 Before Cleaning

- Always unplug the oven from the power outlet.
- Allow the appliance to cool down completely before cleaning.

6.2 Cleaning the Interior

- Remove the crumb tray, air fry basket, baking pan, and wire rack. Wash them in warm, soapy water. For stubborn food residue, soak them before cleaning.

- Wipe the interior walls with a damp cloth and mild detergent. Avoid abrasive cleaners or metal scouring pads.
- Clean the heating elements gently with a soft, dry brush if necessary, ensuring they are cool.

6.3 Cleaning the Exterior

- Wipe the exterior surface with a damp cloth. Dry thoroughly.
- Do not use harsh chemicals or abrasive materials.

6.4 Storage

- Ensure the oven is clean and dry before storing.
- Store the appliance in a cool, dry place.

7. TROUBLESHOOTING

If you encounter issues with your Karinear Mini Air Fryer Oven, please consult the following table before contacting customer support.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; timer not set.	Ensure the power cord is securely plugged into a working outlet. Set the timer to the desired cooking duration.
Food is not cooking evenly.	Overcrowding; incorrect temperature/time; food not flipped/shaken.	Do not overcrowd the basket/pan. Adjust temperature and time as per recipe. Flip or shake food halfway through cooking.
White smoke coming from the oven.	Grease/oil residue; fatty food cooking.	Clean the oven interior and accessories thoroughly. For fatty foods, use a baking pan to catch drips.
Appliance emits a burning smell.	Food residue on heating elements; initial burn-off.	Unplug and allow to cool. Clean heating elements. If it's the first use, this is normal (see "Initial Burn-Off").

8. PRODUCT SPECIFICATIONS

Brand: Karinear

Model: KNI-GR36BRAL

Capacity: 36 Liters

Wattage: 1800 Watts

Temperature Range: Up to 230°C

Timer: 60 Minutes

Functions: 6-in-1 (Air Fry, Toast, Roast, Bake, Reheat, Grill)

External Dimensions (approx.): 54 cm (L) x 48 cm (W) x 48 cm (H)

Internal Dimensions (approx.): 39 cm (L) x 34 cm (W) x 25 cm (H)

Material: Cast Iron (housing), Glass (door)

Weight: 10 Kilograms

9. WARRANTY INFORMATION

Karinear products are manufactured to the highest quality standards. This product is covered by a standard manufacturer's warranty against defects in materials and workmanship from the date of purchase. Please retain your proof of purchase for warranty claims.

The warranty does not cover damage caused by misuse, neglect, accident, alteration, or unauthorized repair. For specific warranty terms and conditions, please refer to the warranty card included with your product or contact Karinear customer support.

10. CUSTOMER SUPPORT

If you have any questions, concerns, or require assistance with your Karinear 36L Mini Air Fryer Oven, please contact our customer support team.

Website: [Visit the Karinear Store on Amazon](#)

Email: [Please refer to your product packaging or Karinear website for specific contact email.]

Phone: [Please refer to your product packaging or Karinear website for specific contact phone number.]

When contacting support, please have your model number (KNI-GR36BRAL) and purchase date ready.