

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [3-Link](#) /

› [3-Link Air Mouse D13 Instruction Manual](#)

3-Link D13

3-Link Air Mouse D13 Instruction Manual

Brand: 3-Link | Model: D13

INTRODUCTION

The 3-Link Air Mouse D13 is a versatile wireless remote control designed for seamless interaction across multiple devices, including PCs, iOS, and Android systems. It combines the functionality of an air mouse, touchpad, and presentation clicker, offering enhanced control for various applications from professional presentations to casual media browsing.

WHAT'S IN THE BOX

- Ring Mouse
- Battery Case with Stand
- USB-C Charger
- Manual

PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your 3-Link Air Mouse D13:

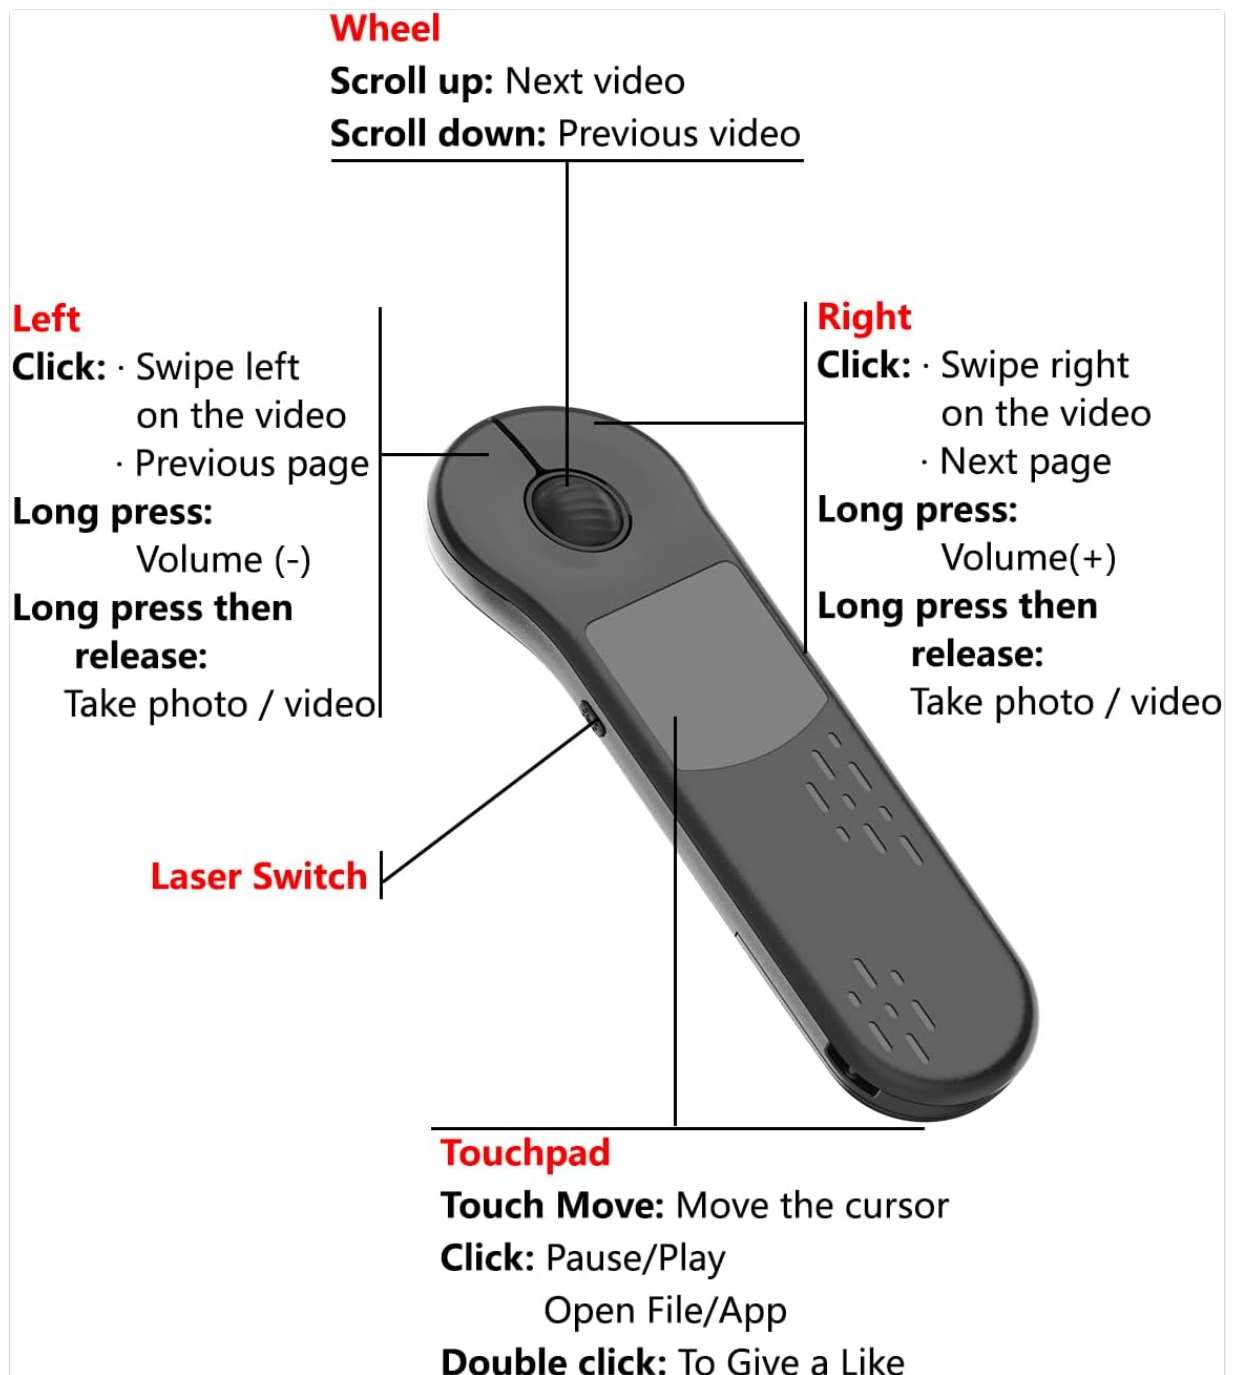


Image: 3-Link Air Mouse D13 with labeled controls including touchpad, scroll wheel, left/right click buttons, and laser switch.

- **Touchpad:** For cursor movement and navigation.
- **Scroll Wheel:** For scrolling content up/down, and can act as a button for play/pause or next/previous video.
- **Left Click Button:** Primary selection and interaction.
- **Right Click Button:** Secondary selection or context menu.
- **Laser Switch:** Activates the laser pointer for presentations.
- **Charging Port:** USB-C port for recharging the device.

SETUP

Charging the Device

Before initial use, fully charge your 3-Link Air Mouse D13. Connect the provided USB-C cable to the

charging port on the device and to a standard USB power source.

Energy Efficient, Optimized Performance

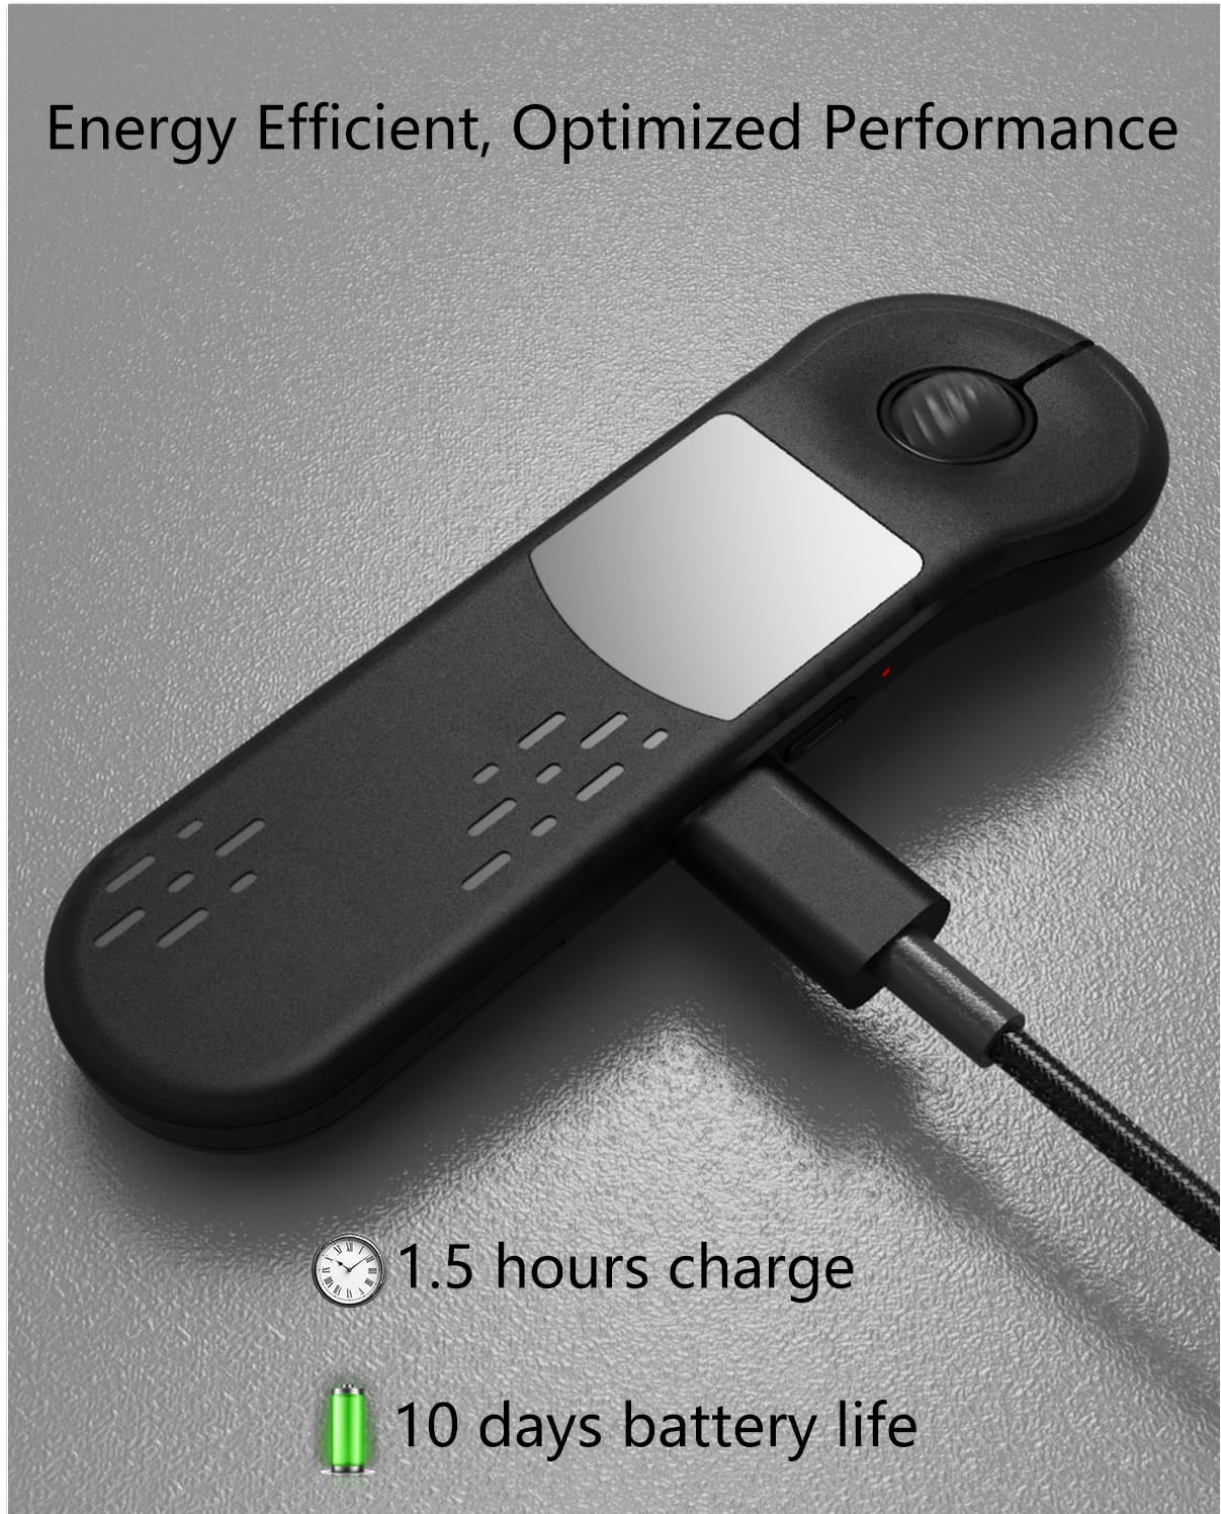


Image: The 3-Link Air Mouse D13 connected to its USB-C charging cable, indicating the charging process.

- A full charge takes approximately 1.5 hours.
- The device offers up to 10 days of battery life on a single charge.

Connecting to Your Device (Bluetooth)

The 3-Link Air Mouse D13 supports Bluetooth connectivity for a wide range of devices.

1. Ensure the Air Mouse is charged and powered on.
2. On your host device (PC, iOS, Android), navigate to the Bluetooth settings.
3. Enable Bluetooth and search for new devices.
4. Select "D13" from the list of available devices to pair.

5. For iOS devices, you may need to enable "AssistiveTouch" in your accessibility settings for full functionality.

Watch this video for a visual guide on pairing the device:

Your browser does not support the video tag.

Video: A user demonstrating the pairing process of the 3-Link Air Mouse D13 with an iOS device, showing how to enable Bluetooth and connect to the D13.

Connecting to Your Device (2.4G Wireless)

The 3-Link Air Mouse D13 also supports 2.4G wireless connectivity, typically used with a USB receiver (if included with your specific model, please check packaging). If a USB receiver is provided:

1. Insert the 2.4G USB receiver into an available USB port on your computer or compatible device.
2. Ensure the Air Mouse is powered on. The device should automatically connect to the receiver.
3. No additional drivers are usually required for 2.4G connection.

OPERATING MODES

General Navigation

The touchpad and scroll wheel provide intuitive control for everyday tasks:

- **Touchpad:** Move your finger across the touchpad to control the cursor on screen.
- **Click:** Single click on the touchpad to pause/play media or open files/apps.
- **Double Click:** Double click on the touchpad to 'Like' content in supported applications.
- **Scroll Wheel:** Rotate the wheel to scroll up or down. In some applications, it can navigate to the next or previous video.

Presentation Mode

Utilize the Air Mouse D13 for professional presentations with ease:



All on screen Slide for work Swipe for break

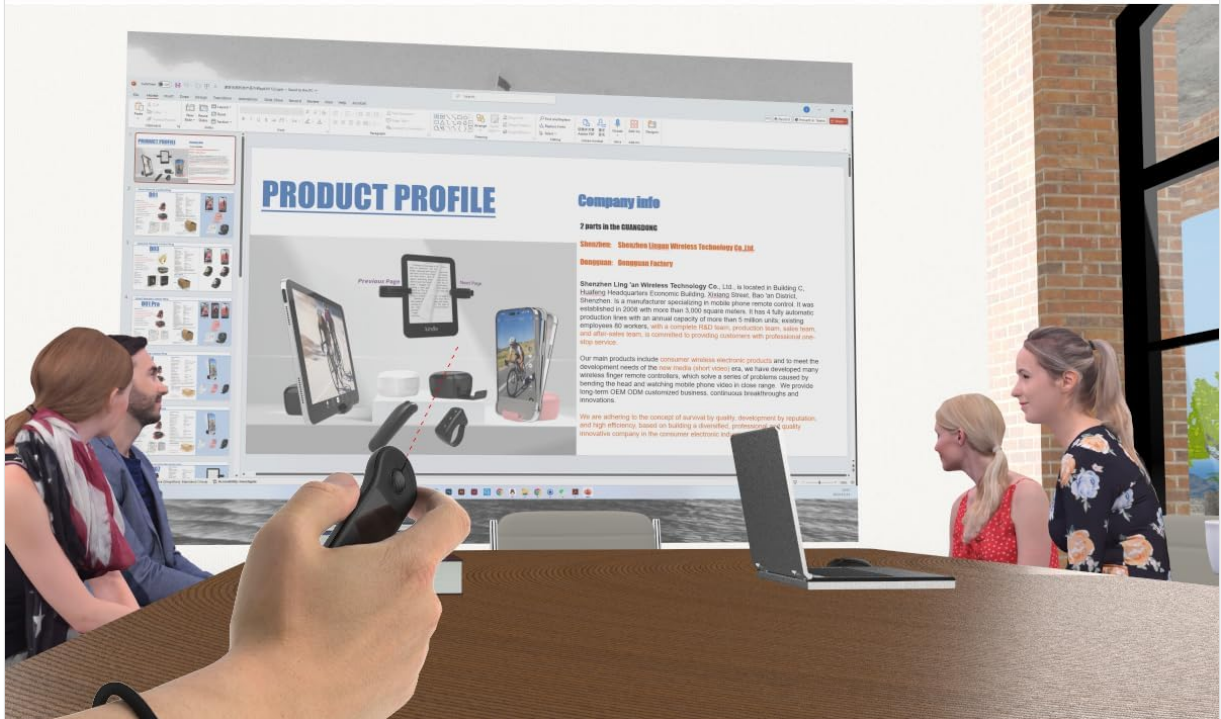


Image: A user holding the 3-Link Air Mouse D13, controlling a PowerPoint presentation displayed on a large monitor in a meeting room setting.

- **Page Navigation:** Use the left/right click buttons to move between slides (previous/next page).
- **Laser Pointer:** Activate the laser switch to highlight key points on your presentation screen.
- **Volume Control:** Long press the left/right buttons to adjust volume (volume down/up).

Leisure Mode

Enhance your entertainment and social media experience:

Multiple-functional Laser Air Mouse

Finger tip Magic Without Touching Your Phone

- ✓ Scrolling Up/Down
- ✓ Swiping Right / Left
- ✓ Pause/ Play
- ✓ Volume +/-
- ✓ To Give a Like
- ✓ Selfies
- ✓ Browse Comments
- ✓ Add Comments
- ✓ Dual-mode: Bluetooth & 2.4G



Image: A hand holding the 3-Link Air Mouse D13, demonstrating its use for scrolling through TikTok videos on a smartphone.

- **TikTok Scrolling:** Scroll up/down to navigate through videos. Swipe left/right for other actions.
- **Kindle App Reading:** Use the scroll wheel or left/right buttons to turn pages in the Kindle App (not compatible with dedicated Kindle e-readers).

Free Your Hands While Reading

(**Not for** Kindle, Paperwhite, etc)



Image: A man comfortably reading on a tablet, using the 3-Link Air Mouse D13 to control the content without directly touching the screen.

- **Camera Remote:** Long press and release the left or right button to take photos or start/stop video recording in camera apps.

Convenient selfies or party photography



Image: A group of friends smiling for a selfie, with one hand holding the 3-Link Air Mouse D13 to remotely trigger the smartphone camera.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Avoid harsh chemicals or abrasive materials.
- **Storage:** Store the Air Mouse in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the device frequently. Charge it regularly, even if not in constant use.

TROUBLESHOOTING

Device not pairing:

Ensure the Air Mouse is charged and powered on. Check that Bluetooth is enabled on your host device and that the D13 is discoverable. Try restarting both the Air Mouse and your host device.

Cursor not moving or unresponsive:

Check battery level. Ensure the device is within range of your host device. For iOS, confirm AssistiveTouch is enabled. Try re-pairing the device.

Buttons not functioning correctly:

Verify the device is properly connected. Some functions may be app-specific. Ensure the device's firmware is up to date if applicable (check manufacturer's website).

Laser pointer not working:

Ensure the laser switch is activated and the battery has sufficient charge.

SPECIFICATIONS

Feature	Detail
Product Dimensions	3.79 x 1.04 x 0.04 inches
Item Weight	0.783 ounces
Item Model Number	D13
Batteries	1 Nonstandard Battery (included)
Connectivity Technology	Bluetooth, 2.4G Wireless
Special Features	Portable, Rechargeable, Soundless, Wireless
Movement Detection Technology	Optical

WARRANTY INFORMATION

The 3-Link Air Mouse D13 comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging or visit the official 3-Link website for detailed terms and conditions regarding warranty coverage and claims.

CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding your 3-Link Air Mouse D13, please contact 3-Link customer service. Contact information can typically be found on the product packaging, the official 3-Link website, or through your retailer's support channels.