



- Manuals.plus /
- > DownyPaws /

> DownyPaws Cat Water Fountain Stainless Steel Wireless User Manual

DownyPaws DPWFP6SS

DownyPaws Cat Water Fountain User Manual

Model: DPWFP6SS

- Contents

Setup

Operation

Maintenance

Troubleshooting

Specifications

Warranty & Support
- Introduction

Safety Information

Package

1. INTRODUCTION

Thank you for choosing the DownyPaws Cat Water Fountain. This wireless stainless steel fountain is designed to provide fresh, clean water for your pet, promoting hydration and health. Its innovative design ensures ease of use, cleaning, and flexible placement throughout your home. Please read this manual thoroughly before operating the fountain to ensure proper setup and maintenance.



Image: The DownyPaws Cat Water Fountain, showcasing its stainless steel body, the wireless pump, and included filters and replacement pump.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following precautions:

- Always unplug the fountain before cleaning or performing any maintenance.
- Do not immerse the main power adapter or the wireless charging base in water.
- Ensure the fountain is placed on a stable, level surface to prevent tipping.
- Keep the power cord away from areas where pets can chew on it. The wireless design of the fountain pump minimizes this risk.
- This product is intended for indoor use only.
- Use only original DownyPaws replacement parts and accessories.
- Keep out of reach of children.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Stainless Steel Water Bowl

- Wireless Water Pump with Spout
- Filter Tray
- 6 x Replacement Filters (Activated Carbon and Sponge)
- Replacement Water Pump (as specified in product variant)
- Power Adapter
- User Manual



Image: All components of the DownyPaws Cat Water Fountain laid out, including the stainless steel basin, the wireless pump, and the set of filters.

4. SETUP INSTRUCTIONS

1. **Initial Cleaning:** Before first use, thoroughly wash the stainless steel water bowl and filter tray with mild soap and water. Rinse all components thoroughly to remove any residue. The stainless steel bowl is dishwasher safe.
2. **Filter Preparation:** Rinse the new filter under running water for a few minutes to remove any loose carbon dust.
3. **Assemble Filter Tray:** Place the prepared filter into the designated slot in the filter tray. Ensure it sits securely.
4. **Place Wireless Pump:** Insert the wireless water pump into the center opening of the filter tray. Ensure it is firmly seated.
5. **Fill with Water:** Place the assembled filter tray and pump into the stainless steel bowl. Fill the bowl with clean water up to the MAX fill line, but not exceeding it. Do not allow the water level to drop below the MIN line during operation.

6. **Position Fountain:** Place the fountain on a stable, level surface in a location accessible to your pet. The wireless design allows for flexible placement without being tethered by a power cord directly to the pump.

Two Water Modes

Sensor Mode and Timer Mode, tailored to meet their unique needs

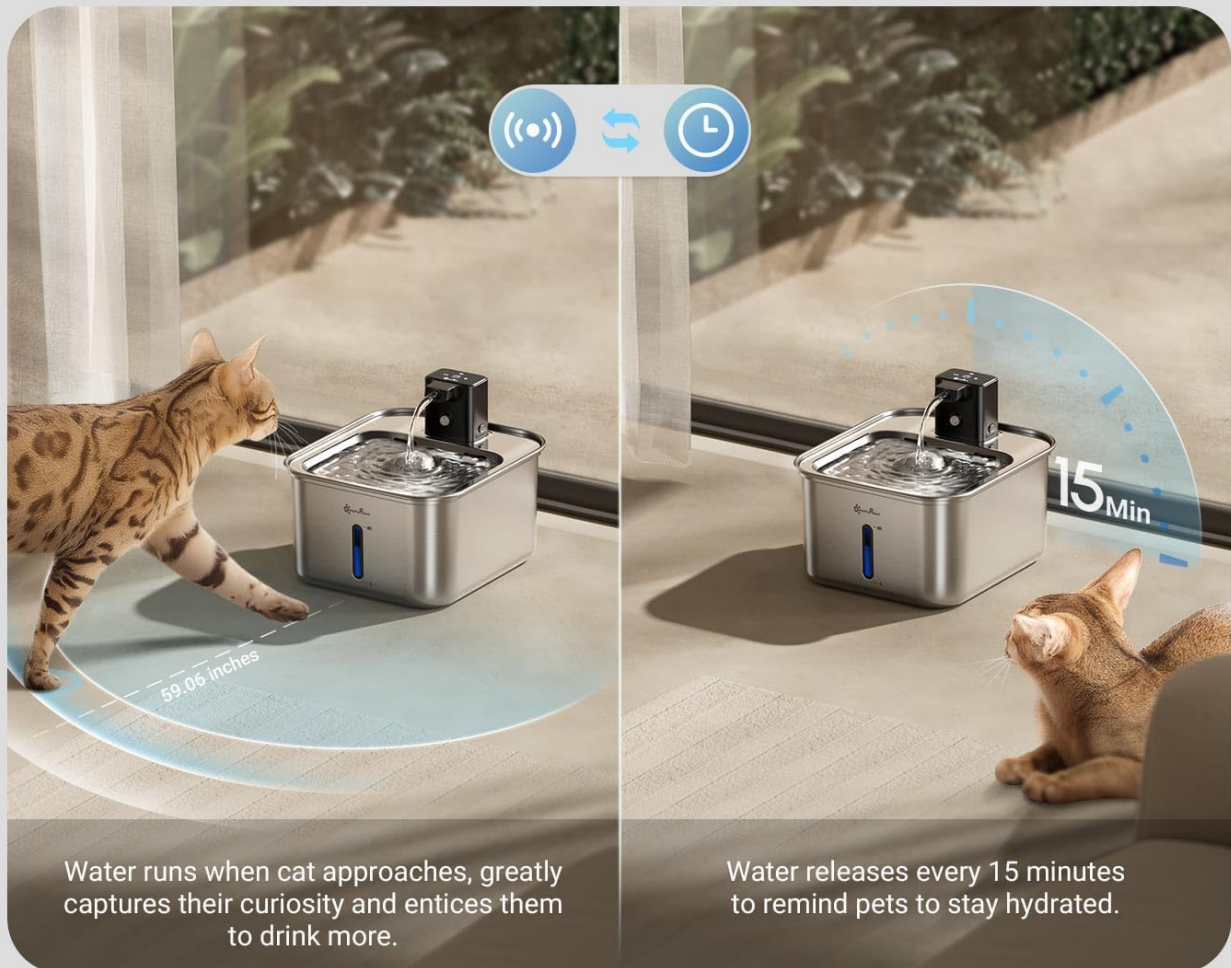


Image: The DownyPaws Cat Water Fountain shown in various household locations, including a kitchen counter, living room floor, bedroom, and playroom, highlighting its wireless flexibility.

5. OPERATING INSTRUCTIONS

The DownyPaws Cat Water Fountain offers two distinct water dispensing modes:

- **Motion Activated Mode:** In this mode, the fountain dispenses water when your cat approaches within approximately 59 inches (1.5 meters). This encourages pets to drink more by providing fresh, flowing water on demand.
- **Timed Mode:** In this mode, the fountain dispenses water for 20 seconds at regular 15-minute intervals. This ensures consistent hydration reminders for your pet throughout the day.

Refer to the button on the wireless pump to switch between modes. A visual indicator or a specific button press sequence will activate the desired mode.

Flexible Placement for Easy Water Access

Wireless design provides whole-house hydration



Kitchen



Play Room



Living Room



Bedroom

Image: A visual comparison of the two water modes: Motion Activated Mode, where water flows when a cat approaches, and Timed Mode, where water is dispensed every 15 minutes.

LED Light Reminder

The fountain is equipped with an LED light indicator to provide real-time water level status:


- **Blue Light:** Indicates sufficient water level and normal operation.
- **Red Light:** Indicates low water level. Please add water immediately to prevent the pump from running dry.

LED Light Reminder

Detects water level at ease



Working:
Water level sufficient.

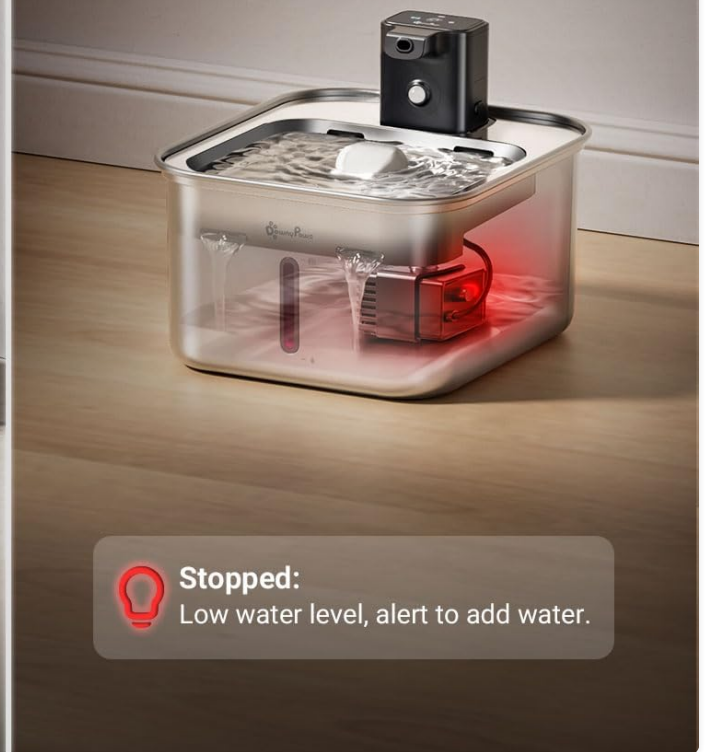

Stopped:
Low water level, alert to add water.

Image: The fountain displaying a blue light when water is sufficient and a red light when the water level is low, indicating a need for refill.

6. MAINTENANCE

Regular cleaning and maintenance are crucial for the longevity of your fountain and the health of your pet.

Cleaning the Fountain

- **Frequency:** It is recommended to clean the fountain at least once a week.
- **Stainless Steel Bowl:** The food-grade stainless steel bowl is dishwasher safe for thorough cleaning. This material is resistant to limescale and bacterial buildup.
- **Other Components:** Hand wash the filter tray and wireless pump with mild soap and water. Rinse thoroughly.

Upgraded

“Water Bowl and Trays”

Food grade stainless steel water bowl and tray for your pet's health



Image: A close-up of the stainless steel water bowl and tray, emphasizing the food-grade 304 stainless steel material for pet health and ease of cleaning.

Cleaning the Detachable Water Pump

The upgraded detachable water pump design makes cleaning easier:

1. Disconnect the pump from the filter tray.
2. Disassemble the pump components (if applicable, refer to pump specific instructions).
3. Clean all pump parts with a small brush to remove any hair or debris.
4. Rinse thoroughly and reassemble.

Detachable Water Pump

Thorough cleaning becomes easier



Image: The detachable water pump being separated from the fountain basin, illustrating how easy it is to remove for thorough cleaning.

Filter Replacement

Filters should be replaced regularly to maintain water quality. The frequency depends on water hardness and the number of pets using the fountain, but generally every 2-4 weeks.

1. Remove the old filter from the filter tray.
2. Rinse the new filter under running water for a few minutes.
3. Insert the new filter into the filter tray, ensuring it is properly seated.
4. Dispose of the old filter responsibly.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Fountain not dispensing water	Low water level Pump clogged Power issue	Add water to the fountain. Clean the pump thoroughly. Ensure the power adapter is properly connected and receiving power.
Water flow is weak	Filter clogged Pump partially clogged Insufficient water	Replace the filter. Clean the pump. Add water to the fountain.
Fountain is noisy	Low water level Pump needs cleaning Improper assembly	Add water to the fountain. Clean the pump to remove debris. Ensure all components are assembled correctly and securely.
Red LED light is on	Water level is low	Immediately add water to the fountain until the blue light appears.

8. SPECIFICATIONS

- **Model:** DPWFP6SS
- **Material:** Food-Grade Stainless Steel
- **Water Modes:** Motion Activated, Timed Mode
- **Compatibility:** Compatible with DownyPaws cat water fountain DPWFP6SS replacement pumps and filters.
- **ASIN:** B0FH4WCHGF
- **Target Audience:** House-cats

9. WARRANTY & SUPPORT

DownyPaws products are manufactured with quality and performance in mind. For specific warranty details, including duration and coverage, please refer to the warranty card included with your product or visit the official DownyPaws website. If you encounter any issues or have questions not covered in this manual, please contact DownyPaws customer support for assistance.

Contact Information:

- **Website:** [Visit the DownyPaws Store on Amazon](#)
- Refer to your product packaging for direct customer service contact details.

