

[Manuals.plus](#) /

› [CITIZEN](#) /

› CITIZEN COLLECTION Eco-Drive Chronograph Watch BL5615-56E User Manual

CITIZEN BL5615-56E

CITIZEN COLLECTION Eco-Drive Chronograph Watch BL5615-56E User Manual

Model: BL5615-56E

Brand: CITIZEN

INTRODUCTION AND OVERVIEW

This manual provides comprehensive instructions for the proper use and care of your Citizen Eco-Drive Chronograph Watch. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece.

CITIZEN COLLECTION



人気のクロノグラフシリーズ 光発電エコ・ドライブ

The Citizen Collection Eco-Drive Chronograph series, featuring models with black, silver, and blue dials, showcasing the stylish design.

INITIAL SETUP AND CHARGING


Your Citizen Eco-Drive watch is powered by light. Before initial use, ensure the watch is fully charged.

Charging Instructions

Expose the watch dial to direct sunlight or strong artificial light for several hours. A full charge typically provides approximately 1.5 years of power reserve with the power-saving function active.

光発電エコ・ドライブ

光で動くから、
定期的な
電池交換
いらず。

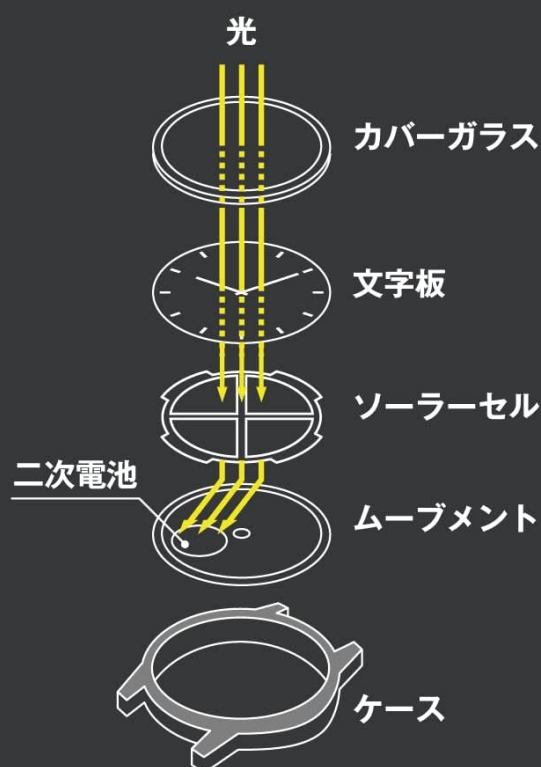

This diagram illustrates the Eco-Drive mechanism: light penetrates the watch face, is converted into electrical energy by a solar cell, and stored in a secondary battery to power the watch movement. This eliminates the need for regular battery replacement.

To maintain charge, store the watch in an area where it can receive light, rather than in darkness.

Time and Date Setting

Refer to the detailed operating instructions for movement E821 on the official Citizen website for precise time and date setting procedures. A link to the manufacturer's website is provided in the "Support" section.

OPERATING INSTRUCTIONS

Time Display

The watch displays hours, minutes, and seconds.

Date Display

The watch features a date display. This model includes a perpetual calendar, which automatically adjusts for month

lengths and leap years once set correctly.

Chronograph Function

The chronograph measures elapsed time with 1/20 second accuracy, up to 60 minutes. Specific instructions for starting, stopping, and resetting the chronograph are available in the full manual on the manufacturer's website (Movement E821).



高い視認性

カット面を大きく持たせたインデックス
太くしっかりとした形状の針が視認性を高めます

A detailed view of the watch dial, highlighting the chronograph sub-dials, the date aperture, and the luminous hands and indices for enhanced readability.

Luminous Features

The hands and indices are treated with luminous material, allowing for time readability in low-light conditions.

MAINTENANCE

Cleaning

Wipe the watch regularly with a soft, dry cloth to remove dust and smudges. For water-resistant models, a damp cloth can be used, followed by drying.

Water Resistance

This watch features 10 ATM water resistance, suitable for daily use, showering, and surface swimming. Avoid operating buttons or the crown when the watch is wet.

高い防水性

日常生活で 水に濡れても 安心。



This image illustrates the watch's high water resistance, making it safe for everyday activities involving water, such as washing hands or being caught in the rain.

Avoiding Extreme Conditions

Do not expose the watch to extreme temperatures, strong magnetic fields, or harsh chemicals, as these can affect its accuracy and integrity.

Power Reserve

To ensure continuous operation, regularly expose your Eco-Drive watch to light. If the watch stops due to insufficient charge, expose it to light immediately to resume operation.

TROUBLESHOOTING

Common Issues and Solutions

- **Watch Not Running**
 - **Cause:** Insufficient charge.
 - **Solution:** Expose the watch to strong light (e.g., direct sunlight) for several hours to fully charge the secondary battery.
- **Incorrect Time/Date**
 - **Cause:** Time or date not set correctly, or watch has run out of power.
 - **Solution:** Fully charge the watch, then refer to the official Citizen website for detailed instructions on setting the time and perpetual calendar for movement E821.
- **Chronograph Malfunction**
 - **Cause:** Improper operation or need for reset.
 - **Solution:** Consult the full operating manual for movement E821 on the Citizen website for specific chronograph usage and reset procedures.

For issues not covered here, please contact Citizen customer support or visit an authorized service center.

PRODUCT SPECIFICATIONS

Feature	Detail
Movement	Eco-Drive (Light-Powered)
Accuracy	±15 seconds per month
Power Reserve	Approximately 1.5 years (with power save function)
Glass	Crystal Glass
Case/Band Material	Stainless Steel
Water Resistance	10 ATM
Functions	Perpetual Calendar, Chronograph (1/20 sec, 60 min), Luminous Hands & Indices, Date Display
Movement Number	E821
Case Dimensions	11.7 x 8.6 x 8.6 cm
Weight	126 g
Manufacturer	CITIZEN

Country of Origin	China
-------------------	-------

WARRANTY INFORMATION AND CUSTOMER SUPPORT

Warranty

As of October 1, 2025, Citizen watches purchased globally are covered by an international warranty extended from 1 year to 3 years. Please retain your warranty card.

Online Resources

For the complete operating manual and further support, please visit the official Citizen website and search for movement number E821.

Official Citizen Website: www.citizenwatch-global.com

Contact Support

For service or repair, please contact your local authorized Citizen service center.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question