

- Manuals.plus /
- › SakerPlus /
- › User Manual for SakerPlus 24V Cordless 3-in-1 Grass Trimmer

SakerPlus YY-GCJ00

User Manual

SAKERPLUS 24V CORDLESS 3-IN-1 GRASS TRIMMER

Model: YY-GCJ00

Introduction

This manual provides essential information for the safe and effective operation, assembly, and maintenance of your SakerPlus 24V Cordless 3-in-1 Grass Trimmer. Please read this manual thoroughly before first use and retain it for future reference.

The SakerPlus 3-in-1 cordless grass trimmer is designed for versatile yard care, functioning as a weed wacker, grass trimmer, and lawn edger. It features a stringless design and is suitable for various tasks from light trimming to cutting dense overgrowth.

Safety Information

Always wear appropriate personal protective equipment (PPE) including safety goggles, gloves, and sturdy footwear when operating the trimmer. Keep bystanders, children, and pets at a safe distance. Ensure the work area is clear of debris and obstacles. Do not operate the trimmer in wet conditions or near flammable liquids or gases. Always disconnect the battery before performing any adjustments, cleaning, or maintenance.

The trimmer features a two-step safety switch: press the thumb button first, then the trigger to start. Release the thumb button after starting. This design prevents accidental activation.

MULTIPLE THOUGHTFUL DESIGNS



Image: Close-up of the trimmer handle showing the safety lock button and ON/OFF switch for safe operation.

Package Contents

Upon opening the package, verify that all components are present and undamaged:

- 1 x Main Trimmer Body
- 2 x 24V 6500mAh Lithium-Ion Batteries
- 1 x Fast Charger
- 10 x Nylon Blades (Plastic Blades)
- 4 x Rhombic Metal Blades
- 2 x Circular Saw Blades
- 2 x Detachable Wheels
- 1 x Ergonomic Handle
- 1 x Safety Goggles

- 1 x Pair of Gloves
- 1 x Hex Wrench
- 1 x User Manual (this document)



Image: An overview of all parts included in the package, including the main trimmer unit, batteries, charger, various blades, wheels, handle, and safety accessories.

Setup and Assembly

1. Battery Charging

Before first use, fully charge both batteries. Connect the charger to a power outlet and insert the battery. The charging indicator will show the charging status. A full charge takes approximately 90 minutes per battery. For optimal performance, it is recommended to charge for 3 hours before the very first use.



Image: Illustration of the 24V 6500mAh lithium battery and charger, highlighting the recommended initial charging time.

2. Attaching the Ergonomic Handle

Slide the ergonomic handle onto the main shaft. Adjust its position along the shaft for comfortable grip and control, then tighten the securing mechanism with the hex wrench provided.

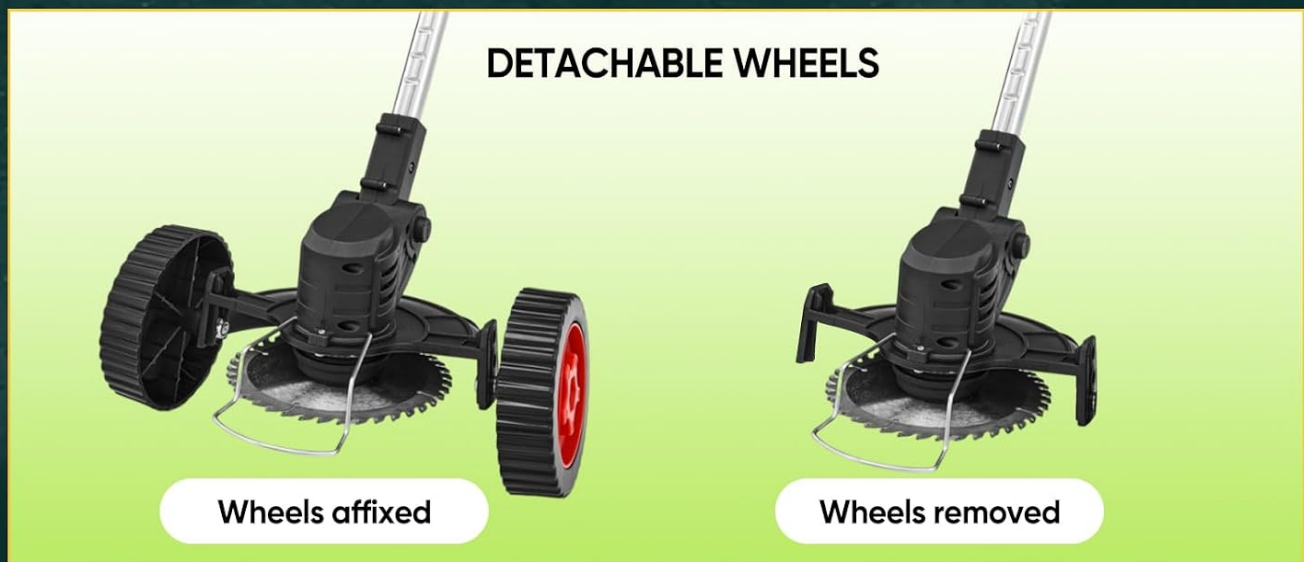


Image: Demonstrates how the ergonomic handle can be adjusted and positioned along the trimmer's shaft for user comfort.

3. Installing the Protection Cover

Attach the protection cover to the trimmer head. Ensure it is securely fastened to prevent debris from being thrown towards the user during operation.

4. Attaching Detachable Wheels (Optional)

For easier maneuverability and use as a lawn edger or wheeled trimmer, attach the two detachable wheels to the base of the trimmer head. Ensure they click into place securely.



Image: Shows the trimmer with wheels affixed for wheeled operation and with wheels removed for handheld use.

5. Blade Installation

Select the appropriate blade for your task (plastic, metal, or saw blade). Align the blade with the spindle on the trimmer head and secure it using the provided hex wrench. Ensure the blade is firmly attached before operation.

- **Plastic Blades (Nylon Blades):** Ideal for soft grass and light trimming. Diameter: 5.32 inches.
- **Metal Blades (Rhombic Metal Blades):** Suitable for cutting thick weeds and hedges. Diameter: 5.91 inches.
- **Saw Blades (Circular Saw Blades):** Designed for pruning branches and tougher bushes. Diameter: 5.91 inches.

3 DIFFERENT BLADES



PLASTIC BLADE

Ø 5.32"

Cut tender grass



METAL BLADE

Ø 5.91"

Cut thick weeds
and hedges



SAW BLADE

Ø 5.91"

Prune branches
or bushes



Image: Detailed view of the three blade types (plastic, metal, saw) and their specific applications for different cutting tasks.

Operating Instructions

1. Powering On/Off

Insert a charged battery into the battery tank. To start the trimmer, first press the safety self-locking button (thumb button), then press the power switch (trigger). Release the thumb button once the trimmer starts. To turn off, release the power switch.

2. Adjusting Telescopic Rod Length

The telescopic pole can be adjusted from 33 inches to 41 inches. Loosen the adjustable telescopic torsion mechanism, extend or retract the shaft to your desired length, and then tighten the mechanism to secure it. This allows for comfortable use by individuals of various heights and reduces back strain.

FREELY ADJUSTABLE TELESCOPIC ROD LENGTH

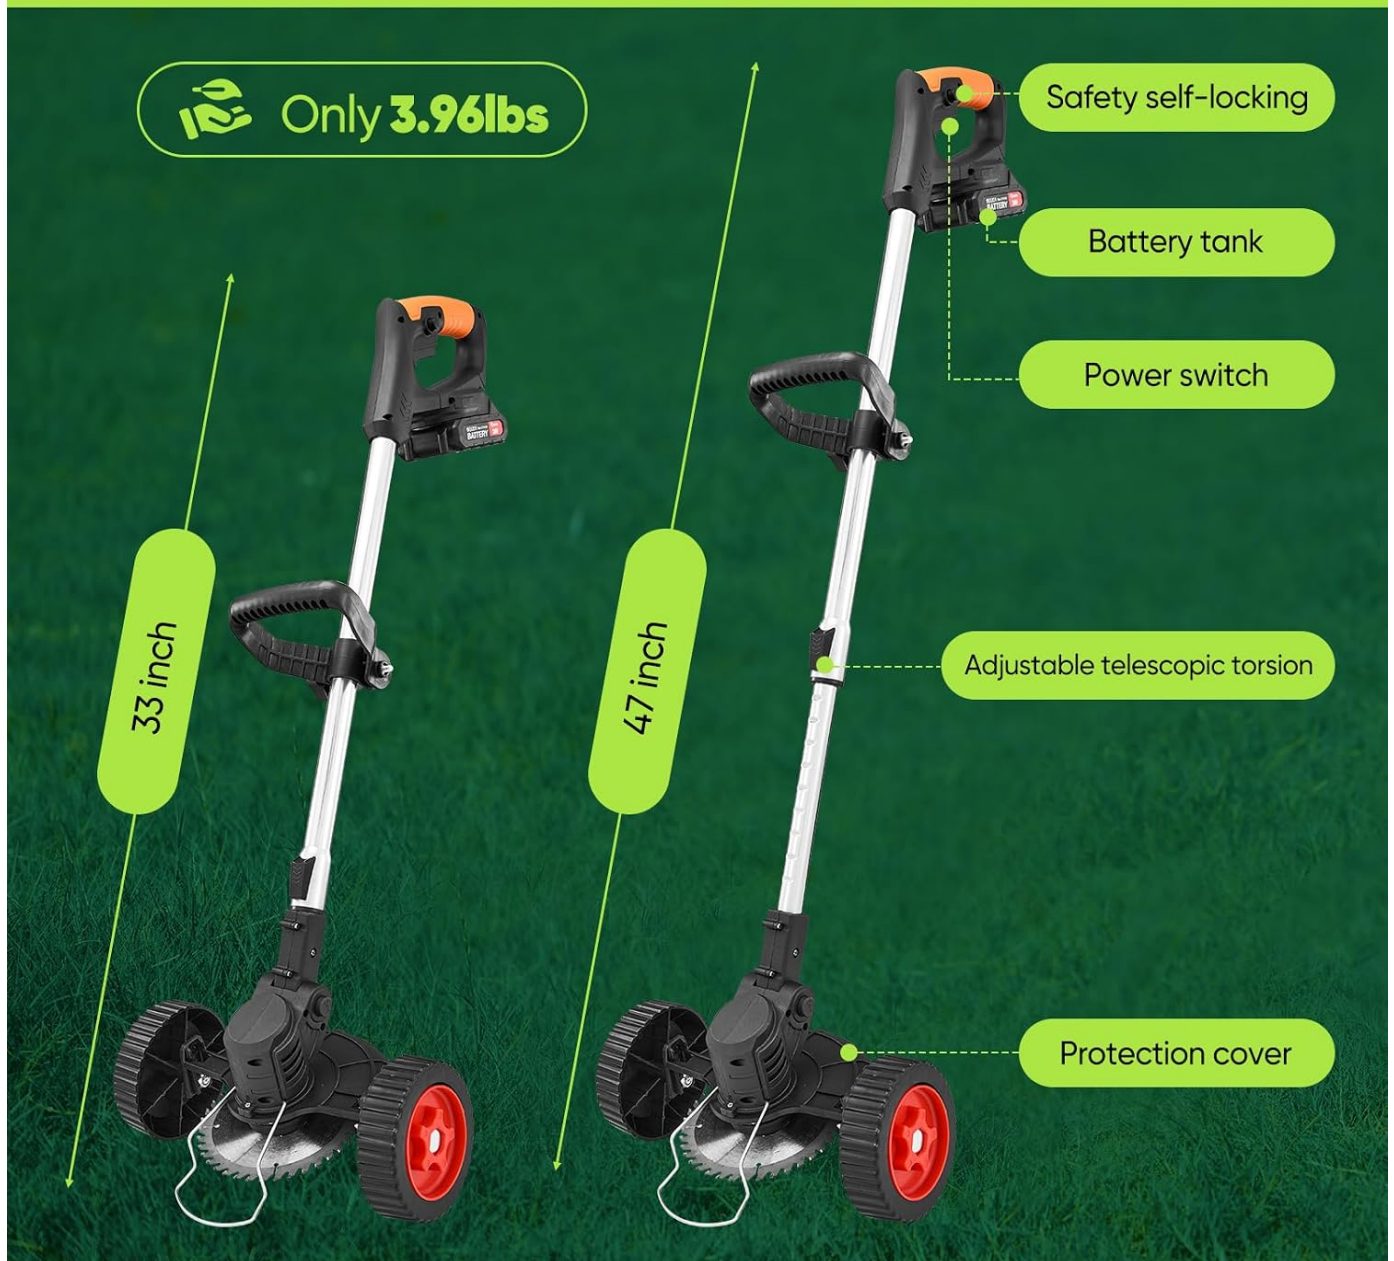


Image: Visual representation of the trimmer's adjustable length, showing both the shortest (33 inches) and longest (41 inches) configurations.

3. Adjusting Cutting Head Angle

The cutting head can rotate from 0° to 90°. Press the button for angle adjustment located near the trimmer head, set the desired angle for trimming under bushes, along fences, or on uneven terrain, and release the button to lock the angle.



Image: Illustrates the 90-degree angle adjustment feature of the trimmer head, useful for various cutting positions.


4. Operating Modes (3-in-1 Functionality)

- **Grass Trimmer:** Use with plastic blades for routine lawn maintenance and light grass trimming. Can be used handheld or with wheels.
- **Lawn Edger:** Attach the wheels and adjust the head angle to 90° for precise edging along sidewalks and driveways.
- **Brush Cutter:** Install metal or saw blades for tackling dense weeds, thick brush, or small branches.




Brush Cutter

3-IN-1 MULTIFUNCTIONAL

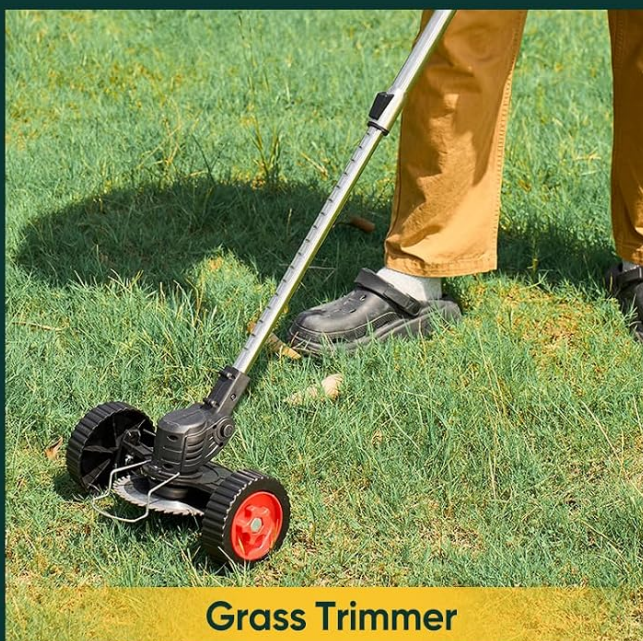

Grass Trimmer

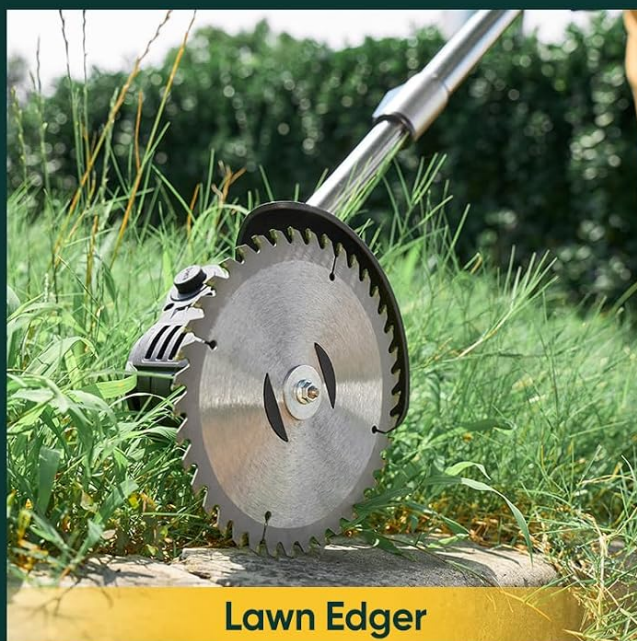

Lawn Edger

Image: Demonstrates the trimmer's versatility in three modes: as a brush cutter for dense foliage, a grass trimmer for general lawn care, and a lawn edger for clean borders.

Maintenance

Regular maintenance ensures the longevity and optimal performance of your trimmer.

- **Cleaning:** After each use, disconnect the battery and clean the trimmer head, blades, and protection cover. Remove any grass clippings, dirt, or debris. Use a damp cloth; do not use harsh chemicals or abrasive cleaners.
- **Blade Inspection and Replacement:** Regularly inspect blades for wear, damage, or dullness. Replace worn or damaged blades immediately to maintain cutting efficiency and safety. Always use genuine SakerPlus replacement blades.
- **Battery Care:** Store batteries in a cool, dry place away from direct sunlight and extreme temperatures. Do not store fully discharged batteries for extended periods. Charge batteries fully before long-term storage.
- **Storage:** Store the trimmer in a dry, secure location out of reach of children. Detach the battery before storage.

Troubleshooting

Problem	Possible Cause	Solution
Trimmer does not start.	Battery not inserted correctly or discharged. Safety switch not engaged.	Ensure battery is fully charged and properly inserted. Press the safety thumb button before the trigger.
Reduced cutting performance.	Dull or damaged blade. Excessive debris around blade.	Replace the blade. Clean the trimmer head and blade area.
Trimmer stops during operation.	Battery overheated or discharged. Motor overloaded.	Allow battery to cool down or replace with a charged battery. Avoid cutting excessively thick material.
Excessive vibration.	Blade improperly installed or damaged.	Check blade installation. Replace damaged blade.

Specifications

Feature	Detail
Brand	SakerPlus (Manufacturer)
Model Number	YY-GCJ00
Power Source	Battery Powered
Battery Type	24V Lithium Ion
Battery Capacity	6500mAh (each)
Motor Power	300W
Idle Speed	12000 RPM
Cutting Width	Up to 5.91 Inches (depending on blade)
Adjustable Length	33" to 41"
Product Dimensions	47.24"L x 8.27"W (max extended)
Item Weight	3.96 lbs (without battery) / 5.84 lbs (with battery)
Color	Red

Warranty and Support

SakerPlus products are manufactured to high-quality standards. For warranty information, technical support, or to purchase replacement parts, please contact SakerPlus customer service. Keep your purchase receipt as proof of purchase.

Note: Specific warranty terms and contact details may vary. Please refer to the product packaging or the manufacturer's official website for the most current information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FH61F1VF>

More documents and user manuals: <https://manuals.plus/>