

[Manuals.plus](#) /

› [IRIS OHYAMA](#) /

› IRIS OHYAMA 8.0kg Fully Automatic Washing Machine ITW-80B01-W Instruction Manual

## IRIS OHYAMA ITW-80B01-W

# IRIS OHYAMA 8.0kg Fully Automatic Washing Machine ITW-80B01-W Instruction Manual

## 1. PRODUCT OVERVIEW

The IRIS OHYAMA ITW-80B01-W is an 8.0kg fully automatic washing machine designed for ease of use and efficient laundry care. It features enhanced washing power, water-saving capabilities, and a large capacity suitable for households of 2-3 people or for bulk washing by individuals. The machine incorporates a powerful large water flow wash system and a durable stainless steel tub.

メーカー保証 1年

IRIS OHYAMA

全自動  
洗濯機 8kg

洗浄力

節水

大容量

時短

タイマー設定



Figure 1: IRIS OHYAMA 8.0kg Fully Automatic Washing Machine (Model ITW-80B01-W)

## 2. SETUP AND INSTALLATION

### 2.1 Unpacking and Placement

Carefully unpack the washing machine. Ensure the installation location is stable and level. Allow for slight space (4-5 cm) around the machine for ventilation and operation. Verify the presence and shape of the drain pan and the position of the drain outlet.

### 2.2 Checking Installation Space

Before installation, measure the dimensions of the entrance, elevator, and any other obstacles to ensure the washing machine can be moved to its intended location. The required width for passage is the machine's width plus 10 cm.

# 洗濯機設置サービス


設置サービス内容	設置サービス確認事項
開梱	<ul style="list-style-type: none"> <li>●「あんしん設置サービス」は商品のお届け後、開梱・指定場所への設置・給水/排水ホースの接続・開梱ごみの回収までを代行するサービスです。</li> <li>●商品だけの購入ですと、軒先渡しとなります。</li> <li>●通常経路での搬入が難しく、クレーンでのつり上げ作業が発生する場合は、別途料金が発生します。料金は搬入の際に現場確認後、現地精算となります。</li> <li>●設置前の商品を別の場所で使用する場合、移動に伴う追加料金を現地で徴収します。 (例)1階～2階へ移動し設置 (例)2世帯住宅での世帯を超えた設置</li> <li>●お届け地域によっては、出荷からお届けまで2～7日程お時間をいただく場合がございます。</li> <li>●沖縄県、北海道の道東・道北、淡路島、その他離島地域についてはサービス対象外となります。</li> <li>●家庭の蛇口の形状によっては、給水用蛇口パーツなどをご用意いただく必要があります。お持ちではない場合は、作業当日に設置業者から別途ご購入もいただけます(各1,000円～)。</li> </ul>
指定場所への設置	
給水/排水ホースの接続	
コンセントの差し込み	
開梱ごみの回収	

こちらのページの商品はリサイクル対象商品です

## リサイクル回収サービス

家電リサイクル法に基づき、ご不用になった家電をリサイクル回収いたします。  
ご希望の場合は、商品とあわせてリサイクル券をご購入下さい。  
※リサイクル券のみのご購入はできません。

「アイリスオーヤマ公式ショップ限定  
洗濯機 リサイクル券」で検索 ▶



**リサイクル回収をご希望の方は、  
下記の点をご留意の上、保管場所をご指定下さい。**

- ・洗濯機は水漏れをする場合があります。水抜き等のご対応をお願いします。
- ・重量物は床などにへこみが生じる場合があるため、そのような場所での保管を避けて下さい。(保管が望ましい場所：ベランダ、玄関内等水漏れや重量物に強い場所)
- ・盗難の恐れがある場所での保管を避けて下さい。(NG例：ゴミ集積所、エレベーターホール等第三者が自由に入れる場所)
- ・リサイクル券は現在お使いのメーカーによりタイプが異なります。対象メーカーをご確認のうえ、ご購入をお願いします。

Figure 2: Checking entrance and elevator dimensions for installation.

## 2.3 Water Supply Connection

Connect the water supply hose to the water faucet and the washing machine's water inlet. Ensure all connections are secure to prevent leaks.

## 2.4 Drain Hose Connection

Insert the drain hose into the drain outlet. If the drain outlet is directly below or to the left/right of the washing machine, ensure the hose is not bent or obstructed. For drain outlets not directly below, a drain pipe (drainage pipe) may be required. The drain hose should not be extended more than 3 meters and should be placed on a flat surface. The end of the drain hose should be no more than 10 cm above the floor to ensure proper drainage.

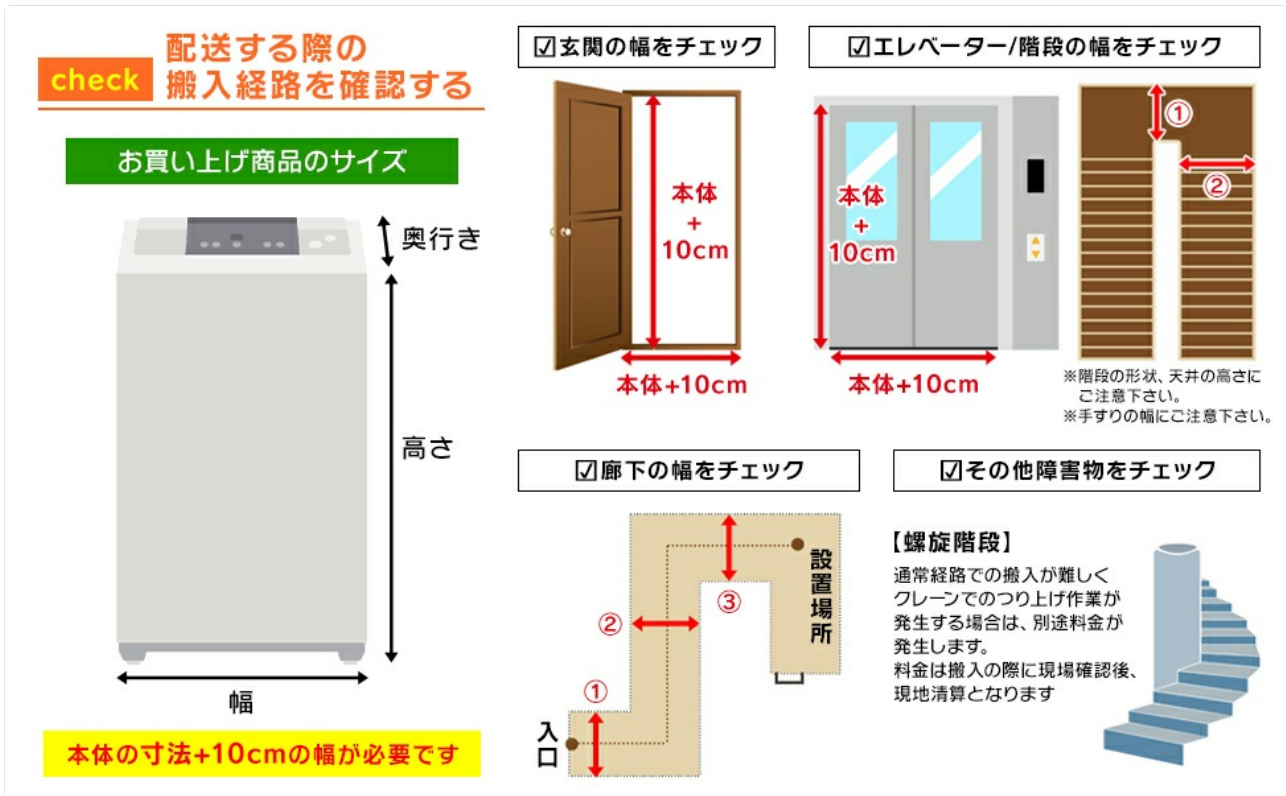


Figure 3: Correct drain hose installation.

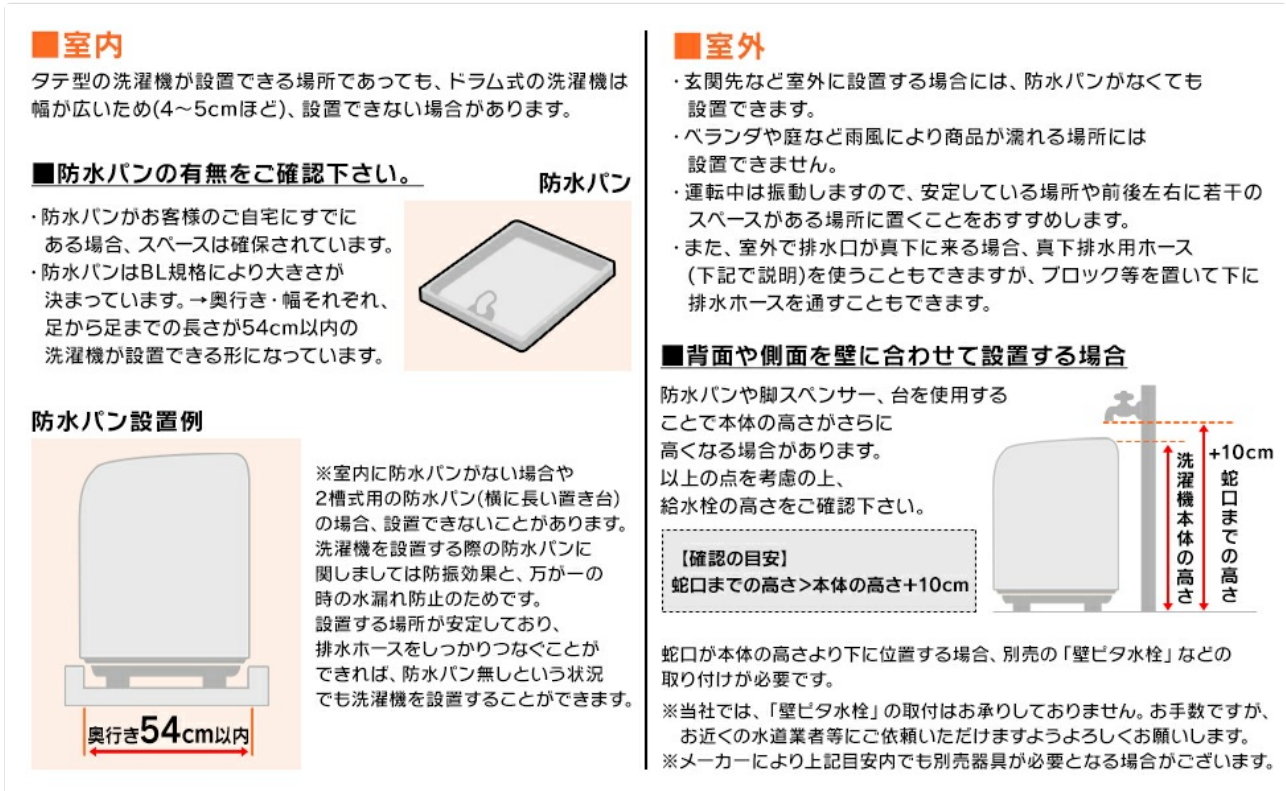


Figure 4: Drain hose extension guidelines.

## 2.5 Power Connection

Plug the power cord into a grounded electrical outlet (AC100V).

## 3. OPERATING INSTRUCTIONS

### 3.1 Loading Laundry

Open the foldable lid and load laundry into the tub. Do not overload the machine. The maximum capacity is 8.0kg, and it can wash blankets up to approximately 3kg.

＼ さらにうれしいポイント /

## 時短

洗濯時間がぐっと短くなり、忙しい時や早く家事を終えてゆっくりしたい時にも活躍。



従来品\*よりも洗濯時間  
約13分  
短縮!

※IAW-T804E、標準コースでの比較。

Figure 5: Loading laundry into the large capacity tub.

### 3.2 Selecting a Washing Course

The machine offers 6 selectable washing courses:

- **Standard:** For daily laundry.
- **Custom:** Allows you to set specific processes as desired.
- **Quick:** Shortens washing time, ideal for lightly soiled items.
- **Hand Wash:** Provides gentle washing similar to hand washing.
- **Blanket:** Specifically designed for washing blankets up to 3kg.
- **Soak:** For heavily soiled items or when odors are a concern, helps prevent fabric damage.

# 選べる洗濯モード

<b>標準</b>	<b>おこのみ</b>	<b>お急ぎ</b>
普段のお洗濯に	よく使うコースや工程を設定できる	軽い汚れの衣類のとき時間を短縮して洗濯
<b>手洗い</b>	<b>毛布</b>	<b>つけおき</b>
手洗いのように優しく洗濯	3.0kgまでの毛布をしっかりと洗濯	頑固な汚れやニオイが気になるときに

部屋干しにもおすすめ!

## 風乾燥

しっかり水分を飛ばし  
部屋干し時間を短縮!  
生乾きのニオイを抑える。



※画像はイメージです。

Figure 6: Washing machine control panel with course selection.

### 3.3 Water Level Selection

You can select from 6 water levels (26L, 31L, 36L, 44L, 53L, 61L) according to the amount of laundry, making it convenient for small loads.

### 3.4 Child Lock Function

To activate or deactivate the child lock, press the "Reservation" and "Course" buttons simultaneously for 3 seconds or more. When activated, the lid will automatically lock until the child lock is released, preventing accidental operation by children.

## 4. MAINTENANCE

### 4.1 Tub Cleaning

The washing machine features a durable stainless steel tub. To maintain cleanliness and prevent mold and odors, use the "Tub Wash" course. This course is recommended if the tub smells moldy, dirt is visible, or

detergent residue adheres to laundry.

## 4.2 Tub Drying

After washing, use the "Tub Dry" course to remove moisture from inside the washing machine. This helps suppress mold growth and keeps the tub clean and fresh.

## 5. TROUBLESHOOTING

If you encounter any issues with your washing machine, please refer to the following common troubleshooting steps before contacting customer support.

- **Machine does not start:** Check if the power cord is securely plugged in and if the water supply is open. Ensure the lid is properly closed and the child lock is not active.
- **Water does not drain:** Verify that the drain hose is not bent, clogged, or placed too high. Ensure the drain outlet is clear.
- **Unusual noise or vibration:** Check if the machine is level and stable. Ensure laundry is evenly distributed in the tub and not overloaded. Remove any foreign objects from the tub.
- **Poor washing results:** Ensure you are using the correct amount of detergent for the load size and water hardness. Select an appropriate washing course for the type and soil level of the laundry.

If the problem persists after following these steps, please contact customer support.

## 6. SPECIFICATIONS

Type	Fully Automatic Electric Washing Machine
Standard Washing Capacity	Approx. 8.0 kg
Rated Voltage	AC100V
Rated Frequency	50/60Hz
Rated Power Consumption (50/60Hz)	380W / 480W
Operating Time (Standard Course)	Approx. 43 minutes
Standard Water Consumption	Approx. 99L
Standard Water Level	Approx. 48L
Product Dimensions (W x D x H)	Excluding hose: Approx. 55.3 x 60 x 91.7 cm Including hose: Approx. 59.3 x 60 x 97 cm
Weight	Approx. 36 kg
Water Level Settings	Approx. 26-61L (6 levels)
Tub Material	Stainless Steel

## 7. WARRANTY AND SUPPORT

### 7.1 Warranty Information

This product comes with a manufacturer's warranty of **1 year from the date of purchase**. Please retain your proof of purchase for warranty claims.

### 7.2 Customer Support

For product inquiries, technical assistance, or warranty service, please contact IRIS OHYAMA customer support. Refer to the contact information provided in your product packaging or on the official IRIS OHYAMA website.