

Olycism 002

Olycism MP3 Player Model 002 Instruction Manual

Your guide to setting up and using your Olycism MP3 Player.

INTRODUCTION


This manual provides detailed instructions for the Olycism MP3 Player Model 002. Learn how to set up, operate, and maintain your device to enjoy its features, including music playback, Bluetooth 5.3 connectivity, FM radio, voice recording, e-book reading, and video viewing. Please read this manual thoroughly before using your device.

WHAT'S IN THE BOX

- Olycism MP3 Player (Model 002)
- USB Charging Cable
- User Manual

PRODUCT OVERVIEW

Familiarize yourself with the device's components and controls.

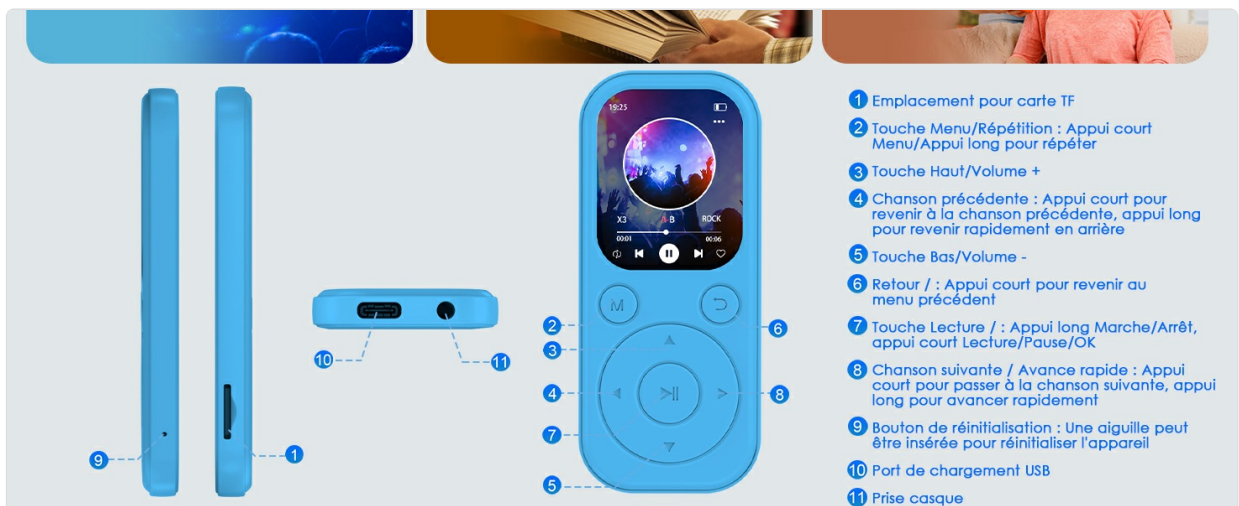

This image illustrates the various parts of the MP3 player, including the TF card slot, Menu/Repeat button, Volume Up, Previous track, Volume Down, Back button, Play/Pause/OK button, Next track, Reset button, USB charging port, and Headphone jack.

Controls and Ports:

- **1. TF Card Slot:** Insert a MicroSD card for expanded storage.
- **2. Menu/Repeat (M Button):** Short press for menu options, long press for repeat mode.
- **3. Volume Up (Up Arrow):** Increase volume.
- **4. Previous Track (Left Arrow):** Short press for previous song, long press for fast rewind.
- **5. Volume Down (Down Arrow):** Decrease volume.
- **6. Back (Curved Arrow):** Return to the previous menu.
- **7. Play/Pause/OK (Center Button):** Short press to play/pause, press to confirm selections.
- **8. Next Track (Right Arrow):** Short press for next song, long press for fast forward.
- **9. Reset Button:** A small pinhole for resetting the device if it becomes unresponsive.
- **10. USB Charging Port:** Connect the USB cable for charging and data transfer.
- **11. Headphone Jack:** Connect your wired headphones.

Upgrade Bluetooth 5.3 Connection



The latest version of Bluetooth 5.3 has more stable transmission and better compatibility. Enjoy the music.

The MP3 player is compact and lightweight, measuring approximately 3.74 x 1.57 x 0.24 inches and weighing only 26 grams.

SETUP

1. Charging the Device

Before first use, fully charge the MP3 player. Connect the provided USB cable to the device's USB charging port and plug the other end into a USB power adapter (not included) or a computer's USB port. The battery indicator on the screen will show charging status. A full charge provides up to 15 hours of continuous playback.

2. Power On/Off

- **To Power On:** Long press the Play/Pause/OK button (center button) until the screen lights up.
- **To Power Off:** Long press the Play/Pause/OK button until the screen turns off.

3. Transferring Files

The device has 64GB of built-in memory and supports expansion up to 256GB via a TF (MicroSD) card (not included). To transfer files:

1. Connect the MP3 player to your computer using the USB cable.
2. The device will appear as a removable disk on your computer.
3. Drag and drop your music, video, image, or e-book files into the appropriate folders on the MP3 player. For music, it is recommended to create folders (e.g., by artist or album) for better organization.
4. Safely eject the device from your computer before disconnecting the USB cable.



The MP3 player comes with 64GB of internal storage and can be expanded with a TF card up to 256GB. Note: A memory

card is not included.

OPERATING INSTRUCTIONS



The MP3 player offers multiple functions including music, recording, video, e-book, Bluetooth, HiFi sound, FM radio, picture viewing, and expandable storage.

1. Music Playback

- From the main menu, navigate to "Music" and press the Play/Pause/OK button.
- Browse your music library by artist, album, or all songs.
- Select a song and press Play/Pause/OK to start playback.
- Use the Left/Right arrows for previous/next track, and Up/Down arrows for volume control.
- Supported audio formats include MP3, WMA, FLAC, APE, and WAV.



Upgrade Bluetooth 5.3 Connection

The latest version of Bluetooth 5.3 has more stable transmission and better compatibility. Enjoy the music.



Enjoy high-fidelity sound with support for various audio formats including MP3, WAV, FLAC, AAC, WMA, and APE.

2. Bluetooth Connection

Connect your MP3 player wirelessly to Bluetooth headphones or speakers.

1. From the main menu, navigate to "Bluetooth" and press Play/Pause/OK.
2. Ensure Bluetooth is enabled on your headphones or speaker and they are in pairing mode.
3. Select "Search Device" on the MP3 player.
4. Choose your device from the list and confirm pairing.

Écran MP3 ultra-haute définition Fabriqué en cristaux liquides TFT



The upgraded Bluetooth 5.3 technology ensures a fast and stable wireless connection for your audio devices.

3. FM Radio

- Navigate to "FM Radio" from the main menu.
- Connect wired headphones as they act as the antenna.
- Use the menu options to auto-scan for stations or manually tune.

4. Voice Recorder

- Go to "Recording" from the main menu.
- Select "Start Record" to begin. Press Play/Pause/OK to pause/resume, and the Back button to stop and save.

5. E-book Reader

- Navigate to "E-book" from the main menu.
- Select your desired text file to open.
- Use the navigation buttons to scroll through pages.

6. Video Playback

- Go to "Video" from the main menu.
- Select a video file to play. The device features a 2.01-inch TFT color screen.

7. Image Viewer

- Navigate to "Picture" from the main menu.
- Select an image file to view.

MAINTENANCE

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the device. Do not use liquid cleaners or aerosols.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping the device or subjecting it to strong impacts. Do not attempt to disassemble or repair the device yourself.

TROUBLESHOOTING

Problem	Solution
---------	----------

Problem	Solution
Device does not turn on.	Ensure the battery is sufficiently charged. Connect to a power source and try again.
Cannot transfer files to the device.	Check the USB cable connection. Ensure the device is properly recognized by your computer. Try a different USB port or cable. Ensure the device is in data transfer mode if prompted.
Bluetooth connection fails or is unstable.	Ensure Bluetooth is enabled on both the MP3 player and the receiving device (headphones/speaker). Make sure both devices are in pairing mode and within range. Try unpairing and re-pairing.
Buttons are unresponsive or device freezes.	Locate the reset pinhole (usually on the side or bottom) and gently press it with a thin object (like a paperclip) to restart the device.
Music files are not appearing or are disorganized.	Ensure files are transferred to the correct music folder on the device. Organize your music into clear folders (e.g., by artist or album) for easier navigation.

SPECIFICATIONS

Feature	Detail
Brand	Olycism
Model	002
Connectivity Technology	Bluetooth 5.3
Internal Storage	64 GB
Expandable Storage	Up to 256 GB (via TF/MicroSD card)
Display Size	2.01 inches
Display Technology	TFT
Battery Capacity	300 mAh
Battery Life (Playback)	Up to 15 hours
Supported Audio Formats	MP3, WMA, FLAC, APE, WAV
Special Features	FM Radio, Voice Recorder, E-book Reader, Video Playback, Image Viewer
Weight	26g
Dimensions (H x W x D)	3.74 x 1.57 x 0.24 inches

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the contact details provided with your purchase documentation or visit the official Olycism website. Keep your proof of purchase for any warranty claims.

