

[Manuals.plus](#) /

› [FANMIS](#) /

› FANMIS Unisex Dual Display Sports Watch Model 3306 Instruction Manual

FANMIS 3306

FANMIS Unisex Dual Display Sports Watch Model 3306 Instruction Manual

Model: 3306

1. INTRODUCTION

Thank you for choosing the FANMIS Unisex Dual Display Sports Watch, Model 3306. This watch combines classic analog timekeeping with modern digital functions, designed for versatility and durability. It features a 5ATM water resistance rating, making it suitable for daily activities like handwashing and rain exposure. This manual provides detailed instructions to help you get the most out of your watch.



Image 1.1: Front view of the FANMIS Unisex Dual Display Sports Watch.

2. WATCH COMPONENTS

Familiarize yourself with the watch's buttons and display areas:

- **MODE Button:** Used to cycle through different digital modes (Time, Alarm, Stopwatch, Dual Time).
- **LIGHT Button:** Activates the backlight for visibility in low-light conditions.
- **START Button:** Used to start/stop functions in Stopwatch mode, and adjust settings in setting modes.
- **RESET Button:** Used to reset functions in Stopwatch mode, and select items in setting modes.
- **Analog Display:** Shows time with traditional hour, minute, and second hands.
- **Digital Display:** Shows time, date, day, and other digital functions.



Image 2.1: Close-up view of the watch face, highlighting the analog and digital displays and control buttons.

3. SETUP AND TIME SETTING

3.1 Setting Digital Time and Date

1. From the normal time display, press the **MODE** button three times to enter the time setting mode. The seconds will flash.
2. Press the **RESET** button to cycle through the setting items: Seconds → Hour → Minute → Month → Date → Day of Week.
3. Use the **START** button to adjust the flashing value.
4. Once all settings are correct, press the **MODE** button to exit the setting mode.

3.2 Setting Analog Time

The analog hands are set independently from the digital display.

1. Pull out the crown (small knob on the right side of the watch case) to the first click position.
2. Rotate the crown to adjust the hour and minute hands to the desired time.
3. Once the analog time is set, push the crown back in to secure the setting and start the analog movement.

4. OPERATING MODES

Press the **MODE** button to cycle through the following functions:

- **Normal Time Display:** Shows current digital time, date, and day.
- **Alarm Mode:** Set and activate daily alarms.
- **Stopwatch Mode:** Measure elapsed time.
- **Dual Time Mode:** Display a second time zone.

4.1 Alarm Function

1. Press **MODE** once to enter Alarm mode. The alarm time will be displayed.
2. Press **RESET** to select the hour or minute to set.
3. Use **START** to adjust the flashing value.
4. Press **MODE** to confirm and exit.
5. To turn the alarm ON/OFF, press **START** while in Alarm mode. An alarm icon will appear/disappear.

4.2 Stopwatch Function

1. Press **MODE** twice to enter Stopwatch mode.
2. Press **START** to begin timing.
3. Press **START** again to pause timing.
4. Press **RESET** to clear the stopwatch to zero.
5. To resume timing after pausing, press **START**.

4.3 Backlight

Press the **LIGHT** button at any time to illuminate the digital display for a few seconds.

Your browser does not support the video tag.

Video 4.1: Demonstration of the watch's various functions and features.

5. MAINTENANCE AND CARE

5.1 Water Resistance (5ATM)

This watch is rated 5ATM (50 meters) water resistant. This means it is suitable for:

- Daily splashes
- Handwashing
- Rain exposure
- Cold showers

Important Warnings:

- **DO NOT** press any buttons underwater.
- **DO NOT** expose the watch to hot water, steam, or hot showers, as this can damage the waterproof seals.

- NOT suitable for diving or high-pressure water activities.



5ATM WATER RESISTANT

Engineered to withstand daily water exposure with confidence.

- 5ATM Water Resistant
- Daily Protection
- Reliable & Durable
- Built for Everyday Life

SUITABLE FOR



HAND WASHING
Everyday use



RAIN
Safe in the rain



DAILY SPLASHES
For everyday activities

NOT SUITABLE FOR



HOT SHOWER / STEAM
Hot water can damage the watch



DIVING / HIGH-PRESSURE WATER
Not suitable for diving or deep-water activities

NOTE: Do not press buttons underwater.
Avoid operating buttons underwater or exposing the watch to hot water.

Image 5.1: Visual guide to the watch's 5ATM water resistance capabilities and limitations.

5.2 Cleaning

To clean your watch, wipe it with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials that could damage the case or strap.

5.3 Battery Replacement

The watch is powered by a quartz battery. When the display dims or functions become erratic, it may be time for a battery replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure the water resistance seal is maintained.

TPU watch strap

Wear it all day without
any burden



Stainless steel bottom cover

Daily waterproof not easy to rust
Brand logo, craftsmanship

Image 5.2: View of the watch's stainless steel bottom cover, indicating durability and craftsmanship.

6. TROUBLESHOOTING

- **Digital Display is Blank:** The battery may be low or depleted. Replace the battery.
- **Incorrect Time Display:** Ensure both analog and digital times are set correctly as per Section 3.
- **Buttons Not Responding:** Check if the watch is in a setting mode. If not, a battery replacement might be needed, or contact support.

- **Water Inside Watch:** If moisture appears inside the watch, stop using it immediately and seek professional repair to prevent further damage.

7. SPECIFICATIONS

Feature	Specification
Model Name	3306
Brand	FANMIS
Display Type	Analog-Digital
Watch Movement	Quartz
Water Resistance Depth	50 meters (5ATM)
Case Material	Acrylonitrile Butadiene Styrene (ABS)
Band Material	Thermoplastic Polyurethane (TPU)
Clasp Type	Buckle
Case Diameter	5.7 centimeters
Case Thickness	15 millimeters
Band Width	20 millimeters
Band Length	21 centimeters
Item Weight	4.54 grams
Additional Features	Alarm, Easy Reader, Stopwatch, Dual Time Zone, Backlight

8. WARRANTY AND SUPPORT

8.1 Return Policy

This product is subject to a 30-day return policy for refund or replacement. Please refer to your purchase platform for specific return instructions.

8.2 Customer Support

For further assistance or inquiries, please visit the official FANMIS store or contact customer service through your purchase platform.

Visit the [FANMIS Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question