

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [NBD](#) /
- › [NBD K200 64MP 4K Digital Camera Instruction Manual](#)

NBD K200

NBD K200 64MP 4K Digital Camera Instruction Manual

Model: K200

1. INTRODUCTION

Thank you for choosing the NBD K200 64MP 4K Digital Camera. This manual provides essential information for setting up, operating, and maintaining your camera to ensure optimal performance. Please read this manual thoroughly before using the camera and retain it for future reference.



2. PRODUCT OVERVIEW

2.1 What's in the Box

- NBD K200 Camera Body
- 32GB TF Card (pre-installed or separate)
- USB-C Cable
- Neck Strap
- Lens Cleaning Cloth
- Card Reader

BEST GIFT



Image 2.1: Included accessories with the NBD K200 camera.

2.2 Key Features

- **64 Megapixel Photos:** Capture high-resolution still images.
- **4K Video Recording:** Record videos in Ultra HD resolution.
- **16X Digital Zoom:** Magnify distant subjects for detailed shots.
- **Auto Focus:** Ensures subjects are sharp and clear.
- **Anti-Shake Stabilization:** Reduces blur from camera movement.
- **Multiple Scene Modes:** Includes Sport, Portrait, Night, Beauty, and Burst modes.

- **Compact and Portable Design:** Lightweight for easy carrying.
- **High-Speed USB Transfer:** Facilitates quick transfer of files to other devices.

3. SETUP

3.1 Battery Installation and Charging

1. Locate the battery compartment cover on the camera.
2. Open the cover and insert the two included Lithium-Ion batteries, ensuring correct polarity.
3. Close the battery compartment cover securely.
4. Connect the camera to a power source using the provided USB-C cable to fully charge the batteries before first use. A full charge allows for approximately 300 photos.

3.2 Memory Card Installation

1. Locate the TF card slot on the side of the camera.
2. Insert the included 32GB TF card into the slot until it clicks into place. Ensure the card is inserted in the correct orientation.
3. To remove the card, gently press it inward until it springs out.

3.3 Attaching the Neck Strap

Thread the neck strap through the designated loop on the camera body to prevent accidental drops and for convenient carrying.



Image 3.1: The NBD K200 camera with an attached neck strap for portability.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- To power on, press and hold the power button until the screen illuminates.
- To power off, press and hold the power button again until the screen turns off.

4.2 Taking Photos

1. Ensure the camera is in photo mode (indicated on the LCD screen).
2. Frame your shot using the LCD screen. The camera features auto-focus to ensure clarity.
3. Press the shutter button halfway to activate auto-focus, then press fully to capture the image.

64MP AUTOFOCUS PORTABLE DIGITAL CAMERA

3/5/7/10-second timer lets you capture selfies and group shots



Image 4.1: Demonstrating autofocus and timer for capturing photos.

4.3 Recording Videos

1. Switch the camera to video mode using the Multi-Functional Roller Button or menu options.
2. Press the shutter button to start recording. A red indicator will typically appear on the screen.
3. Press the shutter button again to stop recording.

SUPPORTS 4K UHD VIDEO



Image 4.2: Capturing 4K video with the NBD K200 camera.

4.4 Zoom Function

Utilize the 16X digital zoom by adjusting the Multi-Functional Roller Button. Roll it left to zoom out and right to zoom in. The zoom level will be displayed on the screen.




Image 4.3: Using the 16X stepless zoom feature.

4.5 Shooting Modes and Filters

The NBD K200 offers various shooting modes and built-in filters to enhance your photography:

- **Sport Mode:** Optimized for capturing fast-moving subjects.
- **Portrait Mode:** Enhances facial features and softens backgrounds.
- **Night Mode:** Improves image quality in low-light conditions.
- **Beauty Mode:** Applies subtle enhancements to portraits.
- **Burst Mode:** Captures a rapid sequence of photos.

 - **Built-in Filters:** Apply effects like Vintage, Warm Tone, Cool Tone, Sepia, Sketch, and Japan Style.

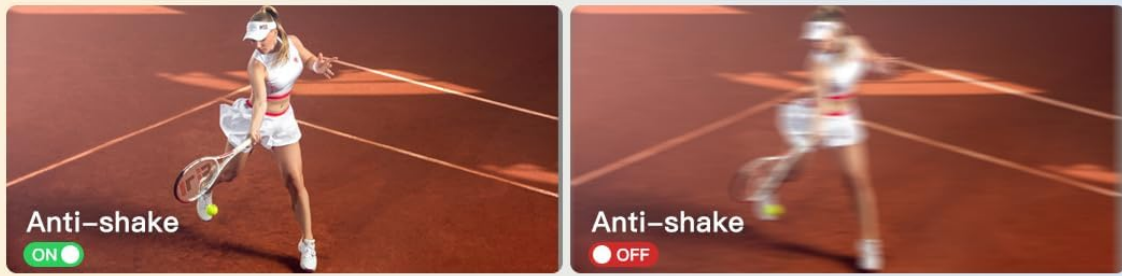

K200 *NEWEST MULTIPLE MODES*

All-in-One Camera, Master Every Shot



Image 4.4: Overview of K200's multiple shooting modes.

BEAUTY, FILTERS & BURST SHOOTING

Perfect Shots, Fast Captures, Effortless

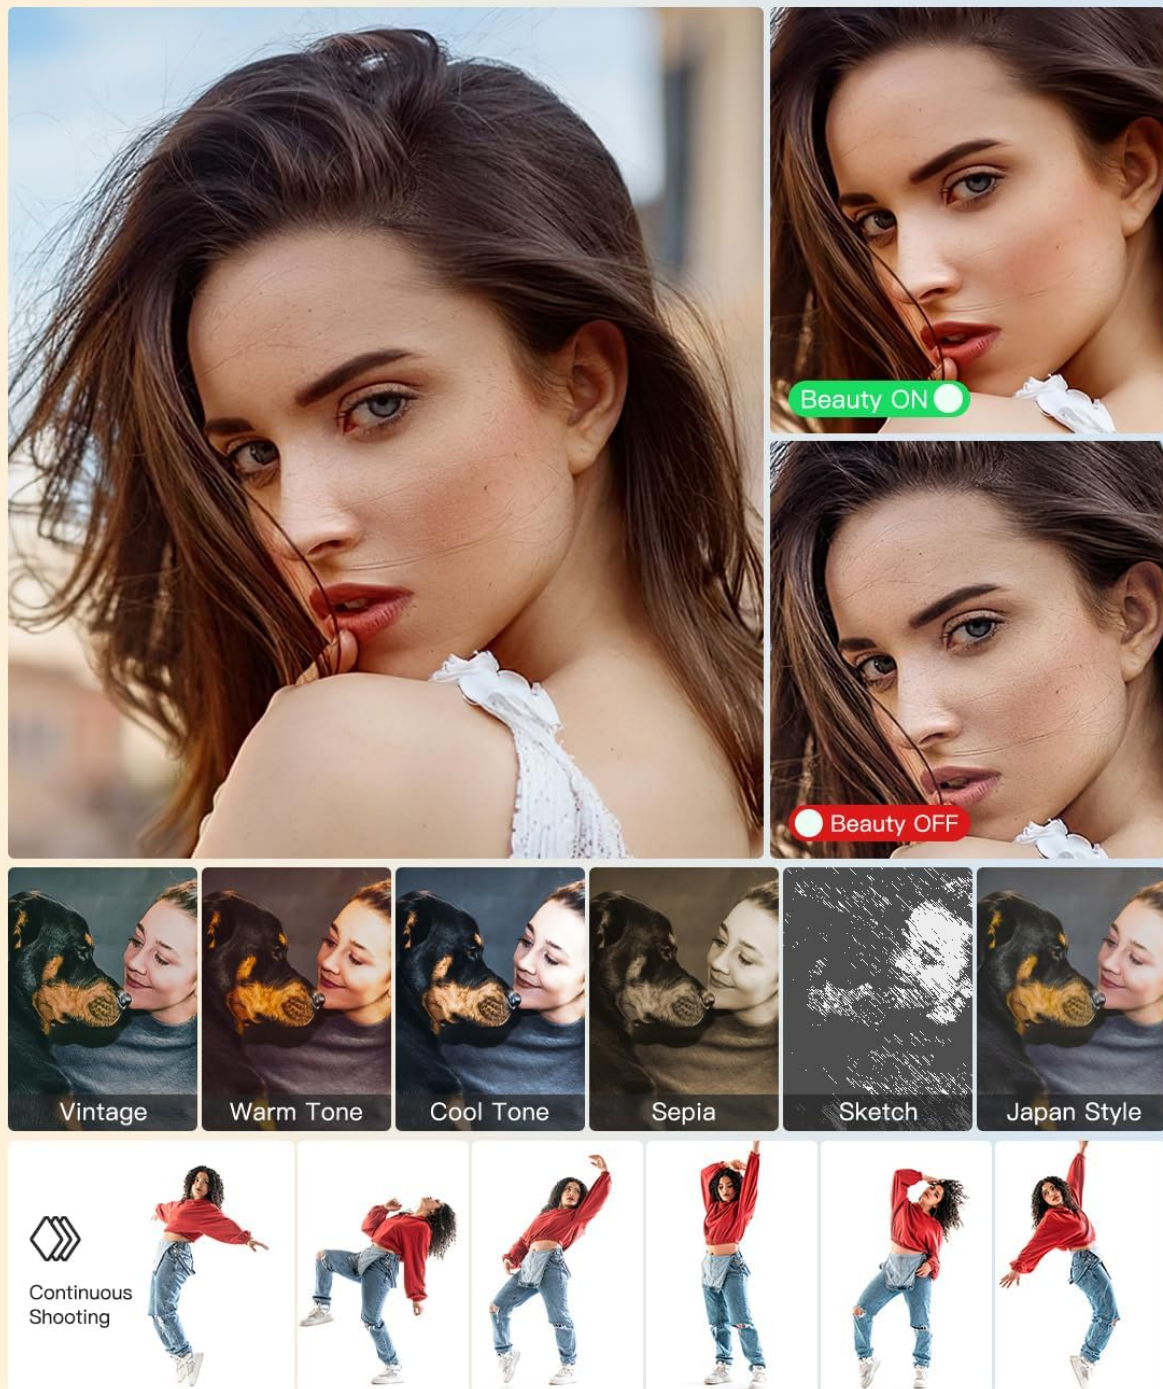 


Image 4.5: Examples of beauty mode, filters, and burst shooting.

4.6 Using the Flash

The camera features a built-in flash for illuminating subjects in low-light conditions. The flash can be activated or deactivated via a dedicated physical button or through the camera's menu settings.


4.7 Transferring Files

To transfer photos and videos to a computer or smartphone:

1. Connect the camera to your device using the provided USB-C cable.
2. The camera will appear as a removable drive on your computer.

3. Drag and drop files from the camera's memory card to your desired location.
4. Alternatively, remove the TF card and use the included card reader to transfer files.

**ONE - BUTTON AUTOFOCUS
& INSTANT SHARE**



* Only a TYPE-C to USB data cable is included; a TYP-C-TYP-C-interface data cable must be purchased separately.

Image 4.6: One-button autofocus and instant sharing capabilities.

5. MAINTENANCE

5.1 Cleaning the Camera

- Use the provided lens cleaning cloth to gently wipe the lens and screen.
- For the camera body, use a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.

5.2 Storage

- Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- Remove batteries if the camera will not be used for an extended period.

6. TROUBLESHOOTING

Problem	Possible Solution
Camera does not power on.	Ensure batteries are correctly inserted and fully charged. Try charging the camera for at least 30 minutes.
"No Card" error message.	Check if the TF card is inserted correctly. Reinsert the card or try a different compatible TF card.
Images are blurry.	Ensure auto-focus is engaged. Clean the lens. Use anti-shake stabilization if available. Ensure sufficient lighting.
Cannot transfer files to computer.	Verify the USB-C cable connection. Try a different USB port or computer. Ensure the camera is powered on during transfer.

7. SPECIFICATIONS

Feature	Detail
Model Name	K200
Photo Sensor Technology	CMOS
Maximum Photo Resolution	64 MP
Video Resolution	2160p (4K) at 30 FPS
Digital Zoom	16x
Image Stabilization	Optical
Auto Focus Technology	Contrast Detection (19 points)
Aperture	F1.8
Screen Size	3 Inches LCD
Memory Storage	32 GB TF Card (included)
Supported File Format	JPEG, MP4
Battery Type	2 Lithium Ion batteries (included)
Item Weight	0.26 Kilograms
Connectivity Technology	USB-C
Water Resistance Level	Not Water Resistant

8. WARRANTY AND SUPPORT

© 2025 NBD. All rights reserved.

User Manual for S210



 
Comprehensive user manual for the NBD S210 digital camera, covering setup, features, shooting modes, settings, and connectivity.

Comprehensive user manual for the K200 Hidden Dash Cam. Learn how to install, connect to the Viidure app, configure settings, and troubleshoot common issues for your dash camera.


**User Manual for D100
Video Camera**



Comprehensive user manual for the D100 PRO 5K Ultra HD Video Camera, covering setup, operation, troubleshooting, and maintenance. Learn how to charge the battery, insert memory cards, connect to devices, and utilize various camera features.

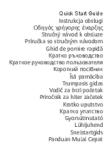

 This document provides a quick start guide for the Huawei MateBook D14 and D15 laptops, covering powering on, charging, safety information, disposal and recycling, RF exposure, and regulatory compliance. It is available in multiple languages.
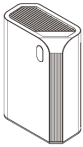
<div>User Manual</div> <div></div>	<div>NBDair Air Purifier User Manual</div> <div>Comprehensive user manual for the NBDair NBD-AFU0 air purifier, covering essential safety instructions, setup procedures, operational guidance, filter replacement, maintenance, troubleshooting, technical specifications, packing details, and FCC compliance information.</div>
<div>Keyboard manual</div> <div><p>***Connect Bluetooth</p><p>BT1: Hold on the back of the BT1 for at least 5 seconds, after the LED light starts to flash, the Bluetooth keyboard and mouse "BT Keyboard" or "BT Mouse" will be connected.</p><p>BT2: Hold on the back of the BT2 for at least 5 seconds, after the LED light starts to flash, the Bluetooth keyboard and mouse "BT Keyboard" or "BT Mouse" will be connected.</p><p>Note: After you press the BT1 or BT2, you should see the connection.</p><p>***Change connection system</p><p>BT1: Hold on the back of the BT1 for at least 5 seconds, after the LED light starts to flash, the Bluetooth keyboard and mouse "BT Keyboard" or "BT Mouse" will be connected.</p><p>BT2: Hold on the back of the BT2 for at least 5 seconds, after the LED light starts to flash, the Bluetooth keyboard and mouse "BT Keyboard" or "BT Mouse" will be connected.</p><p>Note: After you press the BT1 or BT2, you should see the connection.</p></div>	<div>Woogoo K200 Keyboard User Manual and Connectivity Guide</div> <div>User manual for the Woogoo K200 keyboard, detailing Bluetooth connectivity, OS switching, key functions, and FCC compliance information.</div>