

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [PGYTECH](#) /

> [PGYTECH Camera Strap Pro Instruction Manual - Model Adjustable](#)

PGYTECH Adjustable

PGYTECH Camera Strap Pro Instruction Manual

Model: Adjustable

INTRODUCTION

The PGYTECH Camera Strap Pro is a professional camera harness designed for photographers seeking efficient shooting, enhanced stability, and comfortable carrying. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your camera strap.

PRODUCT OVERVIEW

The Camera Strap Pro features an ergonomic design with premium materials, including genuine leather and EPDM foam for the shoulder pad, ensuring comfort during extended use. Key components include a detachable underarm strap for stability, quick-release buckles for swift camera access, and a three-layer webbing with a visual wear indicator for safety.

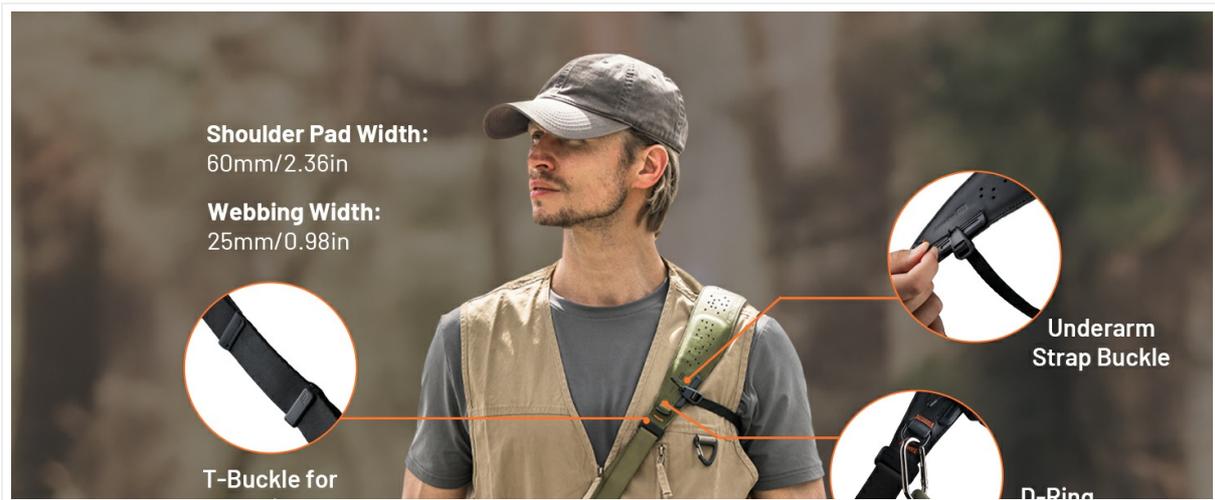


Figure 1: Overview of PGYTECH Camera Strap Pro components, highlighting the T-Buckle for length adjustment, Tension Buckle for smooth webbing, Quick Mount Bead for secure attachment, Underarm Strap Buckle for quick installation/removal, D-Ring Clip for accessories, and Lock/Unlock Strap mechanisms.

Video 1: A brief overview of the PGYTECH Camera Strap Pro, demonstrating its quick-release (QR) system and comfort features for all-day use.

SETUP

1. Attaching the Quick-Release Plate and Quick-Mount Beads

1. **Choose Equipment:** Select the camera or equipment to be mounted.
2. **Install Quick-Release Plate:** Securely attach the quick-release plate to the bottom of your camera using the provided S4 Hex Wrench. Ensure the screw is tightened properly for a stable installation.
3. **Attach Quick-Mount Beads:** Insert the quick-mount beads into the two mounting holes located near the camera screen side of the quick-release plate. These beads are designed to support up to 90kg of load.
4. **Secure to Strap:** Press the quick-mount bead into the strap's quick-release clip until you hear a click, confirming it is locked. Repeat for the second bead.

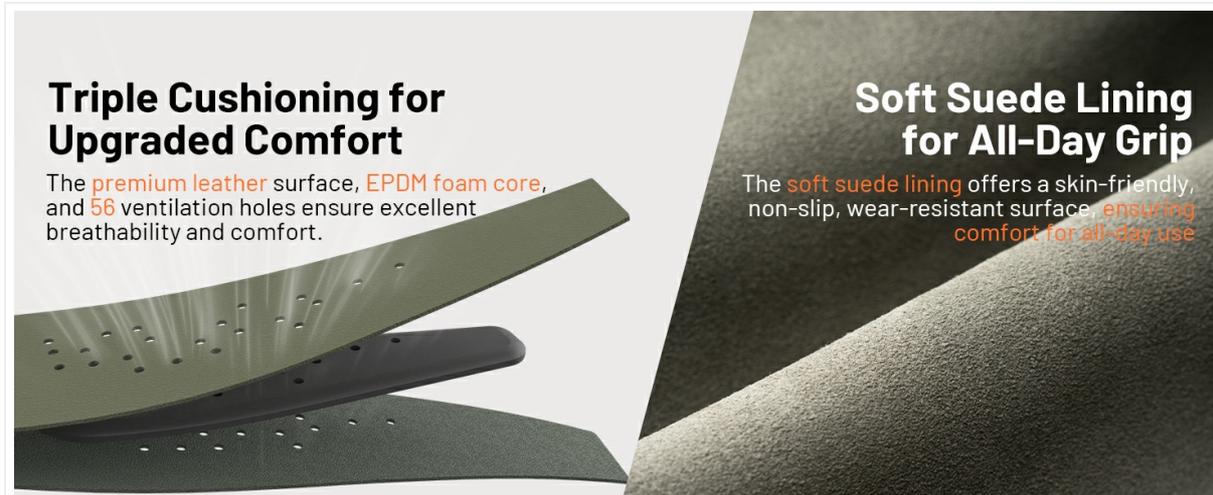


Figure 2: Step-by-step visual guide for installing the quick-release plate and quick-mount beads onto your camera. Ensure all connections are secure.

Video 2: Detailed instructions on how to set up the PGYTECH Camera Strap Pro, including attaching the quick-release plate and quick-mount beads.

2. Wearing and Adjusting the Strap

1. **Position Shoulder Pad:** Place the ergonomic shoulder pad comfortably over your shoulder.
2. **Adjust Main Strap Length:** Use the T-Buckle to adjust the main strap length to fit your body shape and preferred carrying height. The strap is adjustable from 32.6 to 57 inches, suitable for users from 150-190cm (4.9-6.2ft) in height. Fold and tidy any excess webbing.
3. **Attach Underarm Strap:** Secure the back end of the detachable underarm strap to the designated slot on the shoulder pad. Adjust the webbing to the desired length and secure the front underarm strap to complete wearing. This strap provides triple-point stability and can be adjusted to 4 positions.

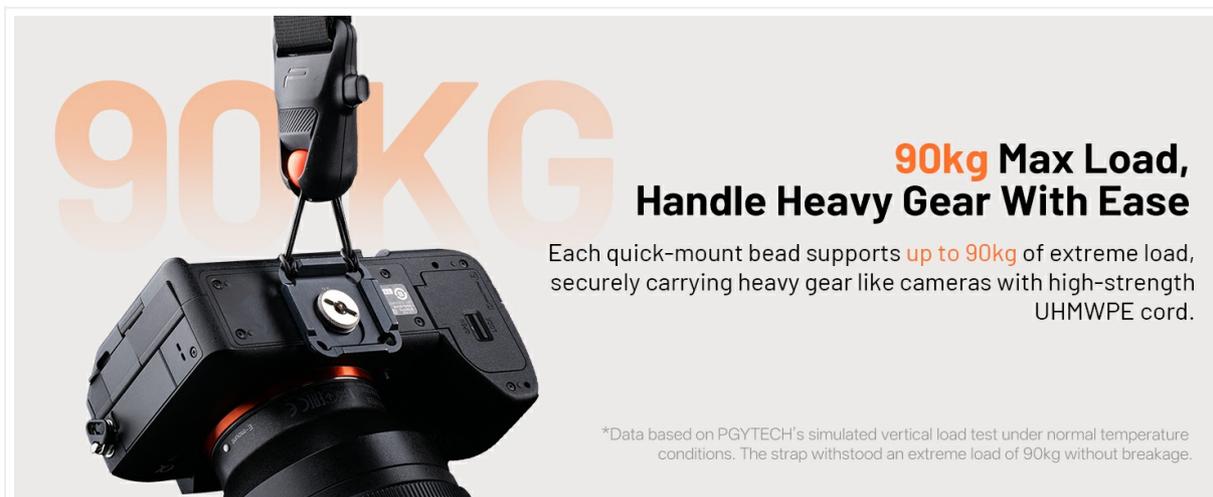


Figure 3: The detachable underarm strap offers 4-level adjustment for optimal fit and enhanced stability, preventing camera sway during movement.

Video 3: Demonstrates the PGYTECH Camera Strap Pro with its detachable underarm strap, showcasing its functionality and how it enhances camera stability.

OPERATING THE CAMERA STRAP PRO

1. Quick Camera Access and Locking

- **Slide-to-Shoot:** To quickly access your camera for shooting, press the top unlock button on the quick-release clip. This allows the camera to smoothly slide up the strap into shooting position.
- **Secure Locking:** When not actively shooting, press the side lock button on the quick-release clip to secure the camera in place. This prevents shaking interference and ensures safe mounting.

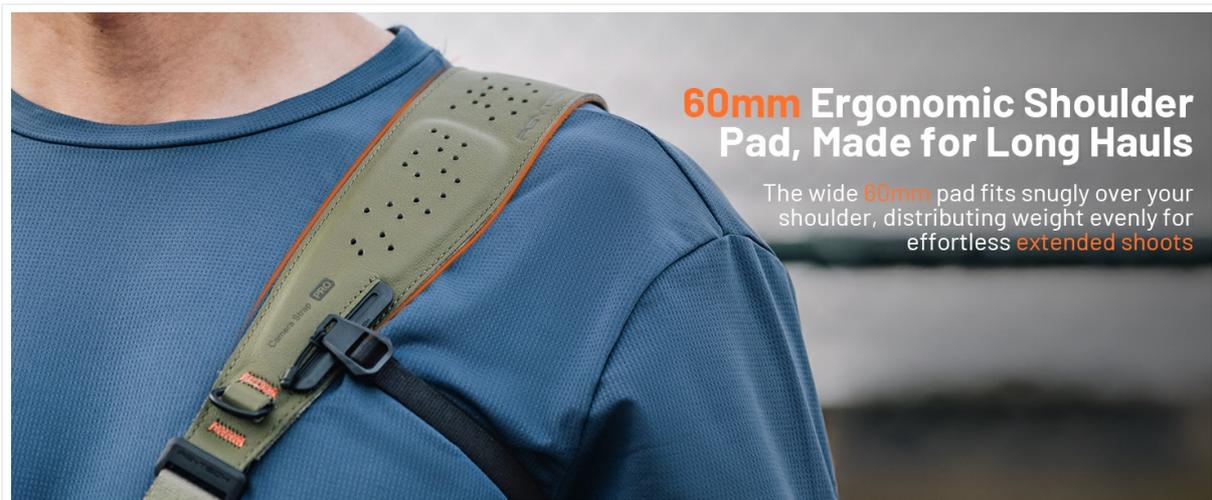


Figure 4: Visual guide for using the quick-lock buckle, demonstrating how to secure the camera for stable attachment and unlock for instant shooting.

2. Versatile Carry Modes

- **Crossbody Carry:** The standard configuration allows for comfortable crossbody carrying, keeping your camera accessible at your hip.
- **Single-Shoulder Carry:** Detach the underarm strap instantly to switch to a single-shoulder carry mode, adapting to various shooting scenarios like street photography or sports.

Single/Cross-Body in 1 Sec: Adapt to Any Scene



Figure 5: The strap supports both single-shoulder and crossbody carrying, offering flexibility to adapt to any scene effortlessly.

3. Accessory Integration

- **D-Ring Clip:** Utilize the built-in D-ring to attach small accessories such as lens caps, pouches, or other tools for quick access during shoots.

MAINTENANCE

- **Cleaning:** Wipe the strap regularly with a soft, damp cloth to remove dust and dirt. For leather components, use a leather-safe cleaner and conditioner as needed.
- **Inspect Wear Indicator:** The three-layer webbing includes a visual wear indicator (yellow core). If the yellow layer becomes exposed, it signifies that the strap needs timely replacement to maintain safety and prevent equipment damage.
- **Check Connections:** Periodically inspect all buckles, clips, and quick-mount beads for any signs of wear, damage, or loosening. Ensure the quick-release plate screw is always tight.



Three-Layer Visual Wear Indicator: Safety You Can See

The three-layer structure provides a visible wear indicator—when the yellow inner layer is exposed, it's time to replace the strap for continued safety.



Patented Anti-loosening Design for Ultimate Safety

The quick release plate uses a patented anti-loosening screw that keeps it securely fixed under stress to prevent accidental drops. Even under heavy loads and at extreme angles, it stays tightly fastened to safeguard your camera and lenses.

Figure 6: The three-layer webbing features a visual wear indicator for safety, prompting timely replacement when the yellow core is exposed. The quick-release plate also includes a patented anti-loosening design for ultimate security.

TROUBLESHOOTING

- **Camera Not Sliding Smoothly:** Ensure the quick-release clip is fully unlocked. Check the webbing for any obstructions or twists. Clean the strap and clips if necessary.
- **Strap Twisting:** The dual spherical beads are designed to prevent strap twisting. If twisting occurs, ensure the beads are correctly inserted and the strap is not overly tightened in a way that restricts movement.
- **Underarm Strap Discomfort:** Adjust the 4-position settings of the underarm strap to find the most comfortable and stable fit for your body.

SPECIFICATIONS

Feature	Detail
Product Dimensions	9.84 x 7.87 x 5.91 inches
Item Weight	4.9 ounces
Item Model Number	Adjustable
Shoulder Pad Width	60mm / 2.36in
Webbing Width	25mm / 0.98in
Adjustable Length	830-1450mm / 32.6-57in
Max Load Capacity	90kg (per quick-mount bead)
Materials	Genuine Leather, EPDM Foam, UHMWPE Cords

WARRANTY & SUPPORT

For warranty information, technical support, or customer service inquiries, please refer to the official PGYTECH website or contact their customer support directly. Keep your purchase receipt for any warranty claims.

