

## KENT Digital 6.5L

# KENT Digital Air Fryer 6.5L Instruction Manual

Model: Digital 6.5L | Brand: KENT

## 1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended household use.
- The appliance features an **Auto Shut-Off Function** to prevent overheating and ensure peace of

mind.

## 2. PRODUCT OVERVIEW

The KENT Digital Air Fryer 6.5L is a versatile kitchen appliance designed for healthier cooking with up to 80% less oil. It utilizes 360° Rapid Air Technology for even cooking and features a digital display with touch controls.



Image: KENT Digital Air Fryer 6.5L highlighting its multi-functionality for grilling, baking, roasting, and frying.

### Key Features:

- **6.5L Capacity:** Generous capacity suitable for preparing family-sized portions.
- **1600W Power:** Ensures powerful performance and rapid heating.
- **360° Rapid Air Technology:** Circulates hot air for uniform cooking and crispy results with minimal oil.
- **8 Preset Menus:** Convenient one-touch cooking for popular dishes like French fries, samosas, pizza, chicken, fish, and more.
- **Digital Display & Touch Control Panel:** Provides precise control over cooking settings.
- **Glass Window with Built-In Light:** Allows monitoring of food without opening the basket, preserving heat.
- **Adjustable Temperature & Timer Control:** Customize cooking time and temperature up to 200°C.
- **Auto Shut-Off Function:** Enhances safety by preventing overheating.

## 3. SETUP

1. **Unpacking:** Carefully remove the air fryer and all packaging materials. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, clean the air fryer basket and pan with warm, soapy water.

Wipe the main unit with a damp cloth. Ensure all parts are completely dry before assembly.

3. **Placement:** Place the air fryer on a stable, heat-resistant, and level surface. Ensure there is adequate space around the appliance for proper ventilation (at least 10 cm clearance on all sides).
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.

## 4. OPERATING INSTRUCTIONS

### General Operation:

1. **Prepare Food:** Place your ingredients in the air fryer basket. Do not overfill the basket to allow for proper air circulation.
2. **Insert Basket:** Slide the basket back into the air fryer until it clicks into place.
3. **Power On:** Press the power button on the digital touch control panel.
4. **Select Settings:**
  - **Preset Menus:** Choose one of the 8 preset menus for common dishes. The air fryer will automatically set the optimal temperature and time.
  - **Manual Settings:** Adjust the temperature (up to 200°C) and time using the dedicated touch controls.
5. **Start Cooking:** Press the start button to begin the cooking process.
6. **Monitor Progress:** Use the built-in glass window and light to check on your food without interrupting the cooking cycle.
7. **Shake/Flip (Optional):** For even cooking, some recipes may require shaking or flipping the food halfway through. The air fryer may have a reminder function for this.
8. **Completion:** The air fryer will beep when the cooking cycle is complete and automatically shut off.
9. **Remove Food:** Carefully pull out the basket using the handle. Use heat-resistant tongs to remove the cooked food.



Image: Digital Touch Control Panel for easy temperature and timer adjustments.

**Video: KENT Digital Air Fryer Overview**

Your browser does not support the video tag.

Video: A comprehensive overview of the KENT Digital Air Fryer 6.5L, demonstrating its features and benefits.

## 5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer and allow it to cool completely before cleaning.
2. **Clean Basket and Pan:** The air fryer basket and pan are non-stick. Clean them with warm, soapy water and a non-abrasive sponge. They may also be dishwasher safe (refer to specific product manual for confirmation).
3. **Clean Interior:** Wipe the interior of the appliance with a damp cloth. For stubborn food residue, use a mild detergent.
4. **Clean Exterior:** Wipe the exterior with a soft, damp cloth. Do not use harsh abrasives or metal scouring pads.
5. **Heating Element:** Gently clean the heating element with a cleaning brush to remove any food residue.
6. **Storage:** Store the cleaned and dried air fryer in a cool, dry place.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in; power outlet not working; basket not inserted correctly.	Check power cord connection; test outlet with another appliance; ensure basket is fully inserted.
Food is not cooked evenly.	Basket is overfilled; food not shaken/flipped.	Do not overfill the basket; shake or flip food halfway through cooking.
Food is not crispy.	Not enough oil (for certain foods); temperature too low; cooking time too short.	Lightly brush food with oil; increase temperature or cooking time.
White smoke comes from the appliance.	Fat residue from previous use; excessive oil on food.	Clean the basket and pan thoroughly; blot excess oil from food before air frying.

## 7. SPECIFICATIONS

- **Model Name:** Digital Air Fryer 6.5L
- **Model Number:** Digital 6.5L
- **Capacity:** 6.5 litres
- **Output Wattage:** 1600 Watts
- **Max Temperature Setting:** 200 Degrees Celsius
- **Control Method:** Touch
- **Air Frying Technology:** Rapid Heat Circulation
- **Product Dimensions (D x W x H):** 39D x 33W x 28H Centimeters
- **Item Weight:** 5.25 Kilograms
- **Material:** Plastic
- **Color:** Black
- **Included Components:** User Manual
- **Country of Origin:** India

## 8. WARRANTY AND SUPPORT

---

The KENT Digital Air Fryer 6.5L comes with a standard manufacturer's warranty. For specific warranty details, including duration and coverage, please refer to the warranty card included with your product or contact KENT customer support.

For technical assistance, troubleshooting, or service requests, please contact KENT customer support through their official website or the contact information provided in your product documentation.

### **Extended Warranty Options:**

- 1 Year Extended Warranty Plan by Onsitego
- 2 Year Extended Warranty Plan by Onsitego
- 1 Year Extended warranty by Acko

These plans are available for purchase separately and offer additional coverage beyond the standard manufacturer's warranty.