

[Manuals.plus](#) /

› [Aicevoos](#) /

› Aicevoos AS-S50 Electric Air Duster User Manual

Aicevoos AS-S50

Aicevoos AS-S50 Electric Air Duster User Manual

Model: AS-S50 | Brand: Aicevoos

INTRODUCTION

Thank you for choosing the Aicevoos AS-S50 Electric Air Duster. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

IMPORTANT SAFETY INFORMATION

- Do not operate the device near flammable liquids or gases.
- Keep out of reach of children.
- Avoid directing airflow directly at eyes or sensitive body parts.
- Do not immerse the device in water or expose it to excessive moisture.
- Use only the provided charging cable and adapter.
- Do not attempt to disassemble or modify the device.
- The device will automatically shut down when the battery level falls below 10%. Recharge promptly.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Aicevoos AS-S50 Electric Air Duster
- Five Air Nozzles
- Cloth Bag
- USB Type-C Charging Cable
- User Manual

CLEAN THE PC



Image: Contents of the Aicevoos AS-S50 package, including the air duster, five nozzles, cloth bag, USB cable, and manual.

PRODUCT OVERVIEW

The Aicevoos AS-S50 is a compact and powerful electric air duster designed for various cleaning tasks. It features a brushless motor, multiple speed settings, and a digital display.



Image: Diagram showing the internal brushless motor of the Aicevoos AS-S50, highlighting its 130,000 RPM capability, 55 M/S wind speed, and 200g wind pressure.

Key Features:

- **Brushless Motor:** Delivers high-speed airflow up to 130,000 RPM.
- **Four Adjustable Speed Settings:** Allows for precise control over airflow intensity.
- **Digital Display:** Shows current gear (speed) and battery percentage.
- **Compact and Portable Design:** Easy to carry and store.
- **Type-C Fast Charging:** Quick recharge capability.
- **Integrated LED Light:** Illuminates dark areas during cleaning.

SETUP

1. Charging the Device:

1. Connect the provided USB Type-C cable to the charging port on the device.
2. Connect the other end of the cable to a compatible USB power adapter (not included).
3. The digital display will show the battery percentage during charging. A full charge takes approximately 3 hours.

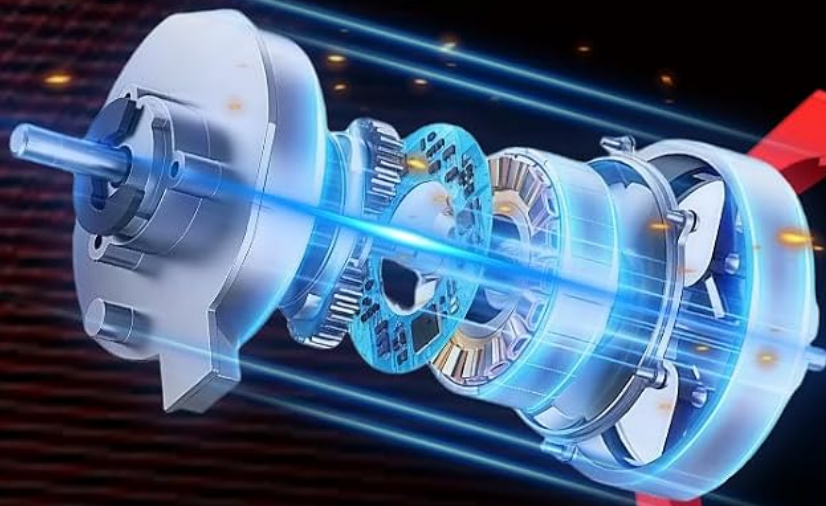


Image: The Aicevoos AS-S50 Electric Air Duster being charged via its Type-C port, with the digital display showing battery status.

2. Attaching Nozzles:

Select the appropriate nozzle for your cleaning task. Align the nozzle with the air outlet and push firmly until it is securely attached. To remove, pull the nozzle straight off.

BRUSHLESS MOTOR



130000 RPM

HIGH SPEED



55M/S

Wind Speed



200g

Wind Pressure



Image: The Aicevoos AS-S50 Electric Air Duster shown with its various interchangeable nozzles for different applications.

OPERATING INSTRUCTIONS

1. Power On/Off:

- To turn on the device, press and hold the power button (usually located on the side or rear) for a few seconds until the digital display illuminates.
- To turn off the device, press and hold the power button again until the display turns off.

2. Adjusting Speed Settings:

The AS-S50 features four adjustable speed settings (P1 to P4). While the device is on, short press the power button to cycle through the speed levels:

- **P1:** Soft Wind
- **P2:** Strong Wind
- **P3:** Super Strong Wind
- **P4:** Violent Wind (Maximum Power)



Image: The Aicevoos AS-S50 Electric Air Duster displaying its four speed settings (P1-P4) and their corresponding wind strengths.

3. Using the LED Light:

The device includes an integrated LED light to illuminate dark areas. The light activates automatically when the duster is turned on, or can be controlled by a dedicated button if available (refer to device specific controls).

CLEAN KEYBOARD



Image: The Aicevoos AS-S50 Electric Air Duster with its LED light activated, providing illumination for cleaning in low-light conditions.

USAGE SCENARIOS

The Aicevoos AS-S50 is versatile and can be used for various cleaning and blowing tasks:

- **Computer and Keyboard Cleaning:** Effectively remove dust from sensitive electronics.
- **Car Interior Cleaning:** Blow dust and debris from car dashboards, vents, and seats.
- **Household Cleaning:** Dust hard-to-reach areas, blinds, and delicate items.
- **Outdoor Use:** Clear leaves, blow snow from small surfaces, or assist in starting fires.
- **Inflatables:** Use appropriate nozzles for inflating small items like swimming rings or air beds.



Image: Collage demonstrating the Aicevoos AS-S50 being used for car cleaning, keyboard cleaning, snow blowing, PC cleaning, fire starting, and leaf blowing.

Nozzle Guide:

- **Flat Nozzle:** Ideal for PC, car, and general house cleaning.
- **Inflatable Nozzle:** Suitable for inflatable beds and swimming rings.
- **Universal Nozzle:** Effective for blowing snow and leaves.

BLOW THE SNOW



Image: The Aicevoos AS-S50 Electric Air Duster demonstrating the use of flat and inflatable nozzles for various tasks.

LIGHTING

SCREEN DISPLAYS CLEARLY EVEN
IN DARK ENVIRONMENTS.



Image: The Aicevoos AS-S50 Electric Air Duster using a universal nozzle to clear leaves from a car windshield.

MAINTENANCE

- **Cleaning:** Wipe the exterior of the device with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the air duster and its accessories in the provided cloth bag in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the device frequently. Recharge when the battery level is low.

MAKE FIRE



Image: The Aicevoos AS-S50 Electric Air Duster and its nozzles neatly stored in the included cloth bag for easy transport and protection.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Low battery. Power button not pressed correctly.	Charge the device fully. Press and hold the power button for a few seconds.
Weak airflow.	Low battery. Incorrect speed setting. Nozzle obstruction.	Recharge the device. Increase the speed setting (P1-P4). Check and clear any obstructions in the nozzle or air intake.
Device stops unexpectedly.	Battery critically low (below 10%). Overheating protection activated.	Recharge the device. Allow the device to cool down before resuming use.

SPECIFICATIONS

- **Model:** AS-S50
- **Brand:** Aicevoos
- **Motor Type:** Brushless Motor
- **Max RPM:** 130,000 RPM
- **Speed Settings:** 4 Gears (P1, P2, P3, P4)
- **Charging Port:** USB Type-C
- **Charging Time:** Approximately 3 hours
- **Dimensions:** 5.1 x 3.3 x 1.4 inches (approximate)

- **Weight:** 0.45 pounds (approximate)

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided with your purchase or visit the official Aicevoos website. Keep your purchase receipt as proof of purchase.

© 2026 Aicevoos. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question