

DADA-TECH E2

DADA-TECH Sonic Electric Toothbrush E2 Series User Manual

Model: E2

1. INTRODUCTION

Thank you for choosing the DADA-TECH Sonic Electric Toothbrush E2 Series. This manual provides essential information for the safe and effective use of your new toothbrush. Please read it thoroughly before first use and keep it for future reference.

2. IMPORTANT SAFETY INFORMATION

To reduce the risk of electric shock, burns, fire, or injury:

- Do not immerse the charging base in water or other liquids.
- Do not use if the product or charging cable is damaged.
- Keep out of reach of children.
- Consult your dentist before use if you have severe periodontal disease or oral surgery.
- This appliance contains batteries that are non-replaceable.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x DADA-TECH E2 Toothbrush Handle
- 7 x Brush Heads (4 firm, 3 soft)
- 1 x Wireless Charging Base
- 1 x Travel Case
- 1 x Wall-Mounted Holder
- 1 x User Manual

All-In-One Oral Care Kit

- 1 Toothbrush (E2)
- 1 Charging Base
- 7 Brush Heads
- 1 Holder
- 1 Travel Case
- 1 Manual



Image: All components of the DADA-TECH E2 Oral Care Kit, including the toothbrush handle, multiple brush heads, charging base, travel case, and wall mount.

4. PRODUCT OVERVIEW

Familiarize yourself with the parts of your DADA-TECH E2 Sonic Electric Toothbrush:

- **Brush Head:** Features rounded bristles and a fade reminder.
- **Handle:** Ergonomic design with power button and mode indicators.
- **Power Button:** Turns the toothbrush on/off and cycles through modes.
- **Mode Indicators:** Lights indicating the selected cleaning mode.
- **Charging Base:** For wireless charging and storage.



Image: Internal view of the A+ grade maglev motor and the brush head design, highlighting the 40,000+ VPM sonic power and plaque removal capabilities.

5. SETUP

5.1 Charging the Toothbrush

1. Place the charging base on a stable, dry surface.

2. Connect the charging base to a power outlet.
3. Place the toothbrush handle onto the charging base. The indicator lights will illuminate to show charging status.
4. Charge for approximately 4-6 hours for a full charge before first use. A full charge provides up to 60 days of use.



Image: The DADA-TECH E2 toothbrush standing upright on its wireless charging base, illustrating the charging process.

5.2 Attaching the Brush Head

1. Align the brush head with the metal shaft on the toothbrush handle.
2. Push the brush head down firmly until it clicks into place.
3. To remove, pull the brush head straight up from the handle.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off and Mode Selection

1. Press the power button once to turn on the toothbrush. It will start in the last used mode.
2. Press the power button repeatedly within 5 seconds to cycle through the 6 cleaning modes:
 - **DAILY CLEAN:** Standard mode for daily plaque removal.
 - **WHITE:** For removing surface stains.
 - **POLISH:** For enhancing tooth shine.
 - **GUM CARE:** Gentle massage for gums.
 - **SENSITIVE:** Extra-mild vibrations for sensitive teeth and gums.
 - **DEEP CLEAN:** Intensive cleaning for stubborn plaque.
3. After selecting a mode, press the power button again to cycle through 3 intensity levels (Low, Medium, High).
4. To turn off the toothbrush, press and hold the power button for 2 seconds, or press the power button after cycling through all modes/intensities.



Image: Visual representation of the DADA-TECH E2's 6 cleaning modes (Daily Clean, White, Polish, Gum Care, Sensitive, Deep Clean) and 3 intensity levels (Low, Medium, High), offering 18 personalized brushing experiences.

6.2 Brushing Technique

1. Wet the brush head and apply a small amount of toothpaste.
2. Place the brush head against your teeth at a slight angle towards the gumline.
3. Press the power button to start.
4. Gently move the brush head slowly across each tooth, allowing the sonic vibrations to do the cleaning. Do not scrub.
5. The toothbrush features a 2-minute smart timer with 30-second interval reminders to ensure you brush all four quadrants of your mouth evenly.

6.3 Official User Guide Video

Your browser does not support the video tag.

Video: Official DADA-TECH Sonic Electric Toothbrush E2 Series User Guide. This video demonstrates the features and proper usage of the toothbrush.

7. MAINTENANCE

7.1 Cleaning the Toothbrush

1. After each use, rinse the brush head thoroughly under running water.
2. Wipe the toothbrush handle with a damp cloth. Do not use abrasive cleaners.
3. The toothbrush handle is IPX7 waterproof and can be rinsed under running water, but avoid prolonged submersion.

7.2 Replacing Brush Heads

Dentists recommend replacing your brush head every 3 months, or sooner if the bristles become frayed. The DADA-TECH E2 brush heads feature a fade indicator that visibly lightens after 90 days to remind you to replace them.



Image: Close-up of the DADA-TECH E2 brush head, highlighting the over 90% rounded soft nylon bristles and the fade reminder feature for timely replacement.

7.3 Storage

When not in use, store the toothbrush in a dry place. Use the provided travel case for hygienic storage and portability.



Image: The DADA-TECH E2 toothbrush and two brush heads neatly stored inside the portable travel case, emphasizing its convenience for travel.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Toothbrush does not turn on.	Battery is depleted.	Charge the toothbrush for at least 6 hours.
Toothbrush does not charge.	Charging base not connected; poor contact.	Ensure the charging base is plugged in. Clean the charging contacts on the toothbrush and base.
Reduced vibration.	Low battery; brush head worn out.	Recharge the toothbrush. Replace the brush head.

Problem	Possible Cause	Solution
Brush head falls off.	Brush head not properly attached.	Ensure the brush head is pushed down firmly until it clicks.

9. SPECIFICATIONS

- **Model:** E2
- **Vibrations:** 40,000 VPM (Vibrations Per Minute)
- **Modes:** 6 (Daily Clean, White, Polish, Gum Care, Sensitive, Deep Clean)
- **Intensity Levels:** 3 (Low, Medium, High)
- **Timer:** 2-minute smart timer with 30-second interval reminders
- **Waterproof Rating:** IPX7
- **Battery Type:** Lithium Ion (included)
- **Charging Time:** Approx. 4-6 hours
- **Battery Life:** Up to 60 days per charge
- **Bristle Material:** Nylon
- **Handle Material:** Plastic

10. WARRANTY AND SUPPORT

DADA-TECH offers a **2-year warranty** for the E2 Sonic Electric Toothbrush. If you encounter any issues or have questions, please contact our customer support team.

How to Contact Support:

Login to your Amazon account, navigate to "Your Orders," find your order ID for this product, and click "Contact Seller." We are committed to providing excellent service and understanding our customers' needs.

© 2026 DADA-TECH. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question