

[Manuals.plus](#) /

› [Fanttik](#) /

› Fanttik B10 Pro Max Electric Air Duster User Manual

Fanttik B10 Pro Max

Fanttik B10 Pro Max Electric Air Duster User Manual

Model: B10 Pro Max

1. INTRODUCTION

Thank you for choosing the Fanttik B10 Pro Max Electric Air Duster. This device is designed to provide powerful and efficient cleaning for a variety of applications, from electronics to household items and outdoor gear. Featuring a high-speed brushless motor, adjustable gears, and a long-lasting rechargeable battery, it offers a versatile alternative to traditional compressed air cans. Please read this manual thoroughly before use to ensure proper operation, maintenance, and safety.

COMPACT & PORTABLE




0.72LBS

The compact and portable design of the Fanttik B10 Pro Max, weighing 0.72 lbs, shown resting on a car's center console, emphasizing its ease of transport.

2. PRODUCT OVERVIEW & PACKAGE CONTENTS

The Fanttik B10 Pro Max comes with a comprehensive set of accessories to enhance its versatility. Familiarize yourself with all components before initial use.



The Fanttik B10 Pro Max Electric Air Duster shown with its complete set of accessories, including various nozzles, cleaning brushes, and a USB-C charging cable.

WHAT'S IN THE BOX?

B10 Pro Max
Electric Air Duster
(2.95×5.60×1.57in)



Lanyard



Storage Bag



Type-C Cable



User Manual



Round Nozzle



Slim Nozzle



Short Nozzle



Long Nozzle



Soft Brush



Stiff Brush



A comprehensive display of all items included in the Fanttik B10 Pro Max package: the electric air duster, lanyard, storage bag, Type-C cable, user manual, and four specialized nozzles (round, slim, short, long), along with soft and stiff cleaning brushes.

Package Contents:

- Fanttik B10 Pro Max Electric Air Duster
- Round Nozzle
- Slim Nozzle
- Short Nozzle

- Long Nozzle
- Soft Brush
- Stiff Brush
- Type-C Charging Cable
- Lanyard
- Storage Bag
- User Manual (this document)

3. SPECIFICATIONS

Feature	Specification
Model	B10 Pro Max
Motor Type	Brushless Motor
Max RPM	130,000 RPM
Wind Speed	Up to 65 m/s
Gear Settings	6 Adjustable Gears
Battery Capacity	2x 4000 mAh (28.8Wh) Lithium Ion
Run Time	Up to 210 minutes (depending on gear setting)
Charging Port	Type-C (5V/2A)
Weight	1.12 pounds (approx. 0.51 kg)
Product Dimensions	3 x 3 x 5.6 inches (approx. 7.6 x 7.6 x 14.2 cm)
UPC	671891193258

4. SAFETY INSTRUCTIONS

To prevent injury or damage to the device, please observe the following safety precautions:

- **Read all instructions:** Before operating the air duster, read and understand all safety warnings and operating instructions.
- **Keep away from children:** This product is not a toy. Keep it out of reach of children and pets.
- **Do not point at eyes or body:** Never direct the airflow towards eyes, face, or any part of the body of people or animals. The high-speed air can cause injury.
- **Avoid flammable materials:** Do not use the air duster near open flames, flammable liquids, gases, or in explosive atmospheres.
- **Do not immerse in water:** The device is not waterproof. Do not expose it to water or other liquids.
- **Use appropriate nozzles:** Always select the correct nozzle for the task to avoid damage to the item being cleaned or the duster itself.
- **Charge properly:** Use only the provided Type-C cable and a compatible 5V/2A power adapter for charging. Do not use the blower function while charging.
- **Avoid overheating:** For inflation tasks, especially with smaller items like swimming rings, it is recommended to keep the wind speed below the 3rd gear to prevent potential overheating.

- **Store safely:** When not in use, store the device in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Do not disassemble:** Do not attempt to disassemble, repair, or modify the device. Contact customer support if service is required.

5. SETUP

Before using your Fanttik B10 Pro Max Electric Air Duster for the first time, please follow these setup steps:

1. **Charge the Device:**

Connect the provided Type-C charging cable to the charging port on the bottom of the air duster and plug the other end into a compatible 5V/2A USB power adapter (not included). The LED display will indicate the charging status. Ensure the device is fully charged before first use for optimal battery life. The blower function cannot be used while charging.

LONG-LASTING BATTERY



*The blower function cannot be used while charging.

An illustration of the internal battery configuration of the Fanttik B10 Pro Max, featuring two 4000mAh lithium batteries, Type-C charging, and up to 210 minutes of runtime.

2. Attach a Nozzle:

Select the appropriate nozzle for your cleaning task. Gently push the desired nozzle onto the air outlet until it is securely fitted. Ensure it is firmly attached to prevent it from detaching during operation.

3. Attach Lanyard (Optional):

If desired, attach the lanyard to the designated loop on the device for added security during use or for convenient carrying.

6. OPERATING INSTRUCTIONS

The Fanttik B10 Pro Max is designed for intuitive operation. Follow these steps to use your air duster effectively:

6.1 Power On/Off and Gear Adjustment

1. **Power On:** Press and hold the power button (usually marked with a power symbol) for a few seconds until the device powers on and the LED display illuminates.
2. **Adjust Gear:** Once powered on, use the gear adjustment buttons (up/down arrows or similar) to cycle through the 6 available speed settings. The LED display will show the current gear level (1-6) or RPM.
3. **One-tap Booster (Max Mode):** For maximum power, press the dedicated 'Max' button. This will instantly boost the duster to its highest speed of 130,000 RPM.
4. **Power Off:** Press and hold the power button again until the device powers off.

POWERFUL PERFORMANCE



Brushless
Motor



130000
RPM



65m/s
Wind Speed



An internal view of the Fanttik B10 Pro Max Electric Air Duster highlighting its brushless motor, capable of 130,000 RPM and generating a wind speed of 65 m/s for powerful cleaning.

6-GEARS HIGH SPEED WIND



1
30000
RPM

2
60000
RPM

3
75000
RPM

4
85000
RPM

5
100000
RPM

Max
130000
RPM

The Fanttik B10 Pro Max in use, demonstrating its 6-gear adjustable wind speed settings ranging from 30,000 RPM to 130,000 RPM, suitable for various cleaning tasks.

EFFORTLESS CLICKS MEGA AIR RUSH




A close-up of the Fanttik B10 Pro Max controls, showing the power button and gear adjustment buttons for precise control over airflow.

6.2 Using the Nozzles

The Fanttik B10 Pro Max includes four specialized nozzles and two brushes for diverse cleaning and inflation needs:

- **Short Nozzle:** Ideal for cleaning car interiors, outdoor debris like leaves, or general dusting where a wider, less focused blast is needed.
- **Long Nozzle:** Perfect for reaching tight spaces in desk setups, keyboards, computer components, and workbenches, providing a concentrated airflow.
- **Round Nozzle:** Primarily used for inflating air beds and other larger inflatable items.
- **Slim Nozzle:** Designed for inflating smaller items like swimming rings or other toys with narrow inflation ports.
- **Soft Brush:** For gentle cleaning of delicate surfaces, such as camera lenses or sensitive electronics, before or after air dusting.
- **Stiff Brush:** For more robust scrubbing of stubborn dirt or grime on keyboards, vents, or other durable surfaces.

WIDE APPLICATION

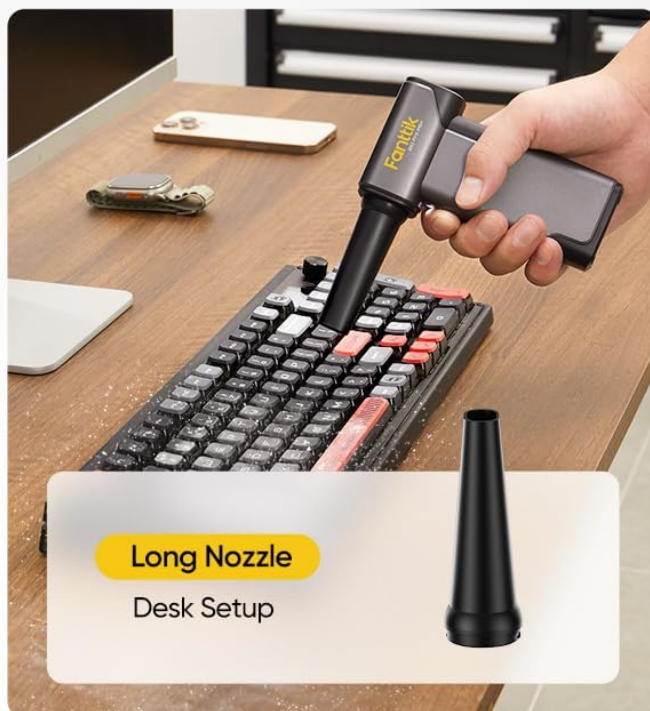

A collage illustrating the wide range of applications for the Fanttik B10 Pro Max, including cleaning car interiors, desk setups, and inflating air beds and swimming rings with its specialized nozzles.



The Fanttik B10 Pro Max utilizing its long nozzle to effectively clean dust and debris from a keyboard on a desk setup.



The Fanttik B10 Pro Max inflating a swimming ring using its slim nozzle, with a note to keep wind speed below 3rd gear to avoid overheating.

6.3 LED Illumination

The built-in LED light helps illuminate dark or hard-to-see areas, ensuring thorough cleaning. To activate the LED light, locate the dedicated light button (if available) or it may activate automatically when the duster is powered on, depending on the model variant.

LIGHT UP YOUR WORKSPACE



The Fanttik B10 Pro Max in action, using its built-in LED light to illuminate and clean dust from the intricate components inside a computer case.

6.4 Backup Power Bank Function

The Fanttik B10 Pro Max can also function as a backup power bank. Connect your electronic device (e.g., smartphone) to the duster's Type-C port using a compatible charging cable. This feature is useful for charging devices outdoors or when a power outlet is unavailable. Note that the blower function cannot be used simultaneously while charging another device.



The Fanttik B10 Pro Max being used as a backup power bank via its Type-C port, charging a smartphone, showcasing its dual functionality.

7. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your Fanttik B10 Pro Max Electric Air Duster.

- **Cleaning the Device:**

Wipe the exterior of the duster with a soft, dry cloth. Do not use abrasive cleaners, solvents, or immerse the device

in water. Ensure the air intake and outlet are free from obstructions.

- **Cleaning Nozzles and Brushes:**
After use, remove the nozzles and brushes. Clean them with a damp cloth or mild soap and water if necessary. Ensure they are completely dry before reattaching or storing.
- **Storage:**
Store the air duster and its accessories in the provided storage bag in a cool, dry place, away from direct sunlight and extreme temperatures. Ensure the device is fully charged before long-term storage to maintain battery health.
- **Battery Care:**
To prolong battery life, avoid completely draining the battery frequently. Recharge the device when the battery indicator is low. If storing for extended periods, charge the battery to approximately 50-70% every few months.

8. TROUBLESHOOTING

If you encounter issues with your Fanttik B10 Pro Max, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device does not turn on	Low or depleted battery	Charge the device fully using the provided Type-C cable and a compatible adapter.
	Power button not pressed correctly	Press and hold the power button for a few seconds until the display illuminates.
Weak airflow	Low battery level	Recharge the device.
	Incorrect gear setting	Increase the gear setting using the adjustment buttons or activate 'Max' mode.
	Air intake/outlet blocked	Check for and remove any obstructions from the air intake or nozzle outlet.
Device not charging	Faulty cable or adapter	Try a different Type-C cable and/or a different 5V/2A USB power adapter.
	Charging port dirty	Gently clean the charging port with a dry, soft brush.
Overheating during inflation	High gear setting for prolonged period	Reduce the gear setting, especially for smaller inflatable items. Allow the device to cool down if it feels warm.

If the problem persists after trying these solutions, please contact Fanttik customer support for further assistance.

9. WARRANTY AND SUPPORT

Fanttik products are designed and manufactured to the highest quality standards. This product is covered by a limited warranty from the date of purchase. Please refer to the official Fanttik website or the warranty card included in your package for specific warranty terms and conditions.

For technical support, warranty claims, or any questions regarding your Fanttik B10 Pro Max Electric Air Duster, please contact Fanttik customer service through their official website or the contact information provided in your product packaging. You may also find additional resources and a downloadable PDF version of the user manual on the Fanttik support page.

Online User Manual (PDF): [Download PDF Manual](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question