

Manuals.plus /

> GOEBLESON /

> GOEBLESON 63.4-inch Display Shelf with Light, Modern Corner Floor Lamp with Shelves, LED Dimmable Standing Lamp with Remote (Model B55LD05)

GOEBLESON B55LD05

GOEBLESON 63.4-inch Display Shelf with Light Instruction Manual

Model: B55LD05

INTRODUCTION

The GOEBLESON B55LD05 is a 63.4-inch display shelf with integrated LED lighting, designed as a modern corner floor lamp. It features four tiers of storage shelves and offers adjustable color temperature (3000K-6000K) and stepless dimming. Control is available via a remote or foot switch, providing versatile lighting options for various environments.

SAFETY INFORMATION

- Ensure all components are securely fastened before use.
- Install the provided anti-tip device to prevent accidental tipping, especially in households with children or pets.
- Do not expose the lamp to water or excessive moisture. This product is for indoor use only.
- Use only the specified power adapter and bulb type.
- Unplug the lamp from the power outlet before cleaning or performing any maintenance.
- Keep the remote control and its battery out of reach of children.

PACKAGE CONTENTS

Verify that all parts are present before assembly:

- Lamp Pole Sections
- Shelf Panels (4 tiers)
- LED Light Strip (integrated)
- Remote Control
- Power Adapter with Foot Switch
- Assembly Hardware (screws, connectors)
- Anti-tip Device
- Instruction Manual



Image: The GOEBLESON B55LD05 floor lamp with its remote control, showcasing the main components.

ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your GOEBLESON B55LD05 floor lamp:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Verify all items against the package contents list.
2. **Assemble Lamp Pole:** Connect the lamp pole sections using the twist-to-lock frame mechanism. Ensure each section is securely tightened.

3. **Attach Shelf Panels:** Slide each shelf panel onto the designated slots on the lamp pole. Ensure they are level and stable.
4. **Connect Power:** Plug the power adapter into the lamp's base and then into a wall outlet.
5. **Install Anti-Tip Device:** Secure the anti-tip device to the top of the lamp and to a wall stud or other stable surface to prevent accidental tipping.



Image: Illustration of the various assembly parts included with the lamp.

OPERATING INSTRUCTIONS

Your GOEBLESON B55LD05 lamp can be controlled using either the remote control or the integrated foot switch.

Remote Control Functions

- **Power Button:** Turns the lamp ON or OFF.
- **Brightness Adjustment:** Use the '+' and '-' buttons to increase or decrease the light intensity (10%-100% stepless dimming).
- **Color Temperature (CCT) Adjustment:** Cycle through 3000K (Warm Light), 4000K (Natural Light), and 6000K (Cool White Light) with a single tap.
- **Timer Settings:** Set an automatic shut-off timer for 1, 2, 4, or 8 hours.
- **Memory Function:** The lamp will remember your last brightness and color temperature settings when turned back on.
- **Pre-Set Modes:** Access various lighting modes such as Relaxing, Sleeping, Reading, Baby Care, and Working modes.

Foot Switch Functions

- **Tap:** A single tap on the foot switch will cycle through the available color temperatures (3000K, 4000K, 6000K).
- **Long Press:** Press and hold the foot switch to adjust the brightness level. Release when the desired brightness is reached.

360° Rotating Light Poles

The integrated light poles can be rotated 360 degrees. This allows you to precisely aim the light to create either direct or indirect illumination, customizing the ambiance of your space.

Flexible Adjustment

10%-100% Stepless Brightness



3000K



4000K



5000K

3 Color Temperatures: 3000K, 4000K, 5000K

Image: Visual representation of the lamp's flexible adjustment capabilities, showing 10%-100% stepless brightness and three color temperatures (3000K, 4000K, 5000K).

Dual-Control Design

Control the light with a remote or foot switch without interference.

Remote range
up to **10M/33FT.**



Tap the foot switch to
toggle or adjust color temp,
hold to dim or brighten.

Image: Demonstrates the dual-control design, highlighting the remote control with a 33ft range and the foot switch for easy operation.

360° Rotating Light Pole

Precisely aim the light anywhere you need. Select either direct or indirect lighting to create a warm atmosphere.



Goebleson

- ✓ Seamless LED beads
- ✓ long lifespan



Others

- ✗ Seamless LED beads
- ✗ long lifespan

Image: Illustrates the 360-degree rotating light pole, allowing users to direct light as needed for direct or indirect illumination.

Pre-Set Lighting Modes

Set a sleep timer.



One Hour Timer



Relaxing Mode



Sleeping Mode



Reading Mode



Baby Care Mode



Working Mode

Image: Displays various pre-set lighting modes (Relaxing, Sleeping, Reading, Baby Care, Working) and the 1-hour timer function.

MAINTENANCE

- **Cleaning:** Wipe the lamp and shelves with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the finish.
- **Bulb Replacement:** The LED light strip is integrated and not user-replaceable. If the light fails, please contact customer support.
- **Remote Battery:** Replace the remote control battery when its range or responsiveness decreases. Refer to the remote control's compartment for battery type.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on.	No power connection. Remote control battery is dead.	Ensure the power adapter is securely plugged into the lamp and a working wall outlet. Replace the remote control battery.
Remote control is unresponsive.	Remote battery is low or dead. Remote is out of range. Obstruction between remote and lamp.	Replace the remote control battery. Ensure you are within the 33ft control range. Remove any obstructions.
Light flickers or is inconsistent.	Loose connection. Power supply issue.	Check all physical connections, including the power adapter. Try plugging the lamp into a different outlet. If the problem persists, contact customer support.
Foot switch does not work.	Power connection issue. Internal fault.	Ensure the lamp is powered on. If the remote works but the foot switch does not, contact customer support.

SPECIFICATIONS

- **Model Number:** B55LD05
- **Dimensions (D x W x H):** 11.8" x 11.78" x 63.4"
- **Material:** Aluminum (frame), Wooden (shelves)
- **Light Source Type:** Integrated LED
- **Wattage:** 15 watts
- **Color Temperature:** 3000K-6000K (Adjustable)
- **Dimming:** Stepless (10%-100%)
- **Control Type:** Remote Control, Foot Switch
- **Remote Control Range:** Up to 33 feet (10 meters)
- **Timer:** 1/2/4/8 hour options
- **Indoor/Outdoor Usage:** Indoor Only
- **Anti-Tip Device:** Included



Image: Detailed diagram showing the height (63 inches) and shelf dimensions (11.8 inches) of the GOEBLESON B55LD05 floor lamp.

WARRANTY AND SUPPORT

For warranty information or technical support, please contact GOEBLESON customer service through the retailer where the product was purchased or visit the official GOEBLESON website. Please have your model number (B55LD05) and purchase date available when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FH6ZJVH4>

More documents and user manuals: <https://manuals.plus/>