

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Ryuum](#) /

› [Ryuum Nicco Robot Dog \(Model B0FH74LKTP\) Instruction Manual](#)

## Ryuum B0FH74LKTP

# Ryuum Nicco Robot Dog Instruction Manual

Model: B0FH74LKTP

## 1. INTRODUCTION

Welcome to the instruction manual for your Ryuum Nicco Robot Dog. This robotic puppy is designed to provide interactive companionship with its lifelike movements and sounds. Please read this manual carefully to ensure proper setup, operation, and maintenance of your Nicco Robot Dog.

The Nicco Robot Dog mimics real dog behavior, including walking, barking, and tail wagging, offering an engaging experience.

## 2. PRODUCT OVERVIEW

The Nicco Robot Dog is a realistic robotic puppy designed to simulate the actions of a real dog. It features advanced robotic movements and interactive functions.



*Image 1: The Nicco Robot Dog, shown both in its retail packaging and being held in a hand, highlighting its compact size and presentation.*

- **Realistic Appearance:** Designed to move with dog-like elegance.
- **Interactive Functions:** Capable of walking, barking, stretching, and tail wagging.
- **Compact Design:** Portable size for easy handling and transport.
- **Touch Interaction:** Responds to a gentle tap on its head with sounds and movements.

Available colors for the Nicco Robot Dog include Brown, White, Gold, and Grey.



*Image 2: A brown variant of the Nicco Robot Dog, held gently in hands, showcasing its texture and size.*



*Image 3: A light brown variant of the Nicco Robot Dog, held alongside a small gift, illustrating its appeal as a companion.*

### **3. WHAT'S IN THE BOX**

---

Upon opening your Nicco Robot Dog package, you should find the following items:

- 1 x Nicco Robot Dog

*Note: Batteries are not included and must be purchased separately. Please refer to the 'Setup' section for battery requirements.*

### **4. SETUP**

---

#### **4.1 Battery Installation**

1. Locate the battery compartment on the underside of the Nicco Robot Dog.
2. Using a small screwdriver (not included), open the battery compartment cover.
3. Insert the required batteries (e.g., 3 x AA batteries, specific type may vary, check compartment for details) ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

## 4.2 Powering On

Locate the ON/OFF switch, usually near the battery compartment. Slide the switch to the 'ON' position to activate your Nicco Robot Dog.

## 5. OPERATING INSTRUCTIONS

Your Nicco Robot Dog is designed for simple and intuitive interaction. Once powered on, it will perform various actions.

- **Automatic Movement:** The robot dog will automatically walk, bark, and wag its tail.
- **Head Tap Interaction:** Gently tap the robot dog's head to trigger additional sounds and movements.
- **Simulated Actions:** The robot dog is programmed to simulate actions such as sitting, barking, running, and playing.



Image 4: Visual representations of the robot dog's simulated actions, including sitting, barking, walking, and running.



*Image 5: A collage showing the Nicco Robot Dog in various states, including being held and demonstrating walking movements.*

## **6. MAINTENANCE**

---

### **6.1 Cleaning**

To clean your Nicco Robot Dog, gently wipe its surface with a soft, dry cloth. Do not use water or cleaning solutions, as this may damage the electronic components.

### **6.2 Battery Replacement**

When the robot dog's movements become sluggish or sounds are distorted, it's time to replace the batteries. Follow the battery installation steps in Section 4.1.

### **6.3 Storage**

When not in use for extended periods, turn off the robot dog and remove the batteries to prevent leakage. Store it in a cool, dry place away from direct sunlight.

## **7. TROUBLESHOOTING**

---

If your Nicco Robot Dog is not functioning as expected, please refer to the following common issues and

solutions:

Problem	Possible Cause	Solution
Robot dog does not turn on.	Batteries are dead or incorrectly installed.	Check battery polarity, replace with fresh batteries. Ensure ON/OFF switch is in 'ON' position.
Movements are slow or erratic.	Low battery power.	Replace batteries.
No sound or distorted sound.	Low battery power or internal issue.	Replace batteries. If problem persists, contact customer support.
Does not respond to head tap.	Sensor obstruction or low battery.	Ensure no debris is covering the head sensor. Replace batteries.

## 8. SPECIFICATIONS

Feature	Detail
Model Number	B0FH74LKTP
Product Dimensions	6.7 x 3.5 x 7 inches
Power Supply	Battery-operated (type not specified, check compartment)
Manufacturer	Ryuumom
Recommended Age	Consult product packaging for specific age recommendations. Adult supervision is advised for younger users.

## 9. SAFETY INFORMATION

- Keep away from water and moisture to prevent electrical damage.
- Do not attempt to disassemble or modify the product.
- Ensure batteries are inserted correctly and replaced by an adult.
- Dispose of used batteries responsibly according to local regulations.
- Not suitable for children under 3 years due to small parts (choking hazard).
- Adult supervision is recommended during play.

## 10. WARRANTY AND SUPPORT

For warranty information or technical support, please contact the seller or manufacturer directly. Keep your purchase receipt as proof of purchase.

No official product videos are available for embedding in this manual.

