

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [bamix](#) /

> [bamix Cordless Immersion Hand Blender Model 1120.051 User Manual](#)

bamix 1120.051

bamix Cordless Immersion Hand Blender Model 1120.051 User Manual

Your guide to safe and efficient use of your bamix Cordless Immersion Hand Blender.

1. INTRODUCTION

Thank you for choosing the bamix Cordless Immersion Hand Blender. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before first use and keep it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Keep hands, hair, clothing, and utensils away from moving blades during operation to prevent injury.
- Do not immerse the motor unit in water or other liquids. Only the blending shaft and blades are designed for immersion.
- Ensure the appliance is switched off and unplugged from the charging station before attaching or removing accessories, and before cleaning.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Contact customer service for examination, repair, or adjustment.
- Use only attachments and accessories recommended by the manufacturer.
- Do not use outdoors.
- Avoid contact with moving parts.
- Blades are sharp. Handle with care.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- bamix Cordless Immersion Hand Blender (Motor Unit with Blending Shaft)
- Multipurpose Blade
- Beater Blade
- Whisk Blade
- Charging Station
- Power Adapter for Charging Station

4. SETUP

4.1 Charging the Appliance

Before first use, fully charge the hand blender. Place the blender into the charging station. Connect the power adapter to the charging station and then to a power outlet. The indicator light on the blender will show charging status.



Figure 1: bamix Cordless Immersion Hand Blender placed in its charging station.

4.2 Attaching and Removing Blades

Ensure the blender is switched off and disconnected from the charging station before handling blades.

1. To attach a blade: Align the blade with the drive shaft at the bottom of the blender. Push the blade firmly onto the shaft until it clicks into place.
2. To remove a blade: Grip the blade firmly and pull it straight off the drive shaft. Exercise caution as blades are sharp.



Figure 2: The bamix Cordless Immersion Hand Blender with an attached blade and its charging station.

5. OPERATING INSTRUCTIONS

5.1 Powering On and Speed Settings

The bamix Cordless Immersion Hand Blender features two speed settings:

- **Speed 1:** 8,000 RPM (Revolutions Per Minute) - Suitable for lighter tasks and delicate ingredients.
- **Speed 2:** 13,000 RPM - For heavier loads, tougher ingredients, and faster processing.

To operate, press the desired speed button on the handle. Release the button to turn off the blender.

5.2 Using the Blades

The blender comes with three interchangeable stainless steel blades, each designed for specific tasks:

- **Multipurpose Blade:** Ideal for chopping, pureeing, and mixing soups, sauces, and baby food. It can also crush ice.
- **Beater Blade:** Used for aerating and whipping, such as making whipped cream, egg whites, or frothing

milk.

- **Whisk Blade:** Perfect for emulsifying dressings, mixing thin batters, and stirring liquids.

When blending, ensure the blending shaft (5.3 inches) is sufficiently submerged in the ingredients. The overall length of the blender is 13.6 inches, allowing for use in deep pots and containers. The heat-resistant construction allows for use in boiling liquids.

6. MAINTENANCE AND CLEANING

6.1 Cleaning the Blades and Shaft

After each use, immediately clean the blades and blending shaft:

1. Remove the blade from the blending shaft.
2. Rinse the blade and shaft under running water. For stubborn food residue, use a small brush and mild dish soap.
3. Dry thoroughly before storing.

6.2 Cleaning the Motor Unit and Charging Station

The motor unit and charging station should be cleaned with a damp cloth. Do not immerse them in water or place them in a dishwasher.

6.3 Storage

Store the blender and its accessories in a clean, dry place. The charging station can also serve as a convenient storage base.



Figure 3: The bamix Cordless Immersion Hand Blender and its charging station, ready for storage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Blender does not turn on.	Battery is depleted.	Place the blender on the charging station and ensure it is properly connected to power. Allow sufficient time for charging.
Blades are not spinning or spinning slowly.	Blade is not properly attached. / Food is jammed in the blade.	Ensure the blade is securely clicked onto the drive shaft. / Turn off and unplug the blender, then carefully remove any jammed food.
Blender stops during operation.	Battery is low. / Overload protection activated.	Recharge the battery. / Reduce the amount of ingredients or cut them into smaller pieces. Allow the motor to cool down before restarting.

8. SPECIFICATIONS

- **Model Number:** 1120.051
- **Power Source:** Battery Powered
- **Number of Speeds:** 2 (8,000 RPM and 13,000 RPM)
- **Control Type:** Multiple Speeds
- **Included Components:** 3 Stainless Steel Blades, Charging Station
- **Product Dimensions:** 6.89"D x 14.2"W x 3.86"H
- **Shaft Length:** 5.3 inches (immersible part)
- **Manufacturer:** ESGE AG
- **Material:** PA6 Safety Rated Nylon, Chromated Brass (shaft), Stainless Steel (blades)

9. WARRANTY AND SUPPORT

9.1 Warranty Information

Your bamix Cordless Immersion Hand Blender is covered by a **2-year limited warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal household use. It does not cover damage resulting from misuse, abuse, accidents, unauthorized modifications, or failure to follow the care and cleaning instructions.

9.2 Customer Support

For warranty claims, technical assistance, or questions regarding your product, please contact bamix customer support. Refer to the contact information provided with your purchase documentation or visit the official bamix website.