

Mayer MMIWD30-BY

Mayer MMIWD30-BY 3L Instant Heating Water Dispenser with Filter User Manual

Model: MMIWD30-BY

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the Mayer MMIWD30-BY Instant Heating Water Dispenser. Retain this manual for future reference.

- Ensure the appliance is placed on a stable, flat, and heat-resistant surface.
- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- Keep out of reach of children. This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities unless supervised.
- Always unplug the dispenser from the power outlet before cleaning or when not in use.
- Do not operate the appliance if the power cord or plug is damaged, or if the appliance malfunctions or has been damaged in any manner.
- The appliance features boil dry and overheating protection. If the water tank is empty, the dispenser will automatically shut off.
- Use only potable water in the water tank.
- Exercise caution when dispensing hot water to prevent burns.

2. PRODUCT OVERVIEW

Familiarize yourself with the components of your Mayer Instant Heating Water Dispenser.



Figure 1: Front-side view of the Mayer MMIWD30-BY Instant Heating Water Dispenser. The image shows the main unit with the water outlet on the left and the translucent water tank on the right. A drip tray is visible at the base.



Figure 2: Side view of the Mayer MMIWD30-BY Instant Heating Water Dispenser, illustrating the detachable water tank being removed or inserted. The ultrafiltration filter is visible inside the water tank.

Components:

- Main Dispenser Unit (with water outlet and control panel)
- Detachable Water Tank (3L capacity)
- Ultrafiltration Filter (pre-installed in water tank)
- Detachable Drip Tray
- Power Cord

3. SETUP

Follow these steps for the initial setup of your water dispenser.

1. **Unpack:** Carefully remove all packaging materials and ensure all components are present.
2. **Placement:** Place the dispenser on a stable, level, and dry surface, away from direct sunlight and heat sources. Ensure there is adequate ventilation around the unit.
3. **Clean Water Tank:** Before first use, remove the detachable water tank and rinse it thoroughly with clean water. The ultrafiltration filter is pre-installed; ensure it is securely in place.

4. **Fill Water Tank:** Fill the water tank with potable water up to the maximum fill line. Reattach the water tank securely to the main unit.
5. **Position Drip Tray:** Place the detachable drip tray onto its designated slot at the base of the dispenser.
6. **Connect Power:** Plug the power cord into a grounded electrical outlet. The dispenser will enter standby mode.
7. **Initial Flush (Recommended):** For first-time use or after filter replacement, dispense at least 500ml of water at 99°C to flush the system. Discard this water.

4. OPERATING INSTRUCTIONS

Your Mayer MMIWD30-BY dispenser features a sensor touch control panel for easy operation.

Control Panel Functions:

- **Power Button:** To turn the dispenser on/off or enter standby mode.
- **Temperature Selection:** Cycle through preset temperatures: 25°C, 45°C, 65°C, 85°C, 99°C. Precise 1°C interval control is available within these ranges.
- **Volume Selection:** Choose from preset cup sizes: 200ml, 350ml, 500ml.
- **Dispense Button:** Press to start dispensing water.
- **Child Lock:** A safety feature to prevent accidental dispensing of hot water. Activate/deactivate by pressing and holding the child lock icon.
- **LED Display:** Shows selected temperature, volume, and status indicators.

Dispensing Water:

1. Ensure the water tank is filled and the dispenser is plugged in.
2. Place a cup or container on the drip tray directly under the water outlet.
3. Select your desired water temperature using the temperature selection button.
4. Select the desired water volume (200ml, 350ml, or 500ml) using the volume selection button.
5. If the child lock is active, deactivate it.
6. Press the dispense button. The dispenser will heat and dispense water in approximately 5 seconds.
7. To stop dispensing before the selected volume is reached, press the dispense button again.

5. MAINTENANCE

Regular cleaning and maintenance will ensure optimal performance and longevity of your dispenser.

Cleaning the Drip Tray:

The detachable drip tray should be emptied and cleaned regularly to prevent overflow and maintain hygiene.

1. Carefully remove the drip tray from the dispenser.
2. Empty any collected water.
3. Wash the drip tray with mild soap and warm water. Rinse thoroughly.

- 4. Dry completely before reattaching to the dispenser.

Water Tank and Filter Maintenance:

The ultrafiltration filter helps remove impurities and reduce limescale. The filter should be replaced periodically based on water quality and usage, typically every 3-6 months.

- 1. Unplug the dispenser and remove the water tank.
- 2. Remove the old filter from the water tank.
- 3. Clean the water tank with mild soap and water, then rinse thoroughly.
- 4. Insert a new ultrafiltration filter securely into the water tank.
- 5. Refill the tank with potable water and reattach it to the dispenser.
- 6. Perform an initial flush as described in the Setup section.

Exterior Cleaning:

Wipe the exterior of the dispenser with a soft, damp cloth. Do not use abrasive cleaners or solvents.

6. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
No water dispensed	Water tank is empty or not properly seated. Child lock is active. Dispense button not pressed.	Refill water tank and ensure it is seated correctly. Deactivate child lock. Press the dispense button.
Water is not hot enough	Incorrect temperature selected.	Verify the desired temperature is selected on the control panel. Allow a few seconds for heating.
Low water level indicator is on	Water level in the tank is low.	Refill the water tank with potable water.
Dispenser not turning on	Not plugged in. Power outage.	Ensure the power cord is securely plugged into a working outlet. Check your household's power supply.
Water tastes unusual	New filter or filter needs replacement.	Perform an initial flush if it's a new filter. Replace the ultrafiltration filter if it's old.

If the problem persists after attempting these solutions, please contact customer support.

7. SPECIFICATIONS




Feature	Specification
---------	---------------

Feature	Specification
Brand	Mayer
Model	MMIWD30-BY
Capacity	3 Liters
Voltage	2200 Volts
Material	Plastic
Product Dimensions (L x W x H)	26L x 14.4W x 29.5H centimetres
Special Features	Ultrafiltration Filter, Instant Heating, Child Lock, Detachable Drip Tray, Low Water Level Indicator, Boil Dry and Overheating Protection
Preset Temperatures	25°C, 45°C, 65°C, 85°C, 99°C (with 1°C interval control)
Preset Volumes	200ml, 350ml, 500ml
Heating Time	Approximately 5 seconds

8. WARRANTY AND SUPPORT

Specific warranty terms and conditions for the Mayer MMIWD30-BY Instant Heating Water Dispenser are not provided in this document. For detailed warranty information, product registration, or technical support, please refer to the warranty card included with your purchase or contact Mayer customer service directly. Please have your model number (MMIWD30-BY) and proof of purchase ready when contacting support.

Related Documents - MMIWD30-BY

	<p>Mayer Digital Air Pot (3L) MMAP30D User Manual</p> <p>User manual for the Mayer Digital Air Pot, model MMAP30D, part of the Paradise Collection. Provides instructions and specifications for the 3L air pot.</p>
	<p>Mayer MMSO2050 Steam Oven User Manual</p> <p>Comprehensive user manual for the Mayer MMSO2050 Steam Oven, covering safety instructions, operating features, cleaning, maintenance, and troubleshooting for optimal use.</p>
	<p>Mayer MM076 Electric Oven - User Manual</p> <p>Instruction manual for the Mayer MM076 Electric Oven, The Professional Chef Series. Includes safety instructions, parts introduction, controls and operations, function guide, and cleaning and maintenance.</p>



Food Steamer
MMFS28



Please read this instruction manual thoroughly before operating and keep it for future reference

Mayer MMFS28 Food Steamer: Instruction Manual and User Guide

Comprehensive guide for the Mayer MMFS28 Food Steamer, covering safety instructions, assembly, operation, cleaning, maintenance, and warranty information.



Built-in Oven
MMD013C



BUILT-IN OVEN
Please read this instruction manual thoroughly
before operating and keep it for future reference

[Mayer MMDO13C Built-in Oven: User Manual and Safety Guide](#)

Comprehensive user manual for the Mayer MMDO13C built-in oven. Learn about safety, installation, operation, cooking modes, accessories, cleaning, troubleshooting, and energy-efficient use.



User's Manual



MMD-02M
Built-in Electric Oven

Mayer MMDO6M Built-in Electric Oven User's Manual

Comprehensive user manual for the Mayer MMDO6M Built-in Electric Oven, covering installation, operation, safety guidelines, cleaning, and maintenance for optimal performance.