

## AOSKI ZB-S60

# AOSKI Handheld Vacuum Sealer Machine

MODEL: ZB-S60

Official Instruction Manual

---

## 1. Introduction

---

The AOSKI Handheld Vacuum Sealer Machine is designed to extend the freshness of your food by removing air from specially designed vacuum sealer bags. This compact and portable device helps preserve flavor and nutrients, reducing food waste and saving space in your refrigerator or freezer. Its one-touch operation and automatic stop feature make it simple and efficient for everyday use.



Figure 1: AOSKI Handheld Vacuum Sealer Machine and accessories.

## 2. Package Contents

Please ensure all items are present in your package:

- 1 x AOSKI Handheld Vacuum Sealer Machine
- 10 x BPA-free Vacuum Sealer Bags (Size 8.66"x8.27")
- 1 x Type-C Charging Cable
- 1 x Sealing Clip
- 1 x User Manual

# DURABLE & RECLOSABLE POUCHES


Double Zipper Package, Upgrader Air Valve, Stronger seal



Super Tough



Freeze-Proof

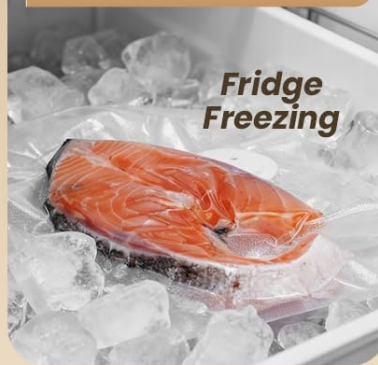

Heat-Proof



Figure 2: Included BPA-free vacuum sealer bags.

## 3. Safety Instructions

- Read all instructions before use.
- Keep the device away from water and other liquids.
- Do not operate the device if it has been damaged in any way.
- Keep out of reach of children.
- Use only the provided charging cable.
- Ensure the sealing area of the bag is clean and dry before sealing.

## 4. Setup

1. **Initial Charge:** Before first use, fully charge the vacuum sealer using the provided Type-C cable. The indicator light will show charging status. A full charge takes approximately 2 hours and provides up to 80 minutes of operation.
2. **Prepare Food:** For best results, pat dry any moist foods (e.g., meat, fish) to remove excess liquid. This prevents liquid from entering the vacuum sealer and ensures a better seal.

3. **Place Food in Bag:** Open a vacuum sealer bag and place the food inside. Ensure there is enough space (at least 1 inch) between the food and the zipper seal. Do not overfill the bag.
4. **Seal the Bag:** Use the provided sealing clip to firmly close the zipper seal of the bag. Run the clip across the entire length of the zipper to ensure a complete seal.



Figure 3: Visual guide for preparing and sealing food.

## 5. Operating Instructions

1. **Position the Sealer:** Place the vacuum sealer directly over the circular air valve on the vacuum sealer bag. Ensure the sealer's nozzle completely covers the valve.
2. **Start Vacuuming:** Press the power button on the device. The sealer will begin to remove air from the bag. The indicator light will illuminate during operation.
3. **Automatic Stop:** The device will automatically stop once the air has been sufficiently removed and a vacuum seal is achieved. The indicator light will turn off.
4. **Remove Sealer:** Once the device stops, gently lift it from the bag. The bag is now vacuum-sealed and ready for storage.

Your browser does not support the video tag.

Video 1: Demonstration of the AOSKI Handheld Vacuum Sealer in action, showing the vacuuming process for food items.

Your browser does not support the video tag.

Video 2: Quick overview of using the AOSKI Handheld Vacuum Sealer with included bags.

## 6. Maintenance and Cleaning

- **Cleaning the Device:** Wipe the exterior of the vacuum sealer with a soft, damp cloth. Do not immerse the device in water.
- **Detachable Water Tank:** The device features a detachable water tank to collect any liquids accidentally drawn in during vacuuming. Regularly detach and empty the tank, then rinse it with water and allow it to air dry completely before reattaching.
- **Cleaning Bags:** The BPA-free vacuum sealer bags are reusable. After use, wash them with warm soapy water, rinse thoroughly, and air dry before reusing. Ensure bags are completely dry to prevent bacterial growth and ensure effective sealing.

# EXTENDING SERVICE LIFE

**Ours**

## Upgraded Tank Design

Prevent water from machine.



**Others**

Harder to Clean  
Poor Durability



Figure 4: The detachable water tank for easy cleaning.

## 7. Troubleshooting

- **Device not turning on:** Ensure the device is fully charged. Connect it to the Type-C charging cable and allow it to charge for at least 30 minutes before attempting to use it again.
- **Poor vacuum seal:**
  - Check if the bag's zipper seal is completely closed using the sealing clip.
  - Ensure the vacuum sealer's nozzle is firmly and completely covering the bag's air valve.
  - Verify that the bag's air valve area is clean and free from food particles or moisture.
  - Avoid overfilling the bag, as this can prevent a proper seal.
- **Liquid entering the device:** If liquid is drawn into the device, empty and clean the detachable water tank immediately as described in the Maintenance section.

## 8. Specifications

Brand

AOSKI

<b>Model Number</b>	ZB-S60
<b>Material</b>	Plastic
<b>Color</b>	Black
<b>Item Weight</b>	8.2 ounces
<b>Power Source</b>	Battery Powered (1200mAh rechargeable battery)
<b>Operation Mode</b>	Automatic
<b>UPC</b>	732262568560
<b>Manufacturer</b>	Zhongshan Zhenbao Fresh Technology Co., Ltd

## 9. Warranty and Support

Your AOSKI Handheld Vacuum Sealer Machine comes with a **30-day satisfaction guarantee** and a **2-year service assurance**. For any questions, technical support, or warranty claims, please contact our customer support team:

- **Customer Support:** Available 24 Hours
- **Technical Support:** Lifetime
- **Contact Information:** Please refer to the contact details provided on the product packaging or the official AOSKI website.