

## IKEA 80354281

# IKEA Micke Desk (Model 80354281)

## Instruction Manual

### 1. INTRODUCTION AND OVERVIEW

This manual provides detailed instructions for the assembly, use, and maintenance of your IKEA Micke Desk, Model 80354281. Designed for functionality and style, this desk is suitable for various home office or study environments. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

### 2. PRODUCT FEATURES

- Integrated Cable Management:** Features exposed wiring ports in the back of the desktop to help keep cables neat and organized, reducing clutter.
- Versatile Leg Placement:** The steel legs can be mounted on either the left or right side, allowing for flexible placement to suit your space.
- Safety Drawer Stopper:** The drawer is equipped with a stopper to prevent it from being pulled out too far, enhancing safety and preventing accidental spills.
- Finished Back Panel:** The back of the desk is finished with the same color as the front, enabling it to be placed in the center of a room without compromising aesthetics.
- Modular Design:** This desk is part of the MICKE series, and its height is consistent with other MICKE desk and drawer units, allowing for seamless side-by-side arrangement to create a larger workspace.



Image 2.1: The IKEA Micke Desk in a typical room setup, showcasing its compact design and clean aesthetic.



Image 2.2: Close-up view of the desk's drawer, illustrating its storage capacity for office supplies.



Image 2.3: Detail of the cable management port on the desktop, designed to route power cords and cables efficiently.

### 3. SPECIFICATIONS

Attribute	Detail
Model Number	80354281
Brand	IKEA
Color	White
Width	73 cm (28.7 inches)
Depth	50 cm (19.7 inches)
Height	75 cm (29.5 inches)
Maximum Load	25 kg (55 lbs)
Drawer Inner Dimensions	Approx. 62 x 36.5 x 7.6 cm (24.4 x 14.4 x 3.0 inches)
Main Materials	Particleboard, fiberboard, paper, acrylic paint, ABS resin, steel (epoxy/polyester powder coated)
Number of Drawers	1

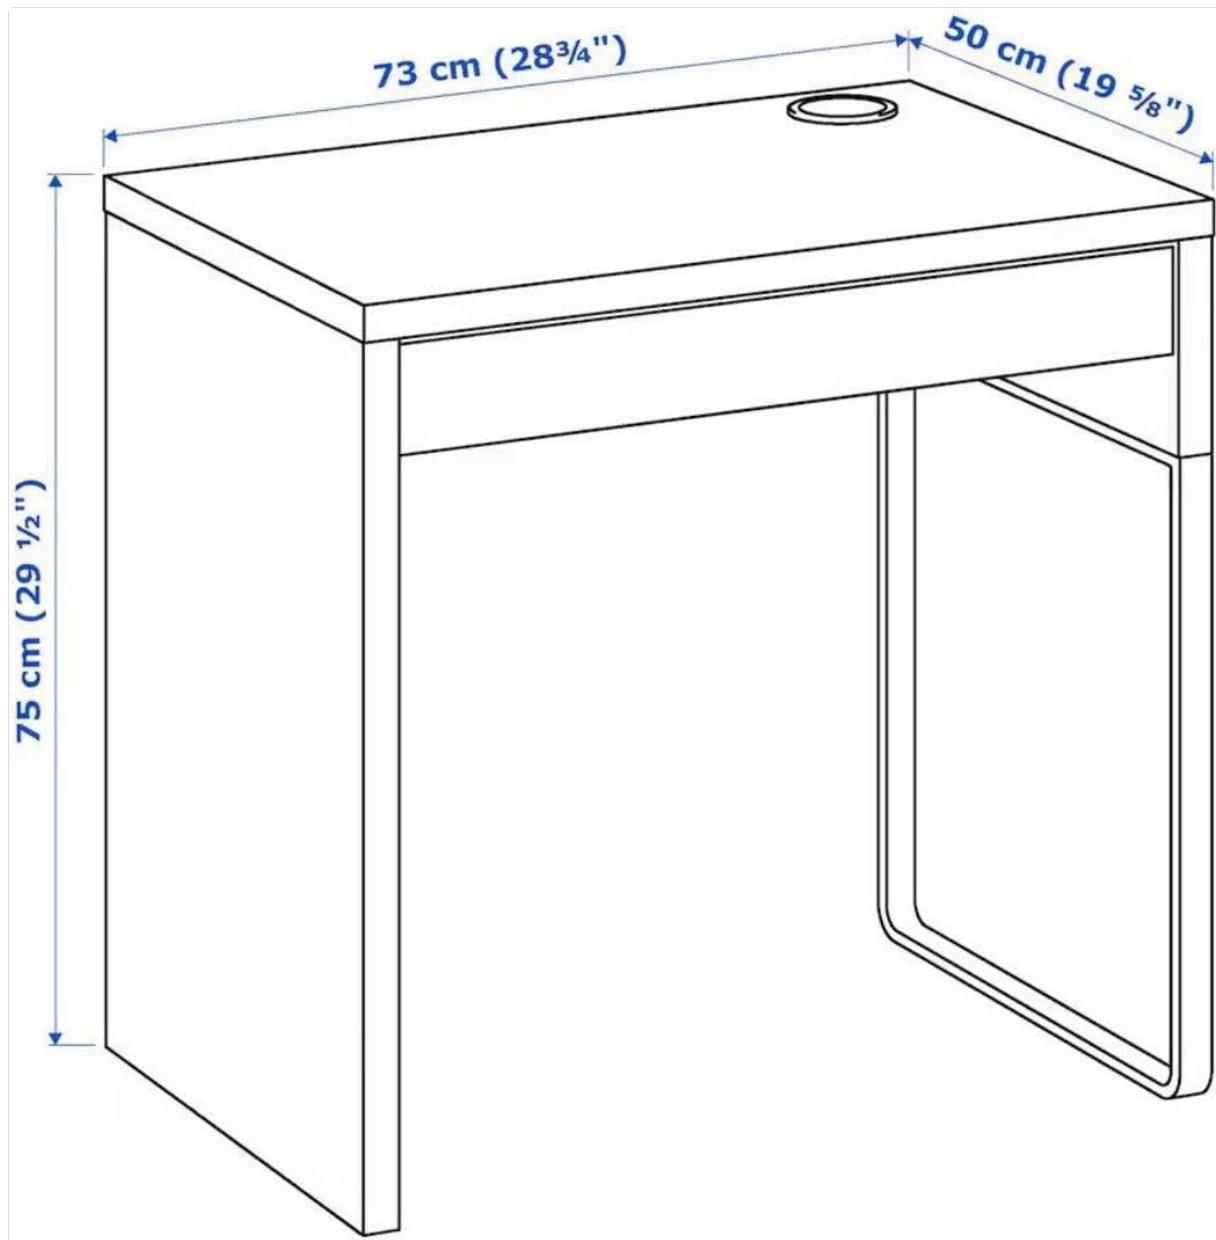


Image 3.1: Technical drawing of the IKEA Micke Desk with key dimensions indicated.

## 4. ASSEMBLY INSTRUCTIONS

The IKEA Micke Desk requires assembly. While specific step-by-step diagrams are not provided in this document, the product is designed for straightforward assembly. Please refer to the separate assembly guide included in the product packaging for detailed visual instructions and a list of all components and tools required.

1. Unpack all components and verify against the parts list in the assembly guide.
2. Follow the sequential steps provided in the official IKEA assembly manual.
3. Ensure all screws and fasteners are securely tightened for stability.
4. Choose the desired side for mounting the steel legs (left or right) as per your preference.

**Note: This product requires assembly. If you encounter any difficulties, please consult the full assembly manual or contact IKEA customer support.**

## 5. CARE AND MAINTENANCE

To ensure the longevity and appearance of your IKEA Micke Desk, follow these care instructions:

- **Cleaning:** Wipe clean with a cloth dampened in a mild detergent. Avoid abrasive cleaners or harsh chemicals that may damage the surface.
- **Drying:** Wipe dry with a clean, dry cloth immediately after cleaning to prevent moisture damage.
- **Protection:** Use coasters or protective pads under hot items or items that may scratch the surface.
- **Electrical Products:** If using electrical products on or near the desk, ensure all cables are properly managed through the designated ports and follow their respective instruction manuals. Turn off power to electrical products when not in use for extended periods.

## 6. SAFETY INFORMATION

- Ensure the desk is placed on a level surface to prevent wobbling or tipping.
- Do not exceed the maximum load capacity of 25 kg (55 lbs) on the desktop.
- Always use the drawer stopper to prevent the drawer from falling out.
- Keep liquids away from electrical devices and power outlets.
- For electrical products, always follow their specific instruction manuals and disconnect power when not in use or during maintenance.

## 7. TROUBLESHOOTING

If you encounter any issues with your IKEA Micke Desk, consider the following common solutions:

- **Wobbling Desk:** Check all assembly screws and fasteners to ensure they are tightened. Ensure the desk is on a flat, even surface.
- **Drawer Sticking:** Verify that the drawer runners are correctly installed and free from obstructions. Ensure the drawer is not overloaded.
- **Surface Damage:** For minor scratches, touch-up paint or repair kits may be available from IKEA. For significant damage, consider replacement.

For persistent issues, please contact IKEA customer support.

## 8. WARRANTY AND SUPPORT

For information regarding the product warranty, please refer to the warranty documentation provided with your purchase or visit the official IKEA website. For customer support, spare parts, or further assistance, please contact IKEA directly through their official channels.

You can find contact information and support resources on the [IKEA official website](#).