

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Xiaomi](#) /
- › [Xiaomi Dual Zone Air Fryer 10L Instruction Manual](#)

Xiaomi Dual Zone Air Fryer 10L

Xiaomi Dual Zone Air Fryer 10L User Manual

Model: Dual Zone Air Fryer 10L

INTRODUCTION

Thank you for choosing the Xiaomi Dual Zone Air Fryer 10L. This appliance is designed to provide a healthier way to cook your favorite foods with less oil. Please read this manual thoroughly before use to ensure safe operation, optimal performance, and proper maintenance. Keep this manual for future reference.

IMPORTANT SAFETY INFORMATION

WARNING: To prevent electric shock, fire, or injury, always follow basic safety precautions.

- Do not immerse the appliance, cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Keep the appliance and its cord out of reach of children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Always unplug the appliance when not in use and before cleaning. Allow it to cool down before handling.
- Do not place the appliance against a wall or against other appliances. Leave at least 10 cm free space on the back and sides and 10 cm free space above the appliance.
- Hot air is released through the air outlet vents. Keep your hands and face at a safe distance from the vents.
- Do not fill the baskets with oil or other liquids, as this may cause a fire hazard.
- Use only original accessories provided by the manufacturer.

PRODUCT OVERVIEW

The Xiaomi Dual Zone Air Fryer 10L features two independent cooking zones, allowing you to cook different foods simultaneously at different temperatures and times. The intuitive touch control panel provides easy access to various cooking functions.



Figure 1: Front view of the air fryer, showing the digital display, touch controls, and dual basket handles.



Figure 2: Side view of the air fryer, highlighting its compact design.



Figure 3: Rear view of the air fryer, displaying the air outlet vents. Ensure these are not blocked during operation.

Key Components:

- **Control Panel:** Digital display with touch controls for temperature, time, and cooking modes.
- **Cooking Baskets:** Two independent baskets (3.5L and 6.5L) with non-stick coating.
- **Air Inlet/Outlet:** Located on the top and rear for proper air circulation.
- **Power Cord:** For connecting to an electrical outlet.

SETUP

1. **Unpacking:** Carefully remove the air fryer and all packaging materials. Retain packaging for future transport if needed.
2. **Initial Cleaning:** Before first use, clean the cooking baskets and crisper plates with warm soapy water. Wipe the main unit with a damp cloth. Ensure all parts are completely dry before assembly.
3. **Placement:** Place the air fryer on a stable, heat-resistant, and level surface. Ensure there is adequate space (at least 10 cm) around the appliance for proper ventilation. Do not place it near flammable materials.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

The Xiaomi Dual Zone Air Fryer offers versatile cooking options with its dual baskets and touch controls.



Figure 4: The air fryer ready for use in a kitchen environment.

Basic Operation:

1. **Power On:** Press the power button (U) on the control panel. The display will illuminate.
2. **Select Basket:** Press 'L' for the left basket, 'R' for the right basket, or 'L+R' to use both simultaneously with synchronized settings.
3. **Adjust Temperature and Time:** Use the '+' and '-' buttons to set the desired cooking temperature (40°C to 230°C) and time.
4. **Choose Cooking Mode:** Select from the 9 pre-set cooking modes (e.g., fries, chicken, fish) by tapping the corresponding icon.
5. **Start Cooking:** Press the Play/Pause button (▶||) to begin the cooking cycle.
6. **Sync Function:** If cooking different items in both baskets that require different times but should finish together, use the 'SYNC' button. Set the longer cooking time first, then the shorter one, and press SYNC. The air fryer will automatically adjust the start time for the shorter cycle.
7. **Shake Reminder:** For some recipes, the air fryer may beep to remind you to shake the basket for even cooking.
8. **Power Off:** Press and hold the power button (U) to turn off the appliance.



Figure 5: Top-down view showing different foods cooking simultaneously in the dual zones.

Smart Control (Optional):

This air fryer may be compatible with a mobile application for remote control and access to additional recipes. Refer to the included user manual for details on connecting your device.



Figure 6: Example of smartphone app integration for recipe selection and control.

Regular cleaning ensures the longevity and hygiene of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer and allow it to cool completely before cleaning.
2. **Cleaning Baskets and Crisper Plates:** The cooking baskets and crisper plates are dishwasher safe. Alternatively, wash them with warm water, a mild detergent, and a non-abrasive sponge. Ensure all food residue is removed.
3. **Cleaning the Main Unit:** Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scourers. Never immerse the main unit in water.
4. **Interior Cleaning:** For the interior of the appliance, wipe with a damp cloth. For stubborn residue, use a mild detergent.
5. **Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.



Figure 7: Cleaning one of the non-stick cooking baskets by hand.



Figure 8: The cooking baskets and crisper plates are dishwasher safe for convenient cleaning.

TROUBLESHOOTING

If you encounter any issues with your air fryer, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in; power outlet not working.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker.

Problem	Possible Cause	Solution
Food is not cooked evenly.	Baskets are overloaded; food not shaken or flipped.	Do not overload baskets. Shake or flip food halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use; fatty ingredients.	Clean the baskets and interior thoroughly. Remove excess oil from ingredients.
Air fryer smells like plastic.	New appliance odor.	This is normal for first few uses. Ensure good ventilation.

If the problem persists after checking these solutions, please contact customer support.

SPECIFICATIONS



Figure 9: Product dimensions for the Xiaomi Dual Zone Air Fryer 10L.

- **Brand:** Xiaomi
- **Model Name:** Dual Zone Air Fryer 10L EU
- **Model Number:** Dual Zone Air Fryer 10L
- **Capacity:** 10 Liters (Total)
- **Power Output:** 2700 Watts
- **Voltage:** 230 Volts
- **Control Method:** Touch
- **Minimum Temperature:** 40°C
- **Maximum Temperature:** 230°C

- **Air Frying Technology:** Dual Zone Air Circulation
- **Special Features:** Dual Zone, Programmable, Stain Resistant, Temperature Control, Timer
- **Color:** Black
- **Material:** Plastic (Exterior and Interior)
- **Non-stick Coating:** Yes
- **Dishwasher Safe Components:** Yes (Baskets and Crisper Plates)
- **Item Weight:** 7.4 Kilograms
- **Product Dimensions (W x D x H):** 42.8 cm x 30.2 cm x 37.9 cm
- **Country of Origin:** China

WARRANTY AND SUPPORT

Your Xiaomi Dual Zone Air Fryer 10L comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty period and coverage details.

For technical support, service, or to inquire about replacement parts, please contact Xiaomi customer service through their official website or the contact information provided in your warranty documentation. You can also visit the official Xiaomi store for more information: [Xiaomi Official Store](#)