

Wonderchef Neo Pro Digital Air Fryer 4.5L

Wonderchef Neo Pro Digital Air Fryer 4.5L User Manual

Model: Neo Pro Digital Air Fryer 4.5L

1. INTRODUCTION

Thank you for choosing the Wonderchef Neo Pro Digital Air Fryer. This appliance utilizes Rapid Air Technology to cook your favorite foods with significantly less oil, offering a healthier alternative to traditional frying. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new air fryer.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before use.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage.
- Keep the appliance out of reach of children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Always unplug the appliance when not in use and before cleaning. Allow it to cool before putting on or taking off parts.
- Do not place the appliance against a wall or against other appliances. Leave at least 10 cm free space on the back and sides and 10 cm free space above the appliance.
- Do not cover the air inlet and air outlet openings while the appliance is operating.
- The outer surfaces may become hot during use. Use the cool-touch handle for safe operation.
- Never use accessories or parts from other manufacturers.

3. PRODUCT OVERVIEW

The Wonderchef Neo Pro Digital Air Fryer is designed for versatile cooking with ease. It features a digital control panel and a spacious non-stick basket.

Components:

- Air Fryer Unit (1N)

- 4.5L Non-Stick Frying Basket (1N)
- Non-Stick Rack Plate (1N)
- Cool-touch Handle



Image: The air fryer features a strong ABS body, a metal basket with non-stick coating, and a cool-touch handle for safe operation.

4. SETUP

1. **Unpacking:** Carefully remove all packaging materials and promotional labels from the air fryer.
2. **Initial Cleaning:** Before first use, clean the frying basket and rack plate with hot water, dish soap, and a non-abrasive sponge. Wipe the inside and outside of the appliance with a damp cloth.
3. **Placement:** Place the air fryer on a stable, horizontal, and heat-resistant surface. Ensure there is adequate ventilation around the appliance (at least 10 cm clearance on all sides).
4. **Power Connection:** Plug the power cord into a grounded wall outlet.

5. OPERATING INSTRUCTIONS

The Neo Pro Digital Air Fryer offers both pre-set functions and manual control for precise cooking.

Using Pre-Set Functions:

1. Place food in the frying basket. Insert the basket back into the air fryer.
2. Press the power button to turn on the appliance.
3. Select one of the 10 pre-set functions (e.g., French Fries, Steaks, Shrimps, Chicken Wings, Meat Skewers, Ribs, Cake, Chicken Legs, Fish, Defrost) by pressing the 'MENU' button repeatedly until the desired icon is highlighted.
4. The air fryer will automatically set the optimal time and temperature for the selected function.
5. Press the start/pause button to begin cooking.

Sturdy and Durable Build



Image: The digital control panel displays 10 pre-set functions for various recipes, including French Fries, Steaks, and Chicken Wings.

Manual Temperature and Time Control:

1. Place food in the frying basket. Insert the basket back into the air fryer.
2. Press the power button.
3. Use the temperature control buttons (up/down arrows with thermometer icon) to adjust the temperature between 80°C and 200°C.
4. Use the time control buttons (up/down arrows with clock icon) to set the desired cooking time.
5. Press the start/pause button to begin cooking.

Your Recipes, Your Way

Customise time and temperature as per your needs



Image: A hand interacts with the digital display to customize time and temperature settings for cooking.

Automatic Shut-Off: The air fryer will automatically shut off once the set cooking time has elapsed. A timer sound will indicate completion.

6. COOKING GUIDE

The following table provides general guidelines for common foods. Cooking times and temperatures may vary based on food quantity, size, and desired crispiness. Always ensure food is cooked thoroughly.

Easy To Clean And Maintain



Service at your Doorstep!

We provide best-in-class service at your doorstep for **Neo Pro Air Fryer 1300W**, ensuring complete peace of mind. Just call us on **18002660788**.



Image: The air fryer is capable of baking, grilling, roasting, and frying a variety of foods, including fries, roast chicken, vegetables, seafood, and pizza.

Food Item	Temperature	Time	Notes
French Fries (frozen)	180°C - 200°C	15 - 25 min	Shake basket halfway through.
Chicken Drumsticks	180°C	20 - 30 min	Flip halfway through.
Fish Fillets	160°C - 180°C	10 - 15 min	Lightly brush with oil.
Vegetables (chopped)	180°C	10 - 18 min	Toss with a little oil.
Muffins/Cupcakes	160°C	12 - 18 min	Use silicone cups.

7. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your air fryer. Always unplug the appliance and allow it to cool completely before cleaning.

- Basket and Rack Plate:** The non-stick frying basket and rack plate are dishwasher-safe. Alternatively, wash them with hot water, dish soap, and a non-abrasive sponge. Avoid metal utensils or abrasive cleaning materials.
- Interior:** Wipe the interior of the appliance with a damp cloth. For stubborn food residue, use a mild detergent.
- Exterior:** Clean the exterior with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Heating Element:** Use a cleaning brush to remove any food residue from the heating element.

REGISTER YOUR PURCHASE FOR PRIORITY SERVICE



- Pan-India Doorstep Service
- Quick Resolutions within 48 Hours
- On-demand Virtual Product Demo



Image: The non-stick basket is easy to clean and maintain, shown being washed under running water.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in.	Ensure the power cord is securely plugged into a grounded outlet.
Food is not cooked evenly.	Basket is overloaded; food not shaken.	Do not overload the basket. Shake or flip food items halfway through cooking.
White smoke comes from the appliance.	Grease residue from previous use; excessive oil on food.	Clean the basket and heating element thoroughly. Blot excess oil from food before air frying.
Food is not crispy.	Too much moisture in food; insufficient cooking time/temperature.	Pat food dry before cooking. Increase cooking time or temperature slightly.

9. SPECIFICATIONS

- **Model Number:** Neo Pro Digital Air Fryer 4.5L
- **Capacity:** 4.5 Liters
- **Power:** 1450W
- **Voltage:** 230V-50Hz
- **Temperature Range:** 80°C - 200°C
- **Dimensions (LxWxH):** 27.5 x 24 x 29.5 Centimeters
- **Item Weight:** 3 kg 200 g
- **Included Components:** Air Fryer: 1N, Basket 4.5L: 1N, Non-Stick Rack Plate: 1N

10. WARRANTY AND SUPPORT

Your Wonderchef Neo Pro Digital Air Fryer comes with a reliable **2-year warranty**, reflecting our commitment to quality and durability. This warranty covers manufacturing defects under normal household use.

Customer Support:

For any queries, service requests, or warranty claims, please contact Wonderchef customer support:

- **Toll-Free Numbers:** 1860 266 0788, 7070 59 59 59
- **Email:** care@wonderchef.in
- **Warranty Registration:** Register your purchase for priority service and to activate your warranty online: [Register Warranty Here](#)

Wonderchef offers Pan-India Doorstep Service with quick resolutions within 48 hours. Service is available Monday-Saturday, 9 am to 6 pm.



Pan-India Doorstep Service

Wonderchef On-site Warranty

48h Quick Resolution

1860 266 0788

7070 59 59 59

care@wonderchef.in

Across 20,000+ Pincodes

Monday-Saturday 9am to 6pm

Authorised Service Agent

The graphic features a map of India with numerous red star icons indicating service locations across various states including Ladakh, Jammu Kashmir, Himachal Pradesh, Punjab, Uttarakhand, Rajasthan, Uttar Pradesh, Madhya Pradesh, Chhattisgarh, Odisha, Maharashtra, Gujarat, Karnataka, Andhra Pradesh, Tamil Nadu, Kerala, West Bengal, Assam, Meghalaya, Tripura, and Arunachal Pradesh. A circular logo with 'WOW' and star icons is positioned above the map. The background is a gradient of yellow and orange, with a red banner at the bottom containing the Wonderchef logo.

Image: Wonderchef provides Pan-India Doorstep Service, with contact numbers and email for support across numerous pincodes.

