

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [sweeek](#) /

> [sweeek Fleeeep Convertible 2-Seater Armchair Instruction Manual](#)

sweeek IFLEEE2BCLOWH

# sweeek Fleeeep Convertible 2-Seater Armchair Instruction Manual

Model: IFLEEE2BCLOWH

## INTRODUCTION

This instruction manual provides essential information for the safe and effective use of your sweeek Fleeeep Convertible 2-Seater Armchair. Please read this manual thoroughly before assembly and operation, and retain it for future reference. This armchair is designed for indoor use and offers multiple adjustable positions for comfort and versatility.

## SAFETY INFORMATION

- Ensure the armchair is placed on a flat, stable surface to prevent tipping.
- Keep children and pets away from moving parts during adjustment to prevent injury.
- Do not exceed the maximum weight capacity (consult product specifications if available).
- Avoid placing the armchair near heat sources or in direct sunlight to prevent material degradation.
- Do not use abrasive cleaners or harsh chemicals on the fabric.

## PACKAGE CONTENTS

Upon unpacking, verify that all components are present and undamaged:

- 1 x sweeek Fleeeep Convertible 2-Seater Armchair
- 1 x Lumbar Cushion

If any parts are missing or damaged, please contact customer support.

## SETUP

The sweeek Fleeeep Convertible Armchair comes pre-assembled and requires minimal setup. Simply remove all packaging materials and place the armchair in your desired location.



Image: The sweeck Fleep Convertible Armchair in its standard chair configuration, ready for use.

Ensure adequate space around the armchair for conversion between its various positions. Refer to the dimensions below for planning.



Image: Detailed dimensions of the armchair in both its folded (chair) and unfolded (bed) states, showing length, width, and height measurements.

## OPERATING INSTRUCTIONS

---

The Fleeep armchair features a simple mechanical system for adjusting its position. It can be set to five different positions, ranging from an upright armchair to a fully flat bed.

### Converting Positions:

1. **From Chair to Reclined:** Gently push the backrest forward until you hear a click, then slowly recline it to your desired angle. The mechanism will lock into place at each predefined position.
2. **From Reclined to Flat (Bed):** Continue pushing the backrest forward past the reclined positions until it releases and can be laid completely flat.
3. **From Flat (Bed) to Chair:** Lift the backrest upwards until it clicks into the first upright position. Continue lifting and adjusting until it reaches the desired chair or reclined position.



Image: The armchair adjusted to a reclined position, suitable for lounging or reading.



Image: The armchair fully unfolded into a flat bed configuration, providing an occasional sleeping surface.

Always ensure the mechanism locks securely into place before applying full weight to the armchair in any position.

## MAINTENANCE

---

### Cleaning the Bouclé Fabric:

- **Regular Cleaning:** Dust and light debris can be removed by gently wiping with a dry cloth or using a soft brush attachment on a vacuum cleaner.
- **Spot Cleaning:** For spills, blot immediately with a clean, dry cloth. Do not rub, as this can spread the stain. For stubborn stains, use a mild fabric cleaner specifically designed for upholstery, testing on an inconspicuous area first. Follow the cleaner's instructions carefully.
- **Avoid:** Do not use harsh chemicals, bleach, or abrasive cleaning tools, as these can damage the bouclé fabric.

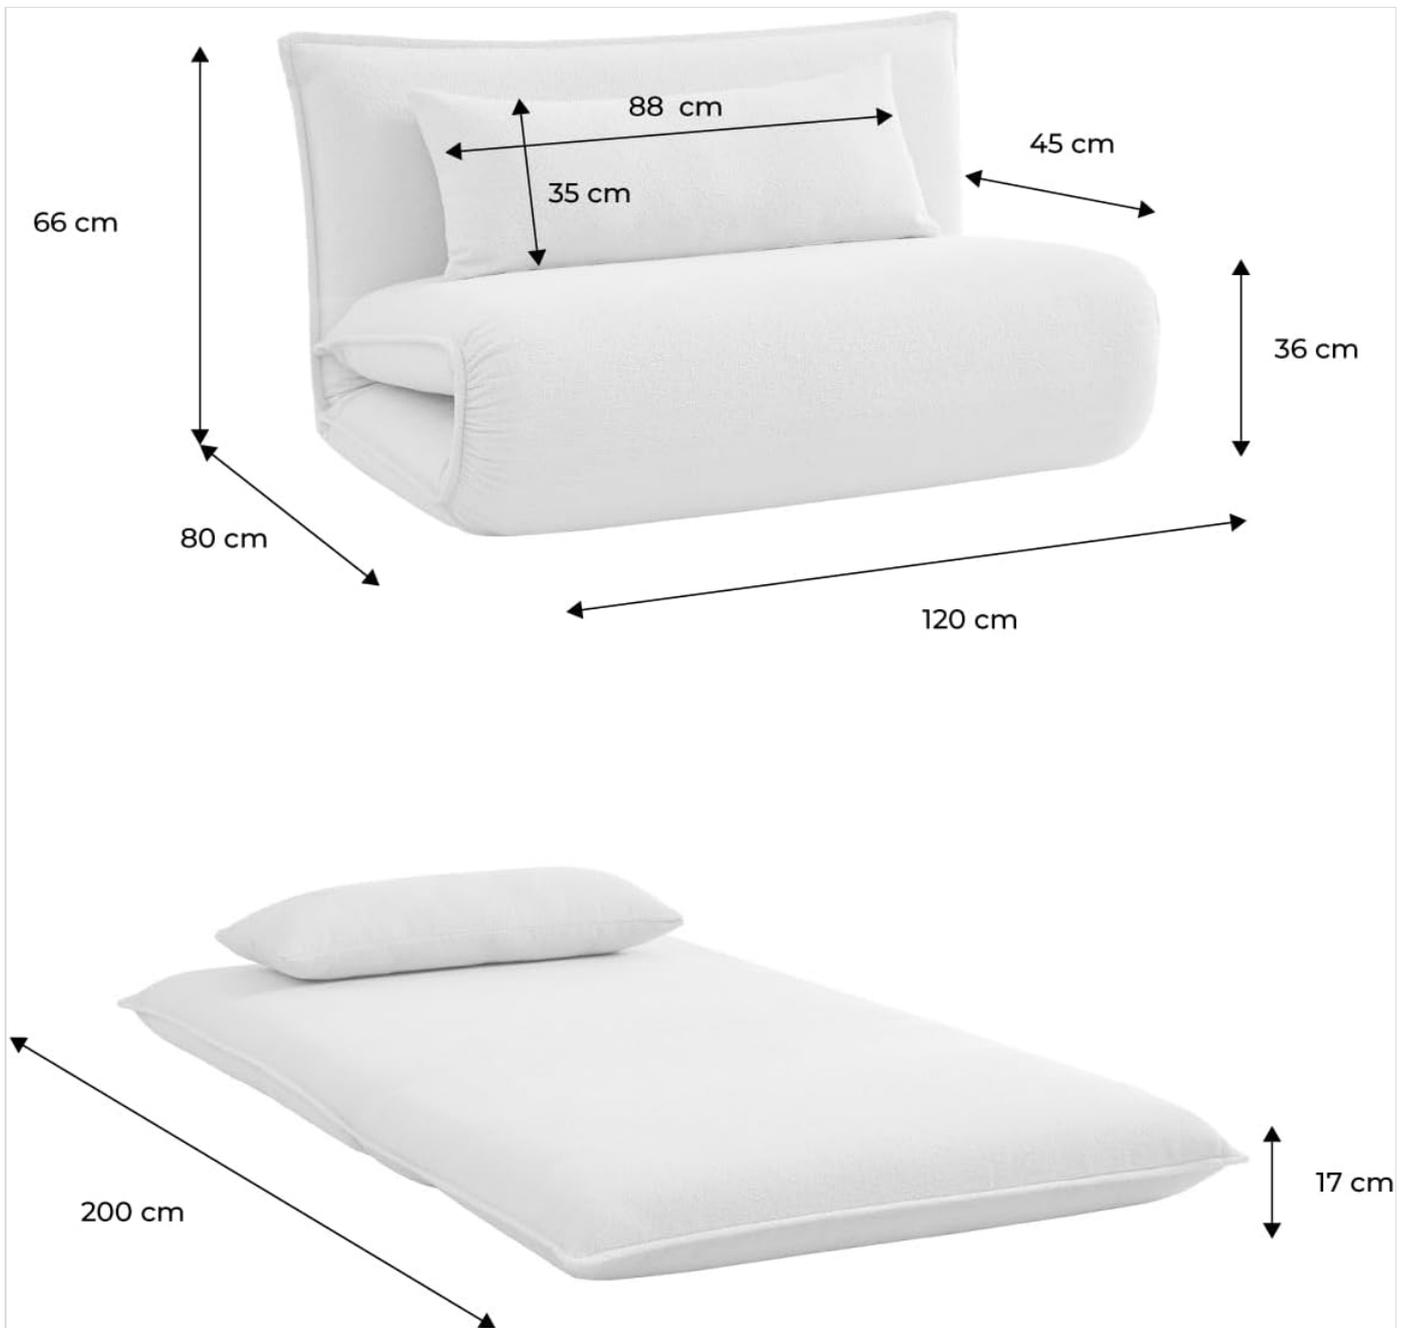


Image: A detailed view of the bouclé textured fabric, highlighting its unique looped surface.

### Frame Maintenance:

The metal frame requires minimal maintenance. Periodically check all connections and fasteners to ensure they are tight. Wipe the frame with a dry cloth to remove dust.

### TROUBLESHOOTING

Problem	Possible Cause	Solution
Armchair does not adjust smoothly.	Mechanism obstruction or dirt.	Check for any foreign objects obstructing the mechanism. Gently clean around the moving parts.
Unstable or wobbly.	Uneven floor or loose connections.	Ensure the armchair is on a level surface. Check and tighten any visible fasteners on the frame.

Problem	Possible Cause	Solution
Fabric appears discolored or stained.	Improper cleaning or prolonged exposure to sunlight.	Refer to the "Maintenance" section for proper cleaning techniques. Avoid direct, prolonged sunlight exposure.

If you encounter issues not listed here or if solutions do not resolve the problem, please contact customer support.

## SPECIFICATIONS

Feature	Detail
Brand	sweeek
Model Number	IFLEEE2BCLOWH
Color	Blanc Cassé (Off-White)
Product Dimensions (Chair)	L 120 x P 80 x H 66 cm (Length 120 cm, Depth 80 cm, Height 66 cm)
Product Dimensions (Bed)	L 200 x P 120 x H 17 cm (Length 200 cm, Depth 120 cm, Height 17 cm)
Item Weight	22 Kilograms
Material (Cover)	100% Polyester Bouclé Fabric (500g/m <sup>2</sup> )
Material (Frame)	Metal
Filling (Seat)	Polyurethane Foam (24kg/m <sup>3</sup> )
Filling (Cushion)	Polyester Fiber
Number of Positions	5
Care Instructions	Wipe with a dry cloth

## WARRANTY AND SUPPORT

For information regarding warranty coverage, please refer to the purchase documentation or contact the retailer. For technical assistance, missing parts, or any other inquiries, please contact sweeek customer support through their official website or the contact information provided with your purchase.

**Online Support:** [www.sweeek.com](http://www.sweeek.com)

