

Elite Gourmet EAF2305

Elite Gourmet Glass Air Fryer EAF2305 User Manual

Model: EAF2305

INTRODUCTION

Thank you for choosing the Elite Gourmet Glass Air Fryer EAF2305. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read all instructions carefully before first use and retain this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before operating the air fryer.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the glass basket is properly seated before operating.
- Do not overfill the basket.

PRODUCT OVERVIEW

The Elite Gourmet Glass Air Fryer EAF2305 is designed for compact use, ideal for 1-2 people. It features a transparent glass cooking bowl and a PFAS-free ceramic-coated Ceralast™ air fry rack, allowing you to monitor your food as it cooks.



Figure 1: Close-up view of the air fryer's glass basket, emphasizing its PFAS-free ceramic coating and absence of plastic contact with food.

Crispy Results with Little to No Oil

Powerful 1150W heating with 360° convection airflow cooks food evenly and quickly. Adjustable temperature from 175°F to 400°F and a 1-30 minute timer give you full control.



Figure 2: The air fryer highlighting its glass construction for cooking without plastic contact.



Includes Everything You Need to Get Started

PFAS-free ceramic coated air fry rack, instruction manual, and 15 recipes to help you start cooking confidently right out of the box.

Figure 3: The air fryer promoting chemical-free cooking with its PFAS-free ceramic coating and glass bowl.

Components:

- Main Unit with Control Panel
- Removable Glass Cooking Bowl
- PFAS-Free Ceramic-Coated Air Fry Rack

- Handle

SETUP AND FIRST USE

Unpacking:

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Remove the glass cooking bowl and air fry rack from the main unit.

Cleaning Before First Use:

1. Wash the glass cooking bowl and air fry rack with hot water, dish soap, and a non-abrasive sponge.
2. Wipe the inside and outside of the main unit with a damp cloth.
3. Ensure all parts are thoroughly dry before reassembling.

Assembly:

1. Place the air fry rack into the glass cooking bowl.
2. Slide the assembled glass cooking bowl with the rack back into the main unit until it clicks securely into place.

OPERATING INSTRUCTIONS

The Elite Gourmet Glass Air Fryer uses rapid air circulation technology to cook food with little to no oil, resulting in crispy textures.

Basic Operation:

1. Place the air fryer on a stable, heat-resistant surface.
2. Plug the power cord into a grounded wall outlet.
3. Carefully pull out the glass cooking bowl by its handle.
4. Place your ingredients onto the air fry rack inside the glass bowl. Do not exceed the MAX fill line.
5. Slide the glass cooking bowl back into the air fryer until it is fully closed.
6. Adjust the temperature using the temperature control dial (175°F to 400°F).
7. Set the cooking time using the timer dial (1 to 30 minutes). The air fryer will automatically begin heating once the timer is set.
8. The power indicator light will illuminate when the unit is on, and the heating indicator light will show when the heating element is active.
9. During cooking, you can visually monitor the food through the transparent glass bowl without opening it, preventing heat loss.
10. When the cooking time is complete, the timer will ring, and the air fryer will automatically shut off.
11. Carefully pull out the glass cooking bowl and remove the cooked food. Use heat-resistant tongs or utensils.
12. Allow the appliance to cool completely before cleaning.



Figure 4: The air fryer in operation, demonstrating the ability to see food crisping in real-time through the glass basket.

Cooking Tips:

- For best results, preheat the air fryer for 3-5 minutes before adding food.
- Shake the basket halfway through cooking for even browning, especially for smaller items like fries or nuggets.
- Lightly spray or brush food with oil for extra crispiness, if desired.
- Refer to the included recipe book for specific cooking times and temperatures for various foods.

COOK FULL MEALS FAST



Figure 5: The air fryer showcasing its capability to cook a variety of meals quickly.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your air fryer.

Cleaning the Air Fryer:

1. Always unplug the air fryer and allow it to cool completely before cleaning.
2. The glass cooking bowl and ceramic-coated air fry rack are dishwasher safe. Alternatively, wash them with hot water, dish soap, and a non-abrasive sponge.
3. Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scouring pads.
4. Ensure all parts are completely dry before storing or next use.

Dishwasher-safe Parts

Easy to Clean • Less Mess



Glass Care Instructions

Do:

- Allow bowl to cool
- Wash with warm water

Don't:

- Rinse hot glass with cold water

Figure 6: Dishwasher-safe components of the air fryer, illustrating ease of cleaning.

Storage:

Store the air fryer in a cool, dry place when not in use. Ensure the power cord is neatly wrapped and secured.

TROUBLESHOOTING

If you encounter any issues with your Elite Gourmet Glass Air Fryer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; basket not fully inserted; timer not set.	Ensure the power cord is securely plugged into a working outlet. Push the glass cooking bowl completely into the main unit. Set the timer to the desired cooking duration.
Food is not cooked evenly.	Basket is overcrowded; food not shaken or flipped.	Cook food in smaller batches. Shake or flip food halfway through cooking.

Problem	Possible Cause	Solution
Food is not crispy.	Not enough oil (if desired); temperature too low; cooking time too short.	Lightly spray or brush food with oil. Increase temperature or cooking time as needed.
White smoke comes from the appliance.	Grease residue from previous use; fatty ingredients.	Clean the glass cooking bowl and rack thoroughly after each use. For very fatty foods, consider using parchment paper or draining excess fat during cooking.
Appliance smells like burning plastic during first use.	Normal for new appliances.	This is normal and will dissipate after a few uses. Ensure good ventilation during initial operation.

SPECIFICATIONS

- **Model Number:** EAF2305
- **Capacity:** 2.4 Quarts (2.3 Liters)
- **Power:** 1150 Watts
- **Voltage:** 120 Volts
- **Temperature Range:** 175°F - 400°F
- **Timer:** 1 - 30 Minutes with Auto Shut-off
- **Control Method:** Dial (Temperature & Timer)
- **Material:** Glass (Bowl), PFAS-Free Ceramic (Rack), Plastic (Exterior)
- **Product Dimensions:** 8.4"D x 10.4"W x 10.8"H
- **Item Weight:** 2.81 Kilograms
- **Special Features:** Programmable, Visible Cooking, Dishwasher Safe Parts

WARRANTY AND SUPPORT

Warranty Information:

The Elite Gourmet Glass Air Fryer EAF2305 comes with a limited manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including coverage duration and limitations. Keep your proof of purchase for warranty claims.

Customer Support:

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact Elite Gourmet customer service. Contact details can typically be found on the product packaging, the official Elite Gourmet website, or the warranty card. When contacting support, please have your model number (EAF2305) and proof of purchase readily available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question