

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Mighty](#) /
› [Mighty 3 \(MD-M325\) Spotify & Amazon Music Player User Manual](#)

Mighty MD-M325

Mighty 3 (MD-M325) Spotify & Amazon Music Player User Manual

Model: MD-M325 | Brand: Mighty

INTRODUCTION

The Mighty 3 (2026 Edition) is a portable, screen-free music player designed to provide offline access to your Spotify Premium and Amazon Music Unlimited playlists and podcasts. This device allows you to enjoy your audio content without the need for a phone or internet connection, making it ideal for workouts, travel, or any activity where you want to minimize distractions. It supports both Bluetooth and wired headphones.

WHAT'S IN THE BOX

- Mighty 3 Player
- Type-C Charging Cable
- Quick Start Guide

PRODUCT OVERVIEW

The Mighty 3 features a compact design with intuitive controls for easy navigation of your music and podcasts.

MUSIC AND PODCASTS WITHOUT A PHONE OR SCREEN



WORKS WITH THESE SERVICES

Spotify Premium (Student, Individual, Duo, Family)
Amazon Music Unlimited

Figure 1: Mighty 3 Player, front view, highlighting compatibility with Spotify Premium and Amazon Music Unlimited.

WATER & DROP RESISTANT SUPER SMALL 1.5 x 1.5 x 0.64" (38 x 38 x 16mm)



Figure 2: Various views of the Mighty 3 Player, illustrating its small size, clip mechanism, and port locations.

Controls and Ports

- **Play/Pause Button:** Central button for playback control.
- **Volume Up/Down:** '+' and '-' buttons for adjusting audio volume.
- **Track Skip:** Left and right buttons for skipping tracks forward or backward.
- **Playlist Button:** Top-right button to cycle through playlists.
- **LED Indicator:** Provides status updates (charging, connected, etc.).
- **3.5mm Headphone Jack:** For wired headphone connection.
- **USB-C Port:** For charging and data transfer.
- **Integrated Clip:** For attaching the device to clothing or accessories.

SETUP

Follow these steps to set up your Mighty 3 player and begin enjoying your music.

1. Install the Mighty App

The Mighty app is required for initial setup, syncing playlists, and managing your device. It is available for both iOS and Android devices.

- Scan the QR code provided in the Quick Start Guide or search for "Mighty Audio" in the Apple App Store or Google Play Store.
- Install the app on your smartphone.

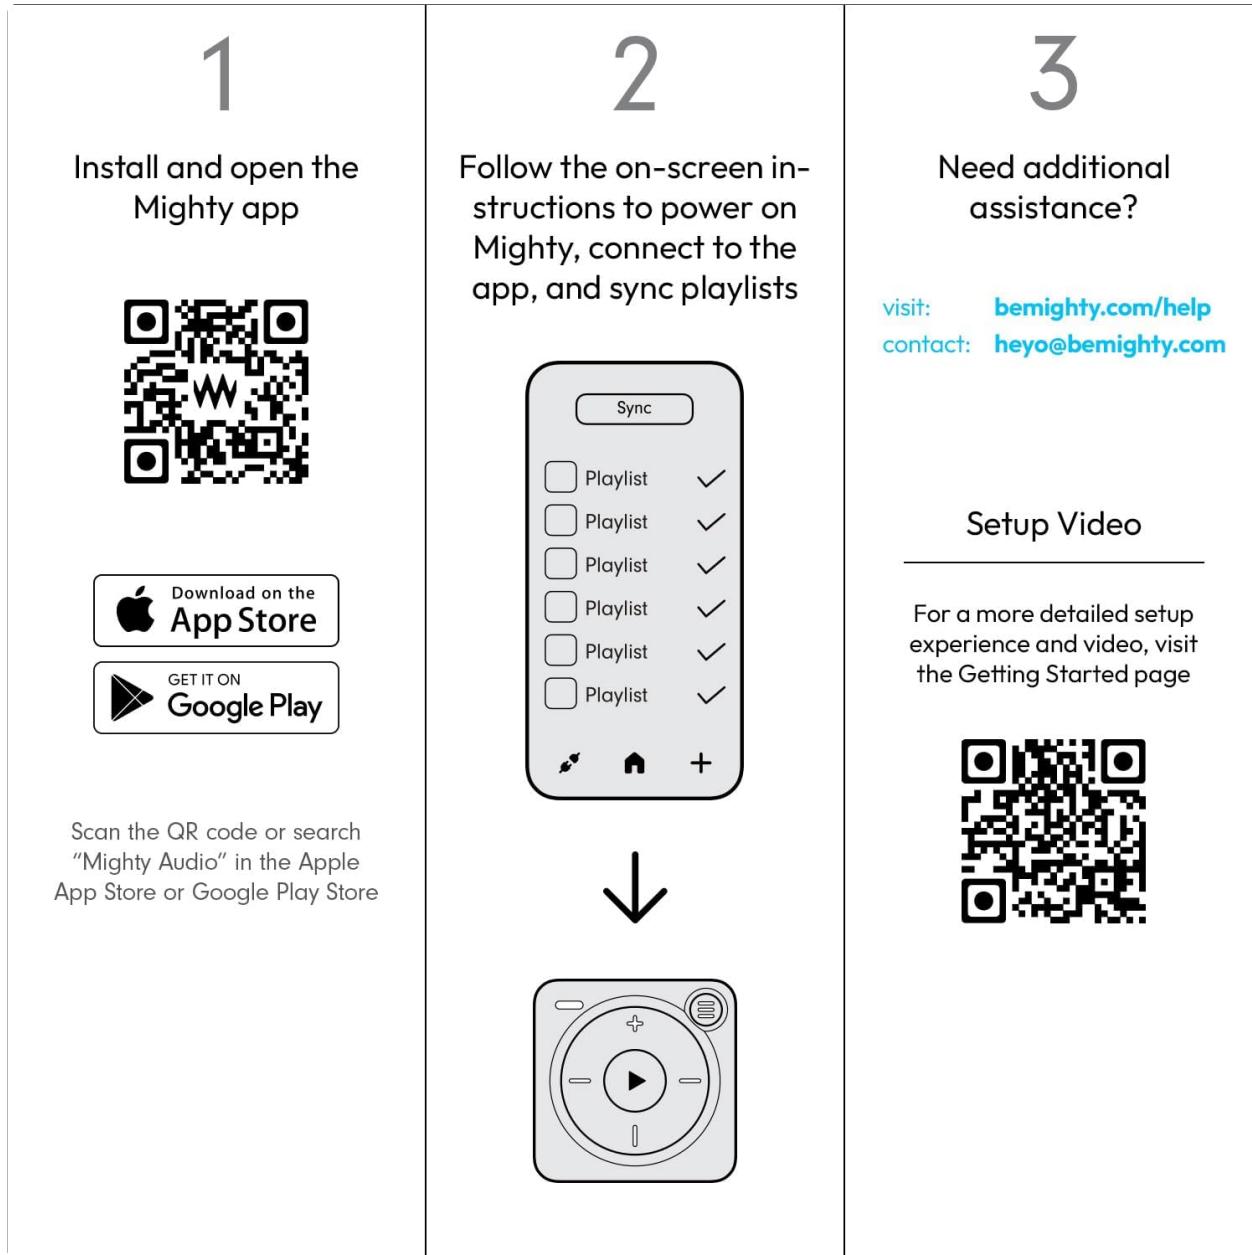


Figure 3: Visual guide for app installation and playlist syncing.

2. Power On and Connect to App

1. Plug your Mighty 3 into the Type-C charging cable. Powering on will take up to 5 seconds.
2. Open the Mighty app on your smartphone.
3. Follow the on-screen instructions to connect your Mighty 3 to the app. You may need to select your Mighty model (Mighty 3) and confirm the LED status.
4. Log in to your Mighty account or create a new one.

LED Startup Color Guide:

- Solid green: Powering on
- Blinking green: On
- Solid white: Fully charged
- Blinking white: Charging

3. Software Update

Ensure your Mighty 3 has the latest software for optimal performance.

1. The app will check for available software updates.
2. If an update is available, follow the prompts to install it. Ensure your Mighty 3 remains connected to the charger during this process.
3. Mighty will automatically restart and reconnect to the app after the update.

Video 1: This video demonstrates the step-by-step process of setting up your new Mighty 3 player, including app connection and initial configuration.

4. Connect Music Service & Sync Playlists

Mighty 3 supports Spotify Premium and Amazon Music Unlimited.

1. In the Mighty app, select your preferred music service (Spotify or Amazon Music).
2. Log in to your music service account through the app.
3. Select the playlists you wish to sync to your Mighty 3.
4. Ensure your Mighty 3 is connected to a Wi-Fi network for downloading songs.
5. Tap 'Sync Now' to transfer your selected playlists to the device.

5. Bluetooth Pairing

Connect your Mighty 3 to Bluetooth headphones or speakers.

1. Put your Bluetooth headphones or speaker into pairing mode.
2. In the Mighty app, navigate to the Bluetooth settings.
3. Select your device from the list to pair.

OPERATING INSTRUCTIONS

Power On/Off

- To turn Mighty on or off, hold down the Play button until the LED turns green (on) or orange (off).

Playback Controls

- **Play/Pause:** Press the central Play button.
- **Volume:** Press the '+' or '-' buttons.
- **Skip Track:** Press the left or right buttons.
- **Change Playlist:** Press the top-right playlist button. Mighty uses a voice UI to announce playlist names.

Using Wired Headphones

- Plug any standard 3.5mm wired headphones into the headphone jack on your Mighty 3.

WORKS WITH **BLUETOOTH** AND
WIRED HEADPHONES
AND SPEAKERS



Figure 4: Mighty 3 demonstrating compatibility with both wired and Bluetooth headphones.

Video 2: This short video highlights the core benefit of the Mighty 3 as a Spotify music player, enabling music and podcasts without a phone.

MAINTENANCE

Charging

- Use the provided Type-C charging cable to charge your Mighty 3.
- A full charge provides over 8 hours of continuous playback.

Water Resistance

- The Mighty 3 is IPX4 rated, meaning it is water, sweat, light rain, and splash resistant.
- **Important:** Do not swim with or submerge your Mighty 3.

Storage & 'Stay Fresh' Feature

- The device has 8 GB of memory, capable of storing over 1,000 songs.
- The 'Stay Fresh' feature automatically updates your playlists while the device is charging and connected

to Wi-Fi, ensuring your content is always current without manual intervention.

TROUBLESHOOTING

If you encounter issues with your Mighty 3, refer to the following common solutions:

- **Device Not Powering On:** Ensure the device is charged. Connect it to the Type-C charging cable and allow it to charge for at least 15 minutes before attempting to power on again.
- **Syncing Issues:** Verify your Mighty 3 is connected to a stable Wi-Fi network. Ensure your Spotify Premium or Amazon Music Unlimited subscription is active. Try restarting both the Mighty 3 and the Mighty app.
- **Bluetooth Connectivity Problems:** Ensure your Bluetooth headphones/speakers are in pairing mode. Check that no other devices are actively connected to your Mighty 3. Try unpairing and re-pairing the Bluetooth device through the Mighty app.
- **Poor Audio Quality:** Ensure your headphones are properly connected (wired) or paired (Bluetooth). Check the audio quality settings in the Mighty app.
- **Battery Draining Quickly:** Ensure the device is fully charged before use. Background Wi-Fi activity during syncing can consume more power.

For more detailed troubleshooting, visit the official Mighty support website or contact customer support.

SPECIFICATIONS

Feature	Detail
Product Dimensions	0.63 x 1.5 x 1.5 inches
Item Weight	0.705 ounces
Item Model Number	MD-M325
Memory Storage Capacity	8 GB (1000+ songs)
Battery Life	8+ hours playback
Connectivity Technology	Bluetooth
Headphone Connection	Bluetooth, 3.5mm Headphone Jack
Water Resistance	IPX4 (water, sweat, light rain, splash resistant)
Supported Standards	Spotify Premium, Amazon Music Prime, Amazon Music Unlimited
Display Technology	No display

SUPPORT

For additional assistance or inquiries, please use the following resources:

- **Online Help:** Visit bemighty.com/help
- **Email Support:** Contact heyo@bemighty.com
- **Amazon Message Tool:** Reach out through the Amazon message tool for support.

The Mighty team is committed to providing support and aims to respond within 48 hours.