



[Manuals.plus](#) /

> [Elite Gourmet](#) /

> Elite Gourmet EG2615 12.5 Qt Electric Skillet User Manual

## Elite Gourmet EG2615

# Elite Gourmet EG2615 12.5 Qt Electric Skillet User Manual

MODEL: EG2615

[Important Safeguards](#) [Parts](#)

[Identification](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

## Introduction

Thank you for purchasing the Elite Gourmet EG2615 12.5 Qt Electric Skillet. This appliance is designed for versatile cooking, offering a large capacity and a durable Ceralast™ PFAS-Free ceramic non-stick coating. Please read this manual thoroughly before use to ensure safe and efficient operation.

## Important Safeguards

When using electrical appliances, basic safety precautions should always be followed, including:

1. Read all instructions before operating.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse the temperature control probe, cord, or plug in water or other liquids. The skillet body and lid are dishwasher safe once the probe is removed.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer support for assistance.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.

11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "OFF", then remove plug from wall outlet.
13. Do not use appliance for other than intended use.

## Parts Identification

- Electric Skillet Base (with Ceralast™ Ceramic Non-Stick Coating)
- Tempered Glass Vented Lid
- Removable Variable Temperature Control Probe
- Cool-Touch Handles



Image: The Elite Gourmet Electric Skillet with its lid and temperature control probe. This image shows the overall design and main components of the skillet.

12.5Qt Capacity



**4" Extra-Deep Sidewalls**  
Cook larger meals with less splatter and mess

Image: A person holding the Elite Gourmet Electric Skillet, highlighting its 15-inch length, 12-inch width, and 4-inch extra-deep sidewalls, indicating its 12.5 Qt capacity.

## Setup

### Before First Use:

1. Carefully unpack the electric skillet and remove all packaging materials.
2. Wash the skillet body and tempered glass lid in warm, soapy water. Rinse thoroughly and dry completely. The temperature control probe should never be immersed in water.
3. Wipe the exterior of the skillet and the temperature control probe with a damp cloth.
4. Ensure all parts are completely dry before assembly and use.

### Assembly:

1. Place the electric skillet on a stable, heat-resistant surface.
2. Insert the removable temperature control probe firmly into the receptacle on the side of the skillet. Ensure it is fully seated.
3. Do not plug the unit into an electrical outlet until ready to cook.

## Operating Instructions

## Temperature Control:

The Elite Gourmet Electric Skillet features a removable, adjustable temperature control probe, allowing you to set temperatures from 200°F to 400°F. The power indicator light on the probe will illuminate when the skillet is heating and turn off once the set temperature is reached.

1. After preparing your food in the skillet, plug the temperature control probe into a standard 120V AC electrical outlet.
2. Turn the temperature dial to your desired setting.
3. Allow the skillet to preheat for a few minutes until the indicator light turns off, signaling it has reached the set temperature.
4. Adjust the temperature as needed during cooking.
5. When cooking is complete, turn the temperature dial to the "OFF" position and unplug the unit from the outlet.



**Custom Cooking**  
Set temp from 200°F to 400°F

Image: A hand adjusting the removable temperature control probe of the Elite Gourmet Electric Skillet, showing the temperature settings from 200°F to 400°F.

## Cooking with the Skillet:

The 12.5 Qt capacity and 4-inch deep sidewalls make this skillet suitable for a variety of meals, from frying and roasting to baking. The Ceralast™ PFAS-Free ceramic non-stick coating ensures food releases easily.

- **Versatile Meal Preparation:** Use for breakfast, lunch, or dinner. Cook meats, pastas, eggs, bacon, and even baked goods.
- **Reduced Splatter:** The extra-tall 4-inch walls help contain food and reduce splatter during cooking.
- **Moisture Retention:** The tempered glass lid helps lock in moisture, ensuring juicy and tender results while allowing you to monitor cooking progress.
- **Even Heat:** The fully embedded "Rapid Heat" element provides consistent heating across the cooking surface.



Image: The Elite Gourmet Electric Skillet containing meatballs in sauce, demonstrating its deep capacity and 4-inch sidewalls to prevent splatter.



Image: A table laden with various cooked dishes, including roasted vegetables, fried eggs, and grilled meats, illustrating the skillet's versatility for roasting, frying, steaming, and baking.

## Maintenance and Cleaning

### Cleaning Instructions:

1. Always unplug the electric skillet and allow it to cool completely before cleaning.
2. Remove the temperature control probe. The probe should never be immersed in water or placed in a dishwasher. Wipe it clean with a damp cloth if necessary.
3. The skillet body and tempered glass lid are dishwasher safe (top rack only). For best results and to prolong the life of the non-stick coating, hand washing with warm, soapy water and a soft sponge is recommended.
4. Do not use abrasive cleaners, scouring pads, or metal utensils on the non-stick surface, as this can damage the coating.
5. Ensure all parts are thoroughly dry before storing.



**Dishwasher Safe**  
Lid & Skillet (without temperature control)

Image: The Elite Gourmet Electric Skillet and its lid placed in the top rack of a dishwasher, demonstrating its dishwasher-safe feature (without the temperature control probe).

## Quick & Delicious ONE-POT MEAL



Image: A split image showing a hand wiping the ceramic nonstick surface of the skillet for easy cleaning, and another hand removing the thermostat for storage and making the skillet dishwasher safe.

### Storage:

Store the skillet and its components in a dry place. The removable temperature control probe can be stored separately to prevent damage.

### Troubleshooting

Problem	Possible Cause	Solution
Skillet does not heat up.	Not plugged in; temperature probe not fully inserted; power outlet malfunction.	Ensure unit is properly plugged into a working outlet. Check that the temperature control probe is fully inserted into the skillet receptacle.
Food sticks to the surface.	Insufficient oil/fat; cooking at too high a temperature; damaged non-stick coating.	Use a small amount of cooking oil or butter. Adjust temperature to a lower setting. Avoid using metal utensils that can scratch the coating. If coating is damaged, contact customer support.
Uneven heating.	Temperature probe not properly calibrated or faulty.	Ensure the temperature probe is correctly inserted. If problem persists, contact customer support.
Lid does not fit securely.	Lid or skillet warped.	Check for any visible damage to the lid or skillet rim. If warped, contact customer support.

### Specifications

- **Model:** EG2615

- **Capacity:** 12.5 Quarts
- **Dimensions:** 15" x 12" x 4" (cooking surface), 18.11"D x 7.08"W x 12.6"H (overall product)
- **Wattage:** 1500W
- **Voltage:** 120V AC
- **Coating:** Ceralast™ PFAS-Free Ceramic Non-Stick
- **Color:** Black/Gray
- **Item Weight:** 8.84 pounds
- **Special Feature:** Lightweight, Xtra Deep Dish, Tempered Glass Vented Lid, Dishwasher Safe (skillet and lid only)



**EASY TO CLEAN**

Ceramic coating's nonstick surface makes it easier to remove debris and simplify cleanup.

**REMOVABLE THERMOSTAT**

Remove for easy storage and to make the skillet and lid dishwasher safe.

Image: A top-down view of the Elite Gourmet Electric Skillet, illustrating its 12" x 15" cooking surface and 12.5 Qt capacity, emphasizing its durability.

**CERALAST™**  
CERAMIC NON-STICK  
ELECTRIC SKILLET

**4" SIDEWALL**  
prevents splatter  
or mess

4"



Image: A cross-section diagram illustrating the multi-layer coating of the Elite Gourmet Electric Skillet, including ceramic coatings, primer coatings, metal body, and exterior coating, highlighting its long-lasting, scratch-resistant, and easy-cleaning properties.

## **Warranty and Support**

---

### **Limited 1-Year Warranty:**

The Elite Gourmet EG2615 Electric Skillet is backed by a 1-Year Limited Warranty from the date of purchase. This warranty covers defects in materials and workmanship under normal household use. It does not cover damage resulting from misuse, accident, commercial use, or unauthorized modification.

### **Customer Support:**

For warranty claims, technical assistance, or product inquiries, please contact Elite Gourmet customer support. Refer to the product packaging or the official Elite Gourmet website for current contact information.