

MINISO MS120

MINISO MS120 Wireless Earbuds User Manual

Model: MS120

INTRODUCTION

Thank you for choosing the MINISO MS120 Wireless Earbuds. This device is a versatile 3-in-1 product, combining high-fidelity Bluetooth 6.0 headphones, a 2000mAh power bank, and a high-powered flashlight with multiple lighting modes. Designed for daily use, sports, and travel, the MS120 offers excellent sound quality, comfortable wear, and practical features. Please read this manual carefully to ensure proper use and optimal performance.



Image: The MINISO MS120 device showcasing its three main functions: wireless earbuds, a flashlight, and a power bank, with a smartphone connected for charging.

WHAT'S IN THE BOX

- MINISO MS120 Earbuds (1 pair)
- Wireless Charging Case (1)
- Charging cable (2)
- Lanyard (1)
- User Manual (1)

PRODUCT OVERVIEW

Familiarize yourself with the components of your MINISO MS120 device.



Image: Diagram illustrating the MINISO MS120 device, highlighting the flashlight, power bank charging port, LED display, and the storage for the earbuds.

- **Earbuds:** In-ear design for audio playback and calls.

- **Charging Case:** Houses and charges the earbuds, features an integrated flashlight, power bank, and LED display.
- **LED Display:** Shows battery status and other relevant information.
- **Flashlight:** Located at one end of the charging case for illumination.
- **Power Bank Charging Port:** USB port for charging external devices.
- **Multi-function Touch Buttons:** Located on each earbud for controlling music, calls, and volume.
- **One-Click Switch:** Button on the charging case to activate and cycle through flashlight modes.

SETUP

1. Initial Charging

Before first use, fully charge the MINISO MS120 charging case and earbuds.

1. Connect one of the provided charging cables to the charging port on the case and the other end to a USB power adapter (not included).
2. The LED display on the case will indicate the charging status.
3. Place the earbuds into the charging case. They will begin charging automatically.
4. Ensure the case and earbuds are fully charged for optimal battery life.



Image: The MINISO MS120 charging case connected via a cable to a smartphone, demonstrating its power bank functionality.

2. Bluetooth Pairing

Pair your MS120 earbuds with your Bluetooth-enabled device.

1. Open the charging case and remove both earbuds. They will automatically enter pairing mode.
2. On your device (smartphone, tablet, etc.), go to Bluetooth settings and enable Bluetooth.
3. Search for available devices and select "MINISO MS120" from the list.
4. Once connected, you will hear a confirmation tone, and the earbuds will be ready for use.
5. The earbuds will automatically reconnect to the last paired device when removed from the case.



Image: The MINISO MS120 earbuds resting in their charging case, illustrating their wireless nature and sound quality.

OPERATING INSTRUCTIONS

Earbud Controls (Touch)

The earbuds feature touch-sensitive controls for various functions.

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap on the right earbud.
- **Previous Track:** Double tap on the left earbud.
- **Answer/End Call:** Single tap on either earbud.
- **Reject Call:** Press and hold either earbud for 2 seconds.
- **Activate Voice Assistant:** Triple tap on either earbud.

- **Volume Up:** Press and hold the right earbud.
- **Volume Down:** Press and hold the left earbud.

Flashlight Operation

The integrated flashlight offers multiple lighting modes for different situations.

1. **Turn On/Off:** Press the "One-Click Switch" button on the charging case once to turn on the flashlight. Press again to turn it off.
2. **Cycle Modes:** While the flashlight is on, press the "One-Click Switch" button repeatedly to cycle through the 3-speed lighting modes (Glare, Low Light, Explosion/Strobe).
3. **Emergency Distress Signal (Flashing):** Double-click the "One-Click Switch" button to activate the emergency flashing mode. Double-click again to turn it off.



Image: The MINISO MS120 device demonstrating its three flashlight modes: Glare, Low Light, and Explosion (strobe), with an LED display showing "66".



Image: A person using the MINISO MS120 flashlight outdoors at night, highlighting its high-energy lighting capability and three levels of brightness adjustment.

Power Bank Function

The 2000mAh charging case can be used to charge other small electronic devices.

1. Connect your device's charging cable to the power bank charging port on the MINISO MS120 case.
2. Connect the other end of the cable to your external device (e.g., smartphone, watch).
3. The MS120 will begin charging your device. Monitor the LED display for battery levels.



Image: The MINISO MS120 charging case connected to a smartphone, demonstrating its function as a 2000mAh high-capacity power bank.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the earbuds and charging case. Do not use liquids or abrasive cleaners.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the device frequently. Charge regularly, even if not in use for extended periods.
- **Water Resistance:** The device is not waterproof. Avoid exposure to water or excessive moisture.

TROUBLESHOOTING

Earbuds not pairing or connecting:

- Ensure both earbuds are fully charged.
- Turn off Bluetooth on your device and turn it back on.
- Forget "MINISO MS120" from your device's Bluetooth list and attempt to pair again.
- Place earbuds back in the case, close it, wait a few seconds, then open and try again.

No sound from earbuds:

- Check the volume level on both your device and the earbuds.
- Ensure the earbuds are properly connected to your device.
- Try playing audio from a different application or source.

Charging case not charging:

- Verify the charging cable is securely connected to both the case and the power source.
- Try a different charging cable or power adapter.
- Ensure the power source is active.

Flashlight not working:

- Ensure the charging case has sufficient battery charge.
- Press the "One-Click Switch" button firmly.

SPECIFICATIONS

Brand	MINISO
Model Number	MS120
Ear Placement	In Ear
Form Factor	True Wireless
Noise Control	Sound Isolation
Connectivity Technology	Wireless
Wireless Technology	Bluetooth
Bluetooth Version	6.0
Bluetooth Range	10 Meters
Control Type	Touch Control
Power Bank Capacity	2000mAh (Integrated in charging case)
Material	Plastic
Specific Uses	Entertainment, Fitness, Travel
Additional Features	Lightweight, Surround Sound, Touch Control, Integrated Flashlight, Power Bank

WARRANTY AND SUPPORT

The MINISO MS120 Wireless Earbuds come with a limited warranty. For detailed warranty information and terms, please refer to the official MINISO website or contact customer support.

For technical support or inquiries, please visit the [MINISO Store on Amazon](#) or contact MINISO customer service through their official channels.