

Furniway 15.7D x 47.2W x 31.4H

Furniway Fluted 7-Drawer Dresser Instruction Manual

Model: 15.7"D x 47.2"W x 31.4"H

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Keep this manual for future reference.

- **Anti-Tipping Device:** This dresser is equipped with two anti-tipping devices. It is crucial to install these devices securely to a wall stud to prevent serious injury from tipping furniture.
- **Weight Limit:** Do not exceed the recommended weight capacity for the top surface or drawers. Overloading can compromise stability and safety.
- **Children Safety:** Do not allow children to climb on the dresser or hang from drawers. Always use the anti-tipping device.
- **Proposition 65 Warning:** This product can expose you to chemicals including wood dust, which is known to the State of California to cause cancer. For more information go to www.P65Warnings.ca.gov.
- **Assembly:** Assemble on a soft, clean surface to prevent scratches. Ensure all parts are correctly aligned and tightened before use.

PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

Hardware and Tools (Illustrative)

- Screws (various sizes)
- Dowel Pins
- Cam Locks and Cam Bolts
- Drawer Slides
- Gold Pull Handles
- Legs (Gold Hairpin and Central Support)
- Anti-Tipping Kit

- Hex Key (Allen Wrench)
- Screwdriver (not included, required for assembly)

Wood Panels (Illustrative)


- Top Panel
- Bottom Panel
- Side Panels (2)
- Back Panel
- Drawer Fronts (7)
- Drawer Side Panels (14)
- Drawer Back Panels (7)
- Drawer Bottom Panels (7)
- Support Beams

SETUP AND ASSEMBLY INSTRUCTIONS

Assembly typically requires two adults. Follow the numbered steps provided in your package's detailed instruction booklet. The following is a general overview.

1. **Prepare the Area:** Clear a spacious, clean, and soft area for assembly to prevent damage to the dresser components.
2. **Identify Parts:** Lay out all parts and hardware. Match them with the labels in your instruction booklet.
3. **Assemble the Frame:** Attach the side panels to the bottom panel using dowel pins, cam bolts, and cam locks. Secure the support beams.
4. **Install Drawer Slides:** Attach the drawer slides to the inner side panels of the dresser frame according to the markings.
5. **Attach Legs:** Secure the gold hairpin legs and the central support leg to the bottom panel of the dresser.
6. **Assemble Drawers:** For each of the 7 drawers, assemble the side, front, and back panels. Slide the bottom panel into the grooves. Attach the drawer slides to the drawer sides.
7. **Attach Handles:** Secure the gold pull handles to the front of each drawer.
8. **Insert Drawers:** Carefully slide each assembled drawer into its designated slot on the dresser frame.
9. **Attach Top Panel:** Secure the top panel to the assembled frame.
10. **Install Anti-Tipping Device:** Position the dresser in its final location. Secure the anti-tipping device to the back of the dresser and firmly into a wall stud using the provided hardware. This step is critical for safety.

Product Dimensions

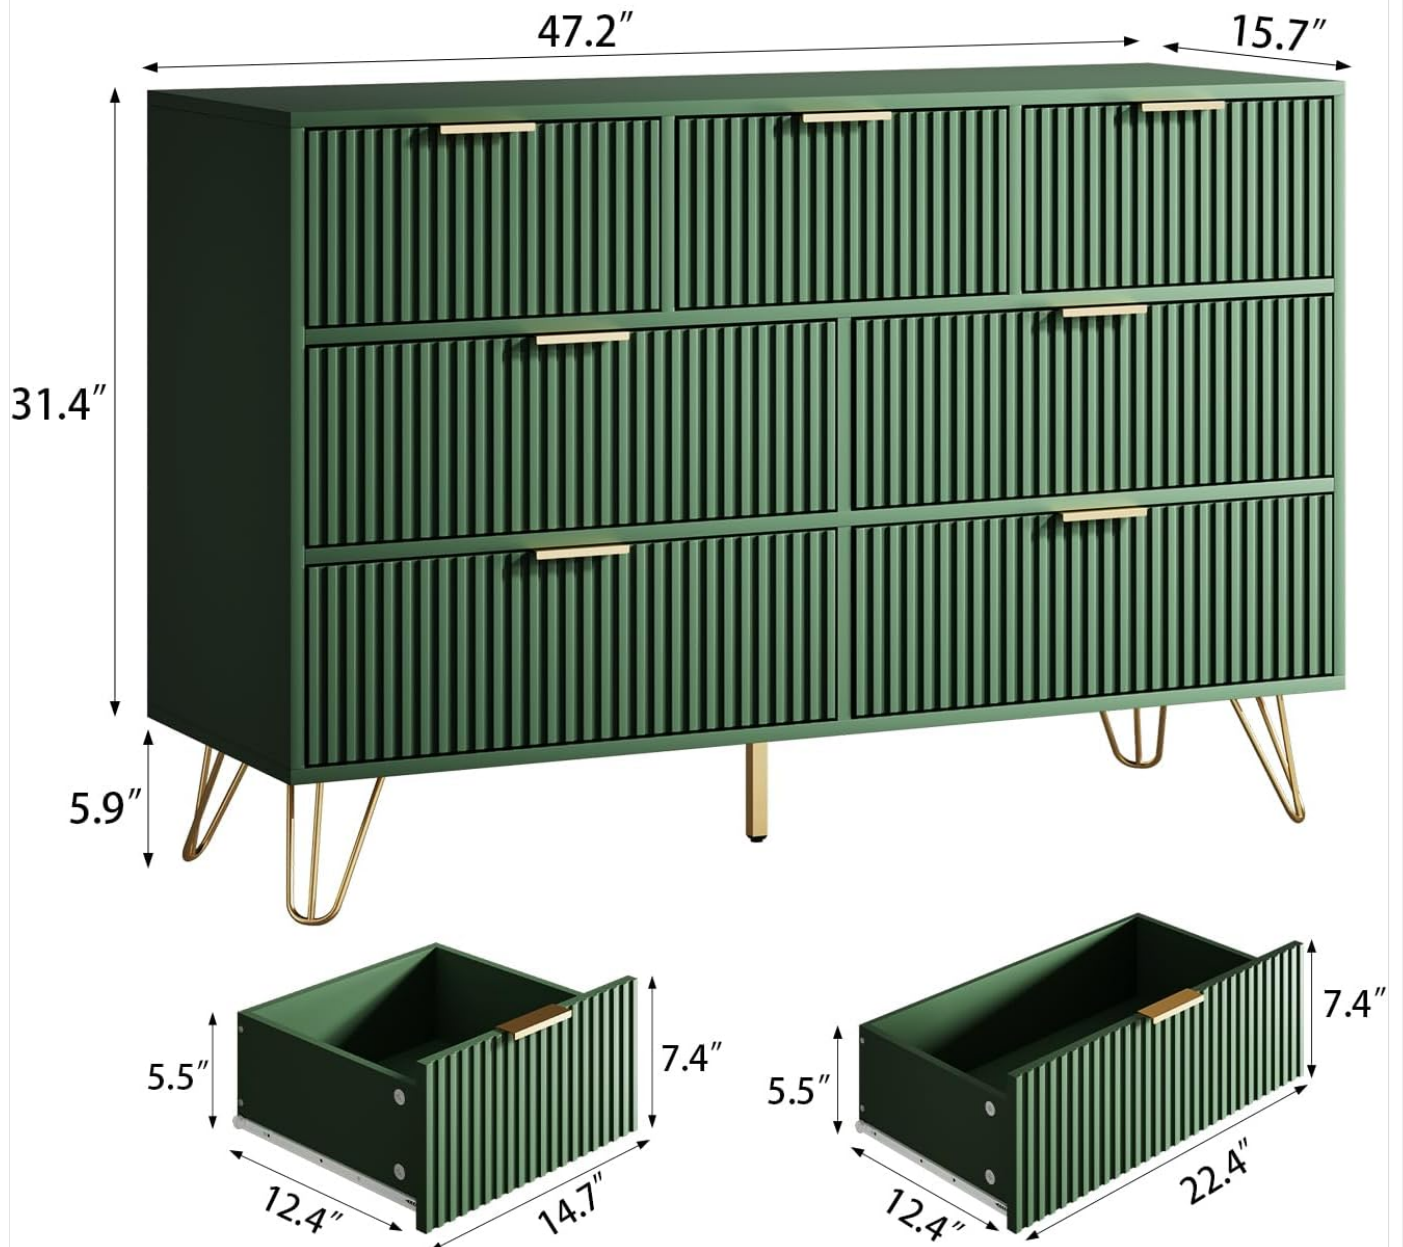

Please expect colour variance between actual product and photos due to different lighting conditions and online viewing device settings

Figure 1: Product Dimensions. Refer to these measurements during assembly and placement.



Figure 2: Key Features. Details of the golden wide handle, stable support leg, drawer slider, and modern stripe design.

OPERATING INSTRUCTIONS

The Furniway Fluted 7-Drawer Dresser is designed for easy and functional use.

- **Opening/Closing Drawers:** Gently pull the gold handles to open drawers. Push firmly but smoothly to close. Avoid slamming drawers to ensure longevity of the slides.
- **Storage Capacity:** The seven drawers provide ample storage. Distribute weight evenly within drawers to maintain balance and prevent strain on the slides.
- **Top Surface Use:** The top surface can hold decorative items, lamps, or small electronics. Ensure items are placed stably and do not exceed the dresser's weight capacity.



7 LARGE DRAWERS WITH AMPLE STORAGE SPACE



SHIRT



UNDERWEAR



SOCKS



PANTS



TOYS



TISSUE



SKIRT

Figure 3: Drawer Storage. Illustrates the ample storage space provided by the seven drawers for various items.

MAINTENANCE

Proper care will extend the life and appearance of your dresser.

- **Cleaning:** Wipe the dresser surfaces with a dry, soft cloth. Avoid abrasive cleaners, harsh chemicals, or excessive moisture, which can damage the painted finish.
- **Spills:** Immediately wipe up any spills with a dry cloth to prevent staining or damage to the wood.
- **Hardware:** Periodically check all screws and fasteners to ensure they remain tight. Retighten as necessary.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration of the finish.

TROUBLESHOOTING

If you encounter issues with your dresser, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Drawers do not slide smoothly or stick.	Incorrectly installed drawer slides; debris in slides; uneven assembly.	Ensure drawer slides are correctly aligned and free of obstructions. Check that all assembly screws are tightened. Re-check drawer placement as per instructions.
Dresser feels wobbly or unstable.	Loose fasteners; uneven floor; anti-tipping device not installed.	Tighten all assembly screws. Ensure the dresser is on a level surface. Install the anti-tipping device securely to a wall stud.
Gaps between panels or drawers.	Loose connections; panels not fully seated.	Ensure all cam locks and screws are fully tightened. Gently push panels together to ensure they are flush.
Chemical odor.	Normal for new painted materials.	Ventilate the room by opening windows and doors. The odor should dissipate over a few days.

If these solutions do not resolve the issue, please contact Furniway customer support.

SPECIFICATIONS

Feature	Detail
Brand	Furniway
Model	Fluted 7-Drawer Dresser
Material	Engineered Wood
Finish Type	Painted
Product Dimensions (D x W x H)	15.7"D x 47.2"W x 31.4"H
Number of Drawers	7
Color	Green
Style	Modern, Fluted
Mounting Type	Floor Mount (with anti-tipping device for wall attachment)
Product Care Instructions	Wipe with Dry Cloth
UPC	717382331164

WARRANTY AND SUPPORT

Furniway stands behind the quality of its products. For specific warranty details, please refer to the documentation included with your purchase or visit the official Furniway website.

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact Furniway customer support. Have your model number and purchase date ready for faster service.

Contact Information: Please refer to your purchase receipt or the Furniway official website for the most current customer service contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question