

PYY PYYSKJ71601WTUS-XZ1

PYY Cash Register User Manual

Model: PYYSKJ71601WTUS-XZ1

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your PYY Cash Register, Model PYYSKJ71601WTUS-XZ1. Please read this manual thoroughly before using the device to ensure proper functionality and to prevent damage. Keep this manual for future reference.

SAFETY INFORMATION

- Ensure the cash register is placed on a stable, flat surface.
- Do not expose the device to excessive moisture, dust, or direct sunlight.
- Use only the power adapter supplied with the unit.
- Do not attempt to open or repair the device yourself. Refer all servicing to qualified personnel.
- Keep away from strong magnetic fields.

PACKAGE CONTENTS

Verify that all items are present in the package:

- PYY Cash Register unit
- Power Adapter
- User Manual (this document)
- Cash drawer keys
- Starter paper roll

SETUP

1. Unpacking and Placement

Carefully remove the cash register from its packaging. Place the unit on a sturdy, level counter or desk, ensuring adequate ventilation around the device.

2. Connecting Power

1. Connect the power adapter cable to the power input port on the back of the cash register.
2. Plug the power adapter into a standard electrical outlet.
3. Press the power button, usually located on the side or back, to turn on the unit.

3. Loading Printer Paper

The cash register includes an integrated thermal printer. To load paper:

1. Open the printer cover, typically by pressing a latch or lifting the cover near the "FEED" button.
2. Insert the thermal paper roll with the leading edge feeding from the bottom of the roll. Ensure the paper is straight.
3. Pull a small amount of paper out past the cutter.
4. Close the printer cover firmly until it clicks into place.
5. Press the **FEED** button to test the paper feed.

4. Initial Configuration (Date and Time)

Upon first power-on, you may need to set the date and time. Refer to the on-screen prompts or navigate to the system settings menu using the **MENU** key. Use the numeric keypad to enter values and confirmation keys to save.



Image: The PYY Cash Register, showing its main unit with a keypad, integrated printer, and a digital display. Below the main unit, the cash drawer is open, revealing compartments filled with various coins. The display shows "17:1811", indicating the current time.

OPERATING INSTRUCTIONS

Basic Sales Transaction

1. **Enter Price:** Use the numeric keypad (0-9) to enter the item's price.
2. **Select Department:** Press the corresponding **DEPT** key (e.g., DEPT 1, DEPT 2) for the item's category. Repeat for multiple items.
3. **Subtotal:** Press the **SUBTOT** key to calculate the total.
4. **Cash Payment:** Enter the amount received from the customer using the numeric keypad, then press the **CASH** key. The change due will be displayed, and the cash drawer will open.

Key Functions Overview

- **DEPT (Department):** Assigns an item to a specific sales category.
- **PLU (Price Look-Up):** Used for items with pre-programmed prices. Enter the PLU code and press the PLU key.
- **FEED:** Advances the printer paper.
- **CLEAR:** Clears the last entered value or an error.
- **SUBTOT:** Calculates the current transaction total.
- **CASH:** Finalizes a cash transaction and opens the cash drawer.
- **MENU:** Accesses the system menu for programming and settings.
- **ZERO:** Enters a zero value.
- **VOID:** Cancels the last item entered or a specific item in a transaction.
- **CLERK:** Used for clerk sign-in/sign-out or to assign a transaction to a specific clerk.
- **TABLE HOLD:** May be used to temporarily hold a transaction, often in restaurant settings.
- **SKSP (Skip Space):** Functionality may vary, often related to receipt formatting.

Note: Specific key functions and programming details may vary. Refer to the on-screen prompts or advanced programming sections for detailed instructions.

MAINTENANCE

Cleaning the Unit

- Disconnect the power before cleaning.
- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Use a soft brush or compressed air to clear dust from the printer area and keypad.

Replacing Printer Paper

Follow the steps outlined in the "Loading Printer Paper" section under Setup. Ensure you use thermal paper rolls of the correct size.

Cash Drawer Maintenance

Periodically check the cash drawer for any obstructions. Ensure the drawer slides smoothly. Lubrication is generally not required.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not power on.	Power cable disconnected; faulty outlet.	Check power connections; try a different outlet.
Printer not printing.	No paper; paper loaded incorrectly; printer cover not closed.	Load paper correctly; ensure cover is latched.
Cash drawer does not open.	Transaction not finalized; drawer jammed; key not used correctly.	Complete transaction; check for obstructions; use key for manual open.
Incorrect time/date displayed.	Settings not configured or reset.	Access the MENU to adjust date and time settings.

SPECIFICATIONS

- **Brand:** PYY
- **Model Number:** PYYSKJ71601WTUS-XZ1
- **Product Dimensions:** 13.2 x 15 x 8.2 inches
- **Item Weight:** 14.1 pounds
- **ASIN:** B0FHDQBMGM
- **Manufacturer:** PYY
- **Date First Available:** July 12, 2025

WARRANTY AND SUPPORT

This PYY Cash Register comes with a standard manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included with your product or contact PYY customer support. For technical assistance or service inquiries, please visit the official PYY website or contact their customer service department.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FHDQBMGM>

More documents and user manuals: <https://manuals.plus/>