

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

### XVLT2SZ5AXN7C6T2IBCG

## Generic Visual Timer Kids: Silent 60-Minute Countdown Clock

Model: XVLT2SZ5AXN7C6T2IBCG

### INTRODUCTION

This manual provides comprehensive instructions for the Generic Visual Timer Kids, a silent 60-minute countdown clock. Designed for effective time management, this non-ticking device is suitable for various environments including classrooms, kitchens, study areas, and offices. It assists users in visualizing time progression, enhancing focus and task completion.

### PACKAGE CONTENTS

- 1 x Generic Visual Timer Kids
- Instruction Manual (this document)

**Note:** 1 battery is required and not included in the package.

### SETUP

Before using your visual timer, you will need to install a battery.

1. Locate the battery compartment on the back of the timer.
2. Open the battery compartment cover.
3. Insert one battery (not included), ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

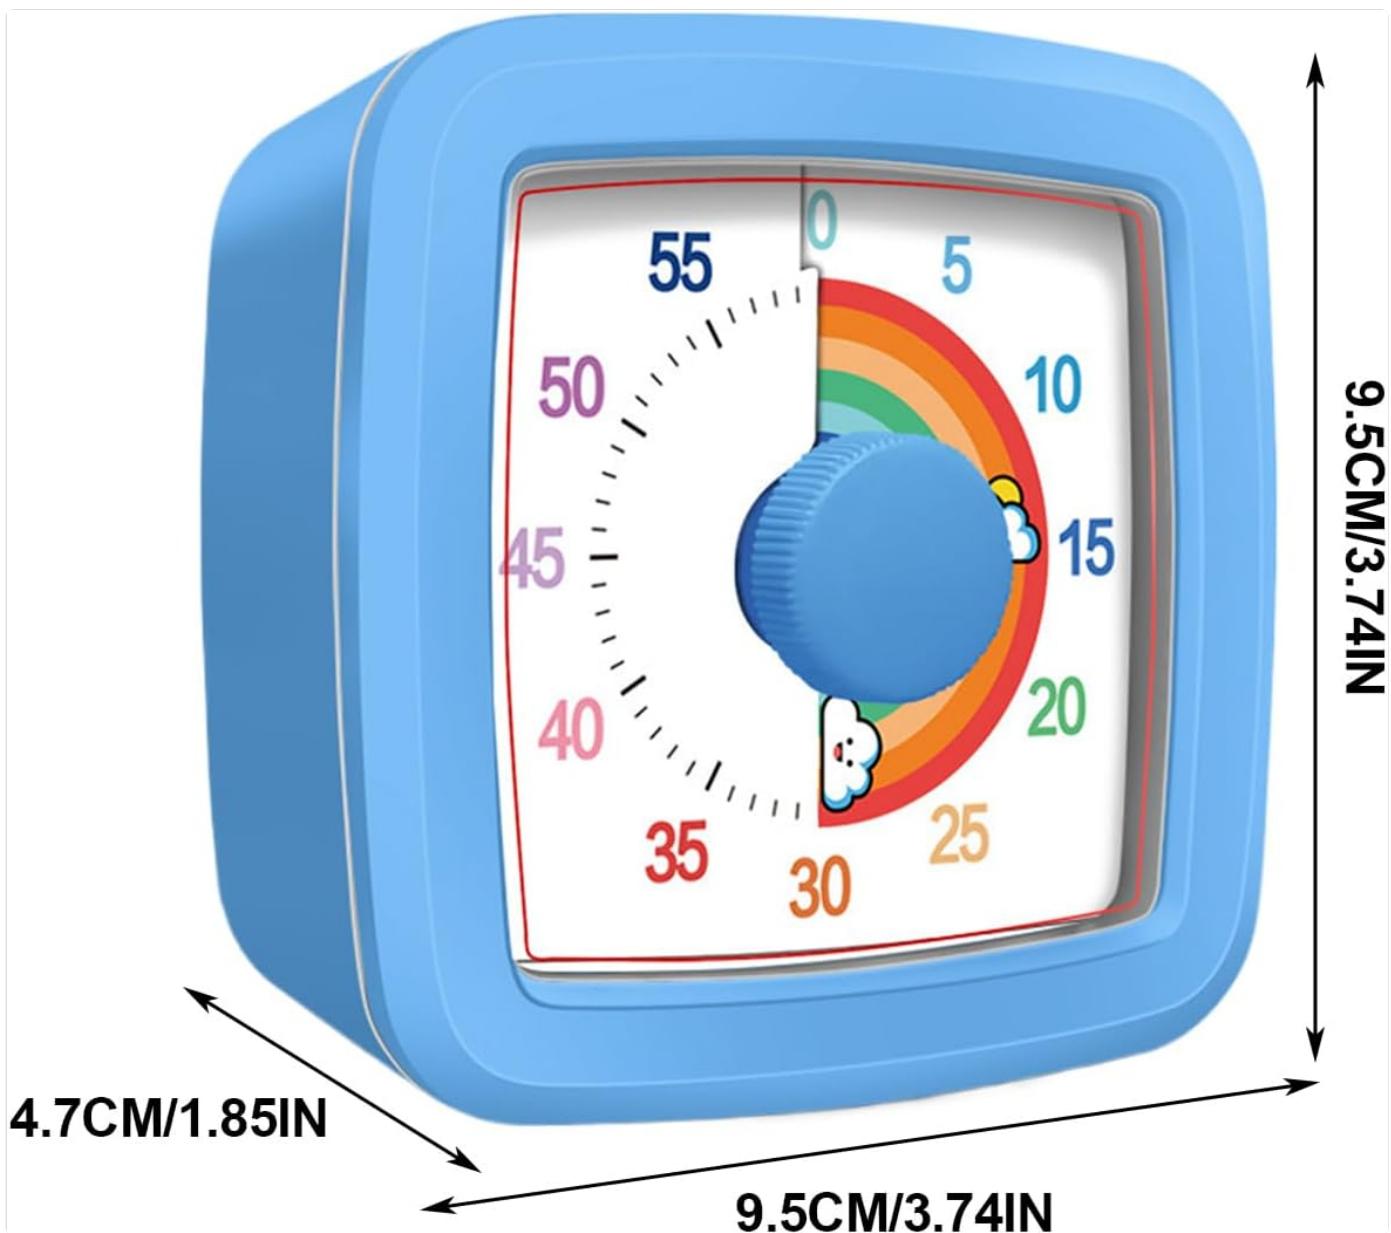


Figure 1: Rear view of the timer, indicating the battery compartment location and product dimensions.

## OPERATING INSTRUCTIONS

The visual timer is designed for straightforward operation.

- Setting the Timer:** Turn the central knob clockwise to set the desired countdown time, up to 60 minutes. As you turn the knob, a red disk will appear, visually representing the remaining time.
- Starting the Countdown:** Once the red disk is set, the timer automatically begins counting down silently. The red disk will gradually disappear as time elapses.
- Visual Progress:** Observe the red disk to visually track the passage of time. The numbers on the dial indicate minutes.
- Timer Completion:** When the red disk completely disappears, indicating the set time has elapsed, the timer will emit a fun feedback sound.
- Stopping the Sound:** The sound will automatically stop after a short duration or can be manually turned off by rotating the knob back to the '0' position.



**Figure 2:** The visual timer in use, demonstrating the red disk indicating remaining time.

# Children's learning reminder time manager



Figure 3: The timer assisting with focus during study time.

## MAINTENANCE

Proper care ensures the longevity and optimal performance of your visual timer.

- **Cleaning:** Wipe the timer with a soft, dry cloth. Avoid using abrasive cleaners or solvents, as these can damage the surface.
- **Storage:** Store the timer in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** If the timer's performance diminishes or the sound becomes weak, replace the battery promptly. Remove the battery if the timer will not be used for an extended period to prevent leakage.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Timer does not start or red disk does not appear.	No battery, incorrect battery installation, or dead battery.	Ensure a fresh battery is installed with correct polarity.
No sound when time expires.	Low battery or internal malfunction.	Replace the battery. If the issue persists, the unit may require replacement.
Red disk does not move smoothly.	Internal mechanism obstruction.	Ensure the timer is on a flat, stable surface. Avoid dropping or impacting the device.

## SPECIFICATIONS

**Product Name:** Visual Timer Kids

**Model Number:** XVLT2SZ5AXN7C6T2IBCG

**Brand:** Generic

**Material:** ABS


**Color:** Blue

**Timing Range:** 0-60 minutes

**Power Supply:** 1 x Battery (not included)

**Product Dimensions:** Approximately 9.5 x 9.5 x 4.7 cm (3.74 x 3.74 x 1.85 inches)

**Item Weight:** Approximately 154 g

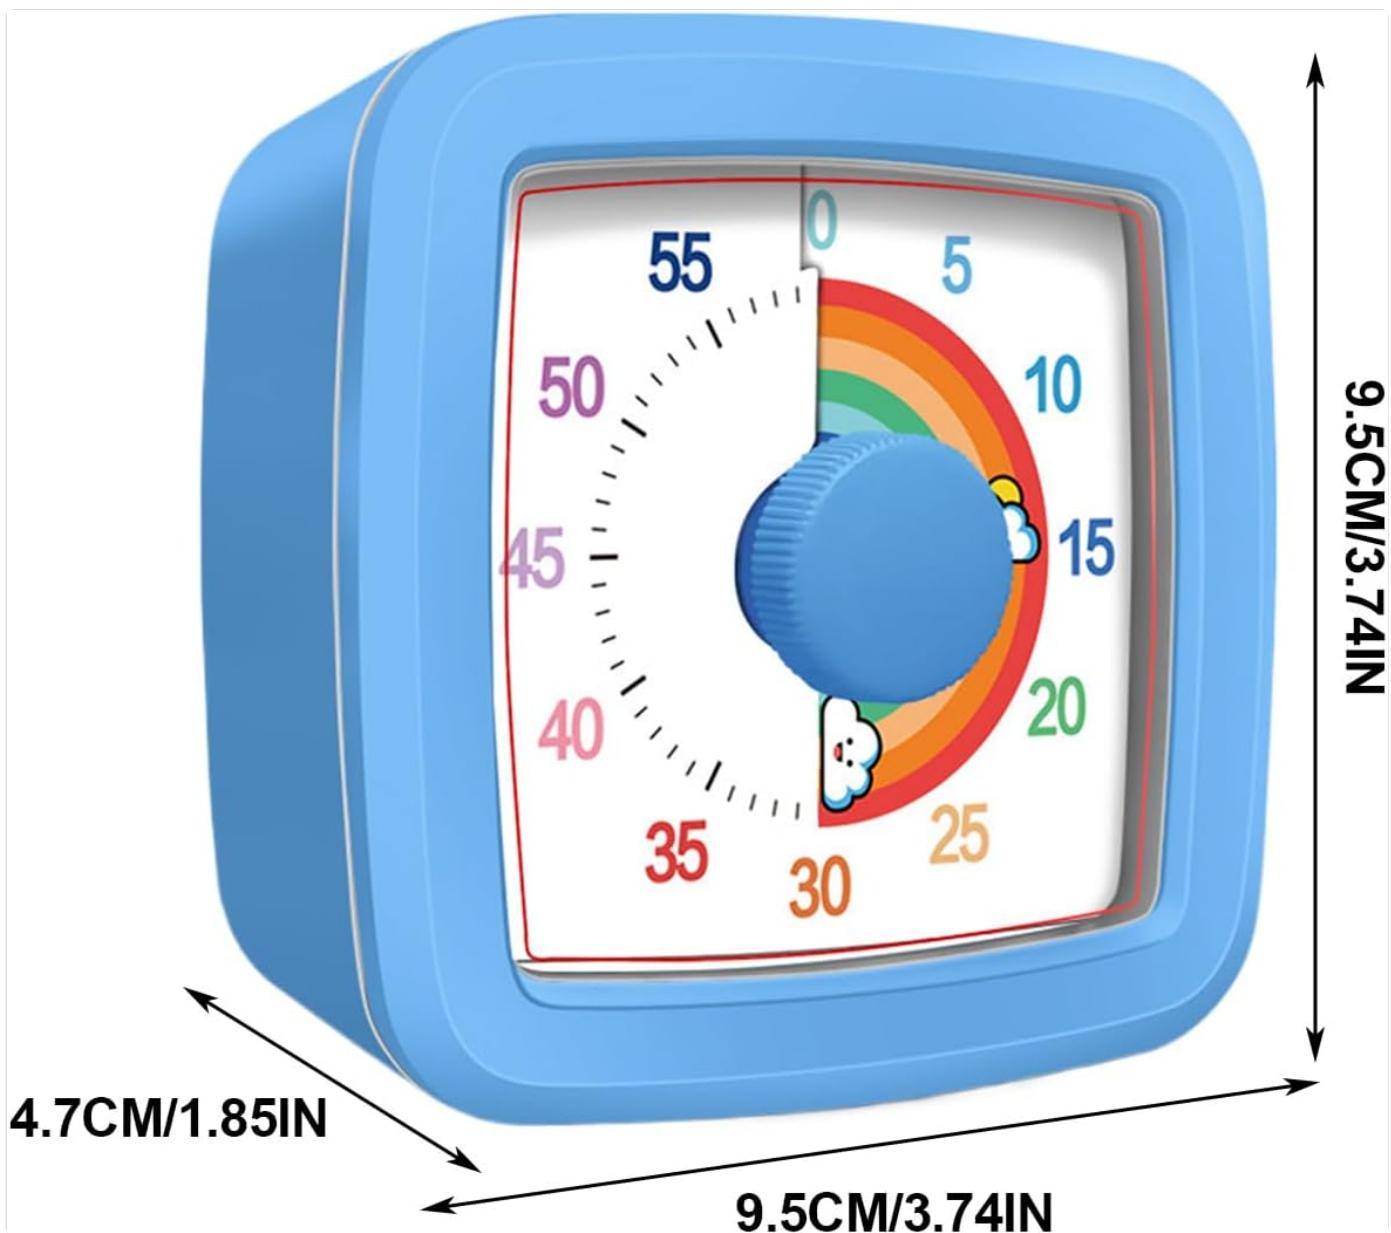

**Figure 4:** Visual representation of the timer's dimensions.