

KLIM KLCD-3873

KLIM KLCD-3873 CD Player & Cassette Boombox User Manual

Model: KLCD-3873

INTRODUCTION

This manual provides instructions for the KLIM KLCD-3873 CD Player & Cassette Boombox. This versatile audio system offers multiple playback options including CD, cassette, Bluetooth, AM/FM radio, USB, and AUX input. It features dual 3W speakers for stereo sound and can be powered by AC or batteries for portable use. A remote control is included for convenient operation.



The KLIM KLCD-3873 boombox with its included remote control.

PRODUCT OVERVIEW

Components and Controls

Familiarize yourself with the various parts and controls of your KLIM KLCD-3873 boombox:

ALL THE MODES YOU NEED

With Tape Player and Recording!



CD Player
USB Drive
AUX
AM/FM Radio
Cassette Player
Bluetooth

Top view of the boombox, highlighting the CD compartment and main control buttons.

- **CD Compartment:** Located on top, for inserting audio CDs.
- **Cassette Door:** Located on the front, for inserting cassette tapes.
- **LCD Display:** Shows current mode, track number, radio frequency, etc.
- **Function/Mode Button:** Switches between CD, Cassette, Bluetooth, Radio, USB, and AUX modes.
- **Volume Controls (VOL-, VOL+):** Adjusts the audio output level.
- **Play/Pause Button:** Starts or pauses playback.
- **Stop Button:** Stops playback.
- **Skip/Search Buttons (Previous/Next):** Skips tracks or fast forwards/rewinds.
- **Repeat Button:** Repeats current track or all tracks.
- **Record Button:** Initiates recording from radio or CD to cassette.
- **AM/FM Antenna:** Extendable antenna for radio reception.
- **Tuning Knob:** For manual tuning of AM/FM radio frequencies.
- **USB Port:** For playing audio files from a USB drive.
- **AUX Input:** For connecting external audio devices via a 3.5mm cable.
- **Headphone Jack:** For private listening with headphones.
- **AC Power Input:** For connecting the AC power cord.
- **Battery Compartment:** Located on the bottom, for C-size batteries.



Side view of the boombox, illustrating the various input/output ports.

SETUP

Powering the Device

The KLIM KLCD-3873 can be powered using either AC power or batteries.

AC Power (Indoor Use)

1. Ensure the unit is turned off.
2. Connect the supplied AC power cord to the AC input jack on the back of the boombox.
3. Plug the other end of the AC power cord into a standard wall outlet (120V ~ 60Hz).

Battery Power (Portable Use)

1. Ensure the unit is turned off and disconnected from AC power.
2. Open the battery compartment cover located on the bottom of the unit.
3. Insert 6 x 'C' size batteries (not included), ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.

PLAY MUSIC YOUR WAY

Easy to use

3W Dual Speakers



LCD Display

Rear view of the boombox, illustrating the battery compartment for portable power.

OPERATING INSTRUCTIONS

Turn on the boombox by pressing the Power button. Use the Function/Mode button to select your desired audio source.



The KLIM KLCD-3873 boombox ready for operation.

CD Playback

1. Press the Function/Mode button until 'CD' appears on the LCD display.
2. Open the CD compartment cover on top of the unit.
3. Place an audio CD or MP3/WMA CD onto the spindle with the label side facing up.
4. Close the CD compartment cover. The CD will begin playing automatically after reading.
5. Use the Play/Pause, Stop, and Skip/Search buttons to control playback.
6. To program tracks: In stop mode, press the Program button, select a track using Skip/Search, press Program again. Repeat for up to 20 tracks. Press Play to start programmed playback.

Cassette Playback and Recording

1. Press the Function/Mode button until 'TAPE' appears on the LCD display.
2. Press the 'Push Close' button on the cassette door to open it.
3. Insert a cassette tape with the open edge facing up and the side to be played facing forward.
4. Close the cassette door.
5. Press the Play button to start playback. Use the Fast Forward/Rewind buttons to navigate the tape.
6. **To Record:** Select the desired source (CD or Radio). Insert a blank cassette. Press the Record button. Recording will begin. Press Stop to end recording.



KLIM **CD CASSETTE PLAYER**

- ✓ Multiple modes
- ✓ Amazing sound quality
- ✓ Long-lasting battery
- ✓ Remote control
- ✓ Great design



**ALL-IN ONE
AUDIO SYSTEM**

Front view of the boombox with the cassette door open, ready for tape insertion.

Bluetooth Mode

1. Press the Function/Mode button until 'BT' appears on the LCD display. The unit will enter pairing mode, indicated by a flashing 'BT'.
2. Enable Bluetooth on your external device (smartphone, tablet, etc.) and search for available devices.
3. Select 'KLIM Boombox' from the list of devices. Once paired, 'BT' will stop flashing.
4. You can now play audio from your connected device through the boombox. Use the boombox controls or your device to manage playback and volume.

AM/FM Radio

1. Press the Function/Mode button until 'RADIO' appears on the LCD display.
2. Extend the telescopic antenna for optimal FM reception. For AM, rotate the unit for best reception.
3. Use the Tuning knob to manually scan for radio stations. The frequency will be displayed on the LCD.

USB Playback

1. Insert a USB flash drive into the USB port.
2. Press the Function/Mode button until 'USB' appears on the LCD display.
3. The unit will automatically detect and begin playing compatible audio files (MP3/WMA) from the USB drive.
4. Use the Play/Pause, Stop, and Skip/Search buttons to control playback.

AUX Input

1. Connect one end of a 3.5mm audio cable (not included) to the AUX input jack on the boombox.
2. Connect the other end of the cable to the headphone jack or audio output of your external device.
3. Press the Function/Mode button until 'AUX' appears on the LCD display.
4. Play audio from your external device. Volume can be controlled via the boombox or the external device.

Remote Control

The included remote control allows for convenient operation from a distance of up to 20 feet.



The remote control for the KLIM KLCD-3873 boombox.

Functions include Power, Mute, Volume Up/Down, Mode selection, Play/Pause, Stop, Skip/Search, Repeat, and numeric track selection for CD/USB modes.

MAINTENANCE

Proper care ensures the longevity of your boombox.

- **Cleaning:** Wipe the exterior with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **CD/Cassette Care:** Handle CDs by the edges to avoid fingerprints. Keep cassette tapes away from strong

magnetic fields. Regularly clean the CD lens and cassette head with appropriate cleaning kits (not included).

- **Storage:** When not in use for extended periods, remove batteries and store the unit in a cool, dry place.

TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

Problem	Possible Solution
Unit does not power on.	Check if the AC power cord is securely connected. If using batteries, ensure they are inserted correctly and are not depleted.
CD does not play or skips.	Ensure the CD is clean and free of scratches. Verify the CD is inserted correctly with the label side up. Make sure the unit is in CD mode.
Cassette tape does not play or record.	Check if the tape is inserted correctly. Ensure the correct mode is selected for playback or recording. Verify the tape is not damaged.
Poor radio reception.	Fully extend the telescopic antenna for FM. For AM, try rotating the unit to improve signal. Move the unit away from other electronic devices that may cause interference.
Bluetooth device cannot pair.	Ensure the boombox is in Bluetooth mode and 'BT' is flashing. Make sure Bluetooth is enabled on your external device and it is within range (approx. 30 feet). Try restarting both devices.
No sound output.	Check the volume level on both the boombox and the connected device (if applicable). Ensure headphones are not plugged in if you expect sound from the speakers. Verify the correct function mode is selected.

SPECIFICATIONS

Key technical specifications for the KLIM KLCD-3873 boombox:

Feature	Detail
Brand	KLIM
Model Number	KLCD-3873
Color	Black/Gold
Dimensions (L x W x H)	8.5 x 8.39 x 4.92 inches
Weight	1.5 kg
Number of Speakers	2
Speaker Output	3W Dual Speakers
Connectivity	Bluetooth 5.1, USB, AUX, AM/FM Radio, CD, Cassette
Power Options	AC (120V ~ 60Hz) or 6 x 'C' size batteries

WARRANTY AND SUPPORT

The KLIM KLCD-3873 boombox comes with a **5-year warranty**. For any questions, technical assistance, or warranty claims, please contact KLIM customer support. Detailed support information can typically be found on the official KLIM website or through the retailer where the product was purchased.

KLIM is committed to customer satisfaction and offers 24/7 customer support to assist you with any issues you may encounter.