

[Manuals.plus](#) /

> [Curtainboro](#) /

> Curtainboro 10x13 FT Aluminum Pergola with Adjustable Canopy User Manual

Curtainboro WF-QVG5ho8dy07DJK2S5NAyCCa5X

Curtainboro 10x13 FT Aluminum Pergola with Adjustable Canopy User Manual

Model: WF-QVG5ho8dy07DJK2S5NAyCCa5X | Brand: Curtainboro

INTRODUCTION

Thank you for choosing the Curtainboro 10x13 FT Aluminum Pergola with Adjustable Canopy. This manual provides essential information for the safe assembly, operation, and maintenance of your new outdoor structure. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

This pergola is designed to enhance your outdoor living space, offering adjustable shade and a robust structure for year-round enjoyment. Its aluminum frame ensures durability and resistance to various weather conditions.

SAFETY INFORMATION

- **Read All Instructions:** Ensure you understand all assembly and safety instructions before installation.
- **Two-Person Assembly:** Assembly typically requires two or more people for safety and ease.
- **Secure Installation:** Always anchor the pergola securely to the ground or a solid surface to prevent tipping or wind damage.
- **Clear Area:** Keep the assembly area clear of children and pets.
- **Inspect Components:** Before assembly, check all parts for damage. Do not proceed with assembly if any parts are damaged. Contact customer support for replacements.
- **Weather Conditions:** In severe weather conditions (e.g., heavy winds, snowstorms), it is recommended to retract the canopy to prevent damage.
- **Proper Tools:** Use appropriate tools as specified in the assembly instructions.

PACKAGE CONTENTS

Please verify that all components listed below are present and undamaged before beginning assembly. If any parts are missing or damaged, please contact Curtainboro customer support.

- Aluminum Frame Components (Posts, Beams, Rafters)
- Adjustable Canopy Fabric
- Canopy Sliding Mechanism and Hardware
- Mounting Hardware (Bolts, Screws, Anchors)
- Assembly Tools (if included)
- Instruction Manual

SETUP AND ASSEMBLY

Careful assembly is crucial for the stability and longevity of your pergola. Follow these steps in order. It is highly recommended to have at least two people for assembly.

Step 1: Site Preparation and Planning

Choose a level and stable location for your pergola. Ensure there is adequate clearance around the structure. Refer to the dimensions diagram for precise measurements.

Stable & Durable



Reinforced Structure

Solid and Sturdy

Aluminum Columns

More Robust and Rust Proof



Reinforced Structure

Solid and Sturdy

Figure 1: Pergola Dimensions. This diagram provides the key measurements of the pergola: 144 inches (12 feet) in length, 106 inches (approximately 8.8 feet) in width, and 93 inches (7.75 feet) in height. These dimensions are crucial for planning the installation location.

Step 2: Assemble the Main Frame

Connect the vertical posts to the horizontal beams using the provided hardware. Ensure all connections are secure but do not fully tighten bolts until the entire frame is assembled and squared.

Upgraded Adjustable Canopy

The upgraded adjustable top has more shade angles, slides more smoothly and stays in place more securely.



Figure 2: Frame Reinforcement Details. Detailed images showcasing the pergola's construction. This includes a close-up of the reinforced structural connections, the robust aluminum columns designed for rust resistance, and the reinforced base plates that ensure stability.

Step 3: Install Rafters and Canopy Tracks

Attach the rafters between the main beams. These will support the canopy tracks. Ensure they are evenly spaced and securely fastened.

Step 4: Attach the Adjustable Canopy

Carefully slide the canopy fabric onto the designated tracks. Follow the specific instructions for attaching the pull cord or mechanism that allows for canopy adjustment. Ensure the canopy moves freely along the tracks.



Figure 3: Adjustable Canopy Mechanism. This image focuses on the upgraded adjustable canopy system, illustrating the smooth sliding mechanism that allows users to easily adjust the shade coverage. The design ensures the canopy stays securely in place once positioned.

Step 5: Anchor the Pergola

Once the frame is fully assembled and squared, tighten all bolts. Use the provided anchors to secure the pergola's base plates to your chosen surface. This step is critical for stability and safety.



Figure 4: Fully Assembled Pergola. This image displays the fully assembled Curtainboro 10x13 FT Aluminum Pergola, featuring its beige adjustable canopy and sturdy frame, situated on a patio with outdoor seating.

180 Grams Dekzeil Van Polyester Met PA.



Figure 5: Pergola in Backyard Setting. An overhead view of the pergola installed in a spacious backyard, demonstrating its suitability for various outdoor environments. Icons indicate UV protection, ventilation, and water resistance.

OPERATING INSTRUCTIONS

Adjusting the Canopy

The pergola features an adjustable canopy for flexible shade control. To adjust the canopy, gently pull or push the designated cord or handle. The canopy is designed to slide smoothly along its tracks, allowing you to extend or retract it to your desired position. Ensure the canopy is evenly distributed when extended to prevent uneven wear.

In anticipation of strong winds or heavy precipitation, it is advisable to fully retract the canopy to protect both the fabric and the pergola structure from potential damage.

MAINTENANCE

Regular maintenance will extend the life and appearance of your Curtainboro pergola.

- **Cleaning the Frame:** The aluminum frame requires only occasional cleaning. Use a soft cloth, mild soap, and water to wipe down the frame. Avoid abrasive cleaners or harsh chemicals that could damage the finish.

- **Cleaning the Canopy:** The canopy fabric can be cleaned with a soft brush or sponge, mild soap, and lukewarm water. Rinse thoroughly and allow to air dry completely before retracting or storing. Do not machine wash or tumble dry.
- **Hardware Inspection:** Periodically check all bolts and connections to ensure they remain tight. Re-tighten as necessary.
- **Winter Storage (Optional):** While designed for year-round use, consider removing and storing the canopy fabric in a dry place during prolonged periods of harsh winter weather to prolong its lifespan.

TROUBLESHOOTING

- **Canopy Not Sliding Smoothly:**
Solution: Check the tracks for obstructions (e.g., debris, leaves). Ensure the canopy fabric is correctly aligned within the tracks. Apply a silicone-based lubricant to the tracks if necessary.
- **Pergola Feels Unstable:**
Solution: Verify that all frame bolts are securely tightened. Ensure the base plates are properly anchored to a solid, level surface. Re-check the ground for unevenness.
- **Water Accumulation on Canopy:**
Solution: While the canopy is water-resistant, prolonged heavy rain can cause minor pooling if not properly tensioned or if the slope is insufficient. Ensure the canopy is fully extended and taut. Retract the canopy during heavy rainfall.
- **Missing or Damaged Parts:**
Solution: Do not attempt to substitute parts. Contact Curtainboro customer support immediately for replacement parts.

SPECIFICATIONS

Feature	Specification
Product Dimensions (L x W x H)	144" x 106" x 93" (12 ft x 8.8 ft x 7.75 ft)
Frame Material	Powder-Coated Aluminum
Canopy Material	Water-Resistant Fabric (Beige)
Item Weight	97 Pounds
UV Protection	Yes
Assembly Required	Yes
Model Number	WF-QVG5ho8dy07DJK2S5NAyCCa5X

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact Curtainboro customer service. Keep your purchase receipt as proof of purchase.