

[Manuals.plus](#) /

› [FRONTECH](#) /

› FRONTECH MS-0074 Wireless Mouse User Manual

FRONTECH MS-0074

FRONTECH MS-0074 Wireless Mouse User Manual

Model: MS-0074

INTRODUCTION

This manual provides instructions for the setup, operation, maintenance, and troubleshooting of your FRONTECH MS-0074 Wireless Mouse. Please read this manual thoroughly before using the product to ensure proper functionality and longevity. The FRONTECH MS-0074 is a 2.4 GHz wireless optical mouse designed for precision and comfort across various computing environments.

FRONTECH[®]

**Wireless
MOUSE**



Image: The FRONTECH MS-0074 Wireless Mouse, highlighting its 2.4 GHz wireless technology.

PACKAGE CONTENTS

- 1 x FRONTECH MS-0074 Wireless Mouse
- 1 x USB Receiver

Note: AA batteries are not included and must be purchased separately. Two AA batteries are required.

SETUP

1. Battery Installation

1. Locate the battery compartment on the underside of the mouse.
2. Open the battery compartment cover.
3. Insert two (2) AA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

FRONTECH

**Power
Saver**



2xAA Battery

Image: Underside of the FRONTECH MS-0074 Wireless Mouse showing the battery compartment and indicating the use of 2xAA batteries.

2. USB Receiver Connection

1. Remove the USB receiver from its storage slot, usually located within the battery compartment or near it.
2. Plug the USB receiver into an available USB port on your computer (PC or Laptop).
3. The computer will automatically detect and install the necessary drivers. This is a plug-and-play device.



Image: The FRONTECH MS-0074 Wireless Mouse next to its USB receiver, illustrating the wireless connection.

3. Compatibility

The FRONTECH MS-0074 Wireless Mouse is compatible with the following operating systems:

- Windows XP
- Windows Vista
- Windows 7
- Windows 8
- Windows 10
- Windows 11



Image: The FRONTECH MS-0074 Wireless Mouse highlighting its 1600 DPI capability and compatibility with various Windows operating systems.


OPERATING INSTRUCTIONS

Basic Functions

- **Left-Click Button:** Primary selection and activation.
- **Right-Click Button:** Accesses contextual menus.
- **Scroll Wheel:** Scrolls documents and web pages vertically. Can also be pressed for middle-click functionality. The anti-skid grill roller provides a firm grip for seamless scrolling.

FRONTECH

**Anti-skid
Grill Roller**

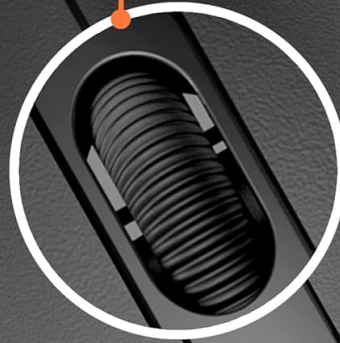

**DPI Control
Button**



FRONTECH

Image: A detailed view of the FRONTECH MS-0074 Wireless Mouse, focusing on the anti-skid scroll wheel and the DPI control button.

DPI Adjustment

The mouse features an adjustable DPI (Dots Per Inch) sensor, allowing you to change the cursor speed and sensitivity. Press the **DPI Control Button**, located behind the scroll wheel, to cycle through available DPI settings. The mouse has a maximum sensitivity of 1600 DPI.

Ergonomic Design

The FRONTECH MS-0074 is designed with an ergonomic contoured shape to fit comfortably in your hand, reducing strain during extended use. This design promotes a natural hand posture for improved usability.



Optical Sensor



Ergonomic Design

Comfortable Contoured Shape for Daily use

Image: A hand comfortably using the FRONTECH MS-0074 Wireless Mouse, demonstrating its ergonomic design.

Power-Saving Mode

The FRONTECH MS-0074 Wireless Mouse includes an intelligent power-saving mode to conserve battery life. If the mouse is inactive for a period, it will automatically enter a sleep state. To wake the mouse, simply move it or click any button.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the mouse. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the internal components.
- **Battery Replacement:** Replace batteries when the mouse performance degrades or stops responding. Always use fresh AA batteries.
- **Storage:** When not in use for extended periods, remove the batteries to prevent leakage and store the USB receiver in its dedicated slot.

TROUBLESHOOTING

Problem	Solution
---------	----------

Problem	Solution
Mouse not responding	<ul style="list-style-type: none"> • Check if batteries are correctly inserted and have sufficient charge. Replace if necessary. • Ensure the USB receiver is securely plugged into a working USB port. Try a different USB port. • Move the mouse closer to the USB receiver to rule out interference. • Restart your computer.
Erratic cursor movement	<ul style="list-style-type: none"> • Clean the optical sensor on the underside of the mouse. • Ensure you are using the mouse on a suitable surface. Avoid highly reflective or transparent surfaces. • Check for low battery power.
DPI button not changing sensitivity	<ul style="list-style-type: none"> • Ensure the mouse is powered on and connected. • Press the button firmly. • If the issue persists, try replacing the batteries.

SPECIFICATIONS

Feature	Detail
Model Number	MS-0074
Brand	FRONTECH
Connectivity Technology	2.4GHz Wireless (via USB Receiver)
Movement Detection	Optical
Buttons	4 (Left, Right, Scroll Wheel, DPI)
DPI Sensitivity	Up to 1600 DPI
Hand Orientation	Right
Compatible Devices	Laptops, Personal Computers
Operating Systems	Windows XP, Vista, 7, 8, 10, 11
Power Source	Battery Powered (2 x AA batteries required, not included)
Dimensions (L x W)	10.1 cm x 6.3 cm
Weight	44 Grams
Material	Plastic
Color	Black

Feature	Detail
Country of Origin	China

WARRANTY INFORMATION

The FRONTECH MS-0074 Wireless Mouse comes with a **1 Year Limited Warranty** from the date of purchase. This warranty covers manufacturing defects and material faults under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.



Image: The FRONTECH MS-0074 Wireless Mouse shown in different environments (office, home, library) with a "1 Year Limited Warranty" badge.

SUPPORT

For technical support, warranty claims, or further inquiries, please contact FRONTECH customer service:

- **Manufacturer:** Frontech Private Limited
- **Address:** Ecocentre, Unit-801, EM-4, Sector - V, Kolkata, West Bengal, 700091

Please visit the official FRONTECH website for the most up-to-date contact information and support resources.

