

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [DWVO](#) /
- › [DWVO 71-inch Tall Arched Kitchen Pantry Cabinet \(Model MADWV9UYob\) Instruction Manual](#)

## DWVO MADWV9UYob

# DWVO 71-inch Tall Arched Kitchen Pantry Cabinet (Model MADWV9UYob)

## INSTRUCTION MANUAL

Brand: DWVO | Model: MADWV9UYob | Color: Natural

### 1. Introduction

This manual provides detailed instructions for the assembly, operation, and maintenance of your DWVO 71-inch Tall Arched Kitchen Pantry Cabinet. Please read this manual thoroughly before assembly and use to ensure safe and correct operation. Keep this manual for future reference.



Image 1.1: The DWVO 71-inch Tall Arched Kitchen Pantry Cabinet in a natural wood finish, featuring tempered glass doors and an arched top, displayed in a kitchen.

## 2. Safety Information

**WARNING: Failure to follow these safety instructions may result in injury or damage to the product.**

- **Anti-Tipping Devices:** Always install the provided anti-tipping devices to secure the cabinet to the wall. This prevents accidental tipping, which can cause serious injury, especially to children and pets.
- **Assembly:** Follow all assembly instructions carefully. Ensure all fasteners are tightened securely before use. Do not overtighten screws.
- **Load Limits:** Do not exceed the specified weight limit of 45 lbs per shelf. Overloading can compromise the cabinet's stability and structural integrity.
- **Placement:** Place the cabinet on a flat, stable surface. Avoid placing it in areas with high humidity or direct sunlight, which can affect the wood finish.
- **Glass Care:** Handle tempered glass doors with care. Avoid sharp impacts. In case of breakage, tempered glass shatters into small, relatively harmless pieces.



Image 2.1: Key features including adjustable shelves for flexible storage, elegant glass doors, the anti-tipping safety kit, and decorative metal handles.

### 3. Package Contents

---

Before beginning assembly, verify that all components and hardware are present. Refer to the included paper manual for a detailed list of parts and illustrations. If any parts are missing or damaged, contact customer support immediately.

- Cabinet Panels (various sizes)
- Tempered Glass Doors
- Adjustable Shelves (3 included)
- Metal Handles
- LED Light Strip with Remote/App Control
- Anti-Tipping Kit
- Assembly Hardware (screws, dowels, cam locks, etc.)
- Instruction Manual (paper version)

### 4. Assembly Instructions

---

Assembly typically requires approximately two hours and is best performed with assistance. Follow the step-by-step instructions and numerical illustrations provided in the paper manual. Ensure you have a clear, spacious area for assembly.

#### 4.1. Preparation

- Unpack all components and lay them out on a soft, clean surface to prevent scratches.
- Identify each part using the labels in the paper manual.
- Gather necessary tools (e.g., screwdriver, hammer).

#### 4.2. Step-by-Step Assembly Overview

1. Assemble the base frame according to the diagrams.
2. Attach side panels and back panels. Ensure the back panels are correctly aligned.
3. Install the fixed shelves and shelf supports for adjustable shelves.
4. Attach the arched top section.

5. Install the tempered glass doors and lower cabinet doors, ensuring they swing freely.
6. Attach the metal handles to all doors.
7. Install the LED light strip inside the glass cabinet section.
8. Secure the cabinet to the wall using the anti-tipping kit.



Image 4.1: Visual representation of the cabinet's dimensions and internal structure, highlighting adjustable shelf positions.

## 5. Operating Instructions

### 5.1. Adjustable Shelves

The cabinet features three adjustable shelves within the tempered glass door section. To adjust a shelf:

1. Empty the shelf completely.
2. Carefully lift the shelf and remove the four shelf pins from their current holes.
3. Insert the shelf pins into the desired new set of holes, ensuring they are level.
4. Place the shelf back onto the pins, ensuring it is stable before placing items on it.

### 5.2. LED Lighting System

The integrated LED lights offer 24 color options and various modes, controllable via a remote or a dedicated smartphone application.

- **Power On/Off:** Use the power button on the remote or within the app to turn the lights on or off.
- **Color Selection:** Select from 24 available colors using the color palette on the remote or app.
- **Brightness Adjustment:** Adjust the light intensity using the brightness controls.
- **Music Sync Mode:** Activate this mode for the lights to react to music played through your device (if using the app) or ambient sound (if the remote has a microphone).
- **Timer Function:** Set a timer for the lights to automatically turn off after a specified duration.
- **Dynamic Modes:** Explore various pre-programmed dynamic lighting effects.



Image 5.1: The cabinet illuminated by LED lights, demonstrating control via remote and smartphone application with various color and mode options.

## 6. Maintenance

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that can damage the wood finish or glass.
- **Dusting:** Regularly dust the cabinet with a dry, soft cloth.
- **Spills:** Clean spills immediately to prevent staining or damage to the wood.
- **Hardware:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary, but do not overtighten.
- **Glass:** Use a glass cleaner specifically designed for glass surfaces. Spray onto a cloth, then wipe the glass. Avoid spraying directly onto the cabinet frame.

## 7. Troubleshooting

Problem	Possible Cause	Solution
Cabinet feels unstable or wobbly.	Uneven floor; loose fasteners; anti-tipping kit not installed or improperly secured.	Ensure the cabinet is on a level surface. Check and tighten all assembly fasteners. Install or re-secure the anti-tipping kit to the wall.
LED lights not working.	Power cord not plugged in; remote battery dead; app connection issue.	Verify the power cord is securely plugged into an outlet. Replace remote batteries. Check app connection and ensure Bluetooth/Wi-Fi is enabled.
Doors do not close properly.	Hinges misaligned; cabinet not level.	Adjust door hinges as per the paper manual. Ensure the cabinet is level.
Scratches or chips on the surface.	Impact during assembly or use; rough handling.	Minor scratches can sometimes be touched up with furniture repair pens matching the natural wood finish. Prevent future damage by handling with care.

## 8. Product Specifications

<b>Brand</b>	DWVO
<b>Model Name</b>	Pantry (MADWV9UYob)
<b>Color</b>	Natural
<b>Product Dimensions (D x W x H)</b>	15.75" x 30.9" x 71"
<b>Item Weight</b>	85 pounds
<b>Material</b>	Engineered Wood, Tempered Glass
<b>Number of Shelves</b>	3 (Adjustable)
<b>Weight Limit per Shelf</b>	45 pounds
<b>Special Feature</b>	Adjustable Shelf, LED Lights (24 Colors, Remote/App Control)
<b>Assembly Required</b>	Yes (Approx. 2 hours)
<b>UPC</b>	199449778752

## 9. Warranty and Support

DWVO is committed to providing quality products and customer satisfaction. This product is designed for durability and functionality. For any questions regarding assembly, missing parts, or operational issues, please contact DWVO customer support. We offer assistance for both pre-sales and after-sales inquiries to ensure a satisfactory experience.

Refer to your purchase documentation or the DWVO official website for specific warranty terms and contact information.

© 2025 DWVO. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.