

manuals.plus /

› [ORIGBELIE](#) /

› [ORIGBELIE External CD DVD Drive \(Model TP620\) Instruction Manual](#)

ORIGBELIE TP620

ORIGBELIE External CD DVD Drive

MODEL: TP620 - INSTRUCTION MANUAL

1. INTRODUCTION

Thank you for choosing the ORIGBELIE External CD DVD Drive, Model TP620. This portable optical drive offers high-speed data transfer and wide compatibility, allowing you to read and burn CDs and DVDs on various computer systems. Its compact design, integrated USB-C and USB-A cable, and RGB LED lighting make it a versatile accessory for your computing needs.

This manual provides essential information for setting up, operating, and maintaining your device, along with troubleshooting tips and product specifications. Please read it thoroughly before use.

2. WHAT'S IN THE BOX

- ORIGBELIE External CD/DVD Drive x 1
- USB A to Mini USB Power Supply Cable x 1
- External Disk Drive Storage Bag x 1
- External Disc Drive Carrying Case x 1
- User Manual x 1

What's in the box



Image: The package includes the external drive, power cable, storage bag, carrying case, and user manual.

3. PRODUCT FEATURES

- **Plug & Play:** No additional drivers required for most operating systems.
- **High-Speed USB 3.0:** Data transfer rates up to 5 Gigabits/S (625MB/S), approximately 10 times faster than USB 2.0.
- **2-in-1 USB C&A Data Cable:** Integrated cable with both USB 3.0 Type-A and Type-C connectors for broad compatibility.
- **RGB LED Lighting:** Cool color gradient LED lights that cycle and gradually change colors.
- **Wide Compatibility:** Supports CD±R/RW, CD-ROM, DVD±R/RW, DVD±R DL, DVD-ROM, DVD-RAM, VCD, and SVCD. Compatible with Windows 11/10/8/7/XP, Vista 7/8, Linux, Mac OS.
- **Portable & Compact:** Ultra-thin design with integrated cable and included carrying case for easy transport.

- **High Performance:** Features strong error correction, anti-shock, noise reduction, and low-power consumption.

Plug and Play



USB A 3.0 **USB C 3.0**

USB A and USB C 2-in-1 Data Cable
Suitable for Your Different Computers










						
Music	Movie	Game	Copy Files	Data Backup	Software Installation	Burn & Copy CD/DVD

Image: The drive features a 2-in-1 USB A and USB C cable for easy plug-and-play connectivity.

Color Gradient LED Lights

Cool RGB LED indicator light that can cycle and gradually change colors

24X

CD
Read/Write

8X

DVD
Read/Write



Image: The drive features RGB LED lights that cycle through various colors.

4. SETUP GUIDE

4.1 Connecting the Drive

1. Locate the integrated USB 3.0 Type-A and Type-C data cable on the back of the drive.
2. Plug the appropriate connector (USB-A or USB-C) into an available port on your computer (MacBook, Laptop, Desktop PC).
3. The drive is Plug & Play, meaning it should be automatically recognized by your operating system without manual driver installation.

Compact and Portable Design



Anti-slip Rubber Feet

Embedded USB A/C Data Cable

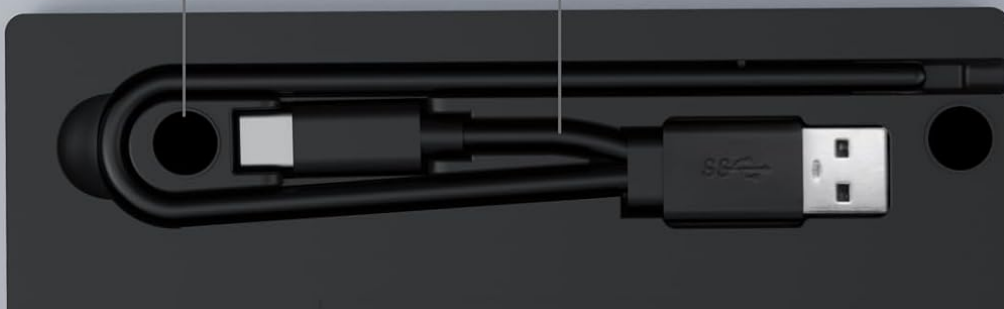


Image: The integrated USB A/C data cable is conveniently stored on the underside of the drive.

4.2 Using the Extra Power Supply Cable

If your computer's USB port does not provide sufficient power, the drive may not operate correctly. In such cases, use the included USB A to Mini USB Power Supply Cable:

1. Connect the Mini USB end of the power supply cable to the dedicated power input port on the drive.
2. Connect the USB-A end of the power supply cable to a 5V charger or power bank (not included).

Come with Extra Power Supply Cable

No longer troubled by power shortage USB A/C Data Cable (on the back of the drive) – Connect to computer USB

A/C port

Extra Power Supply Cable (in the packaging box) – Connect to 5V charger or power bank (not included) and external optical drive Mini USB charging port



Tip: When your computer is not able to provide enough power to the external CD/DVD drive, you can use this extra power supply cable to ensure adequate power. Otherwise, you do not need to use this power supply cord.

Image: Illustration of connecting the extra power supply cable for stable operation if needed.

5. OPERATING INSTRUCTIONS

5.1 Inserting and Ejecting Discs

1. Press the pop-up button on the front of the drive to open the disc tray.
2. Carefully place your CD or DVD onto the tray, ensuring it is centered.
3. Gently push the tray back into the drive until it clicks into place.
4. To eject a disc, press the pop-up button again.

Note for Mac OS Users: Due to limitations of Mac OS, the tray cannot be opened by the button after playing or burning a disc. To eject a disc on a Mac, right-click the desktop icon and select *Eject*, or go to *File > Eject* from the menu.

5.2 Playing and Burning Discs

While the drive is Plug & Play, software is still required to play or burn discs. Ensure you have appropriate media player or burning software installed on your computer.

- For playing DVDs, install a compatible DVD player software (e.g., VLC Media Player).
- For burning CDs/DVDs, use disc burning software (e.g., Nero, CDBurnerXP).
- For Windows 11, a media player and network connection may be required for certain functions.

Video: This video demonstrates the ease of use and RGB LED features of the ORIGBELIE External CD DVD Drive.

5.3 Region Code Setting

The disc can only be played when the region code of the DVD drive matches the DVD. You can typically change the region code 4-5 times. Refer to your operating system's settings for managing DVD region codes.



Image: Understanding DVD region codes is crucial for playback compatibility.

6. COMPATIBILITY

6.1 Supported Operating Systems

- Windows 11 / 10 / 8 / 7 / XP
- Vista 7 / 8
- Linux
- Mac OS

6.2 Supported Devices

- MacBook
- iMac
- Mac
- Notebooks

- Desktop PCs
- Laptops

6.3 Unsupported Devices/Systems

- Car systems
- TVs
- Tablets
- Phones
- Projectors
- PS 4/5
- Xbox
- Switch
- Chrome OS
- Ubuntu system
- Blu-ray discs



USB 3.0 Fast Speed

24X CD Read/Write	8X DVD Read/Write	USB 3.0  5 Gbps
		USB 2.0  480 Mbps

Image: The drive supports a wide range of operating systems and computer types, but is not compatible with certain other devices.

7. SPECIFICATIONS

Feature	Description
Brand	ORIGBELIE
Model Number	TP620
Hardware Interface	USB 3.0, USB 3.0 Type A, USB 3.0 Type C
Optical Storage Read Speed	Max 24x CD / 8x DVD

Optical Storage Write Speed	Max 24x CD / 8x DVD
Item Weight	10.9 ounces (approx. 309g)
Product Dimensions	5.6 x 5.6 x 0.7 inches (approx. 14.2 x 14.2 x 1.8 cm)
Color	Black
Special Features	CD & DVD Burner, CD & DVD Reader, Plug & Play, Portable, Quiet, RGB LED

Video: This video highlights the slim design and USB 3.0 Type-C connectivity of the external CD DVD drive.

8. TROUBLESHOOTING TIPS

- **Drive Not Recognized:** Ensure the USB data cable (Type-A or Type-C) is securely plugged into your computer. If using a desktop, try a different USB port, preferably a rear port for better power delivery.
- **Insufficient Power:** If the drive is not functioning stably or is not recognized, connect the extra USB A to Mini USB Power Supply Cable to a 5V power source (e.g., wall adapter, power bank).
- **Disc Ejection (Mac OS):** Remember that on Mac OS, the physical eject button may not work after media is loaded. Use the software eject option (right-click desktop icon > Eject, or File > Eject).
- **Cannot Play/Burn Discs:** Verify that you have compatible media player software (for playback) or disc burning software (for burning) installed on your computer. Plug & Play refers to driver installation, not software functionality.
- **Disc Not Reading:** Check if the disc is clean and free from scratches. Ensure the disc type is supported by the drive (CD±R/RW, DVD±R/RW, etc.).
- **Region Code Mismatch:** If a DVD is not playing, check if its region code matches the drive's current setting. You can usually change the drive's region code a limited number of times through your operating system settings.

9. MAINTENANCE

- Keep the drive in its carrying case when not in use to protect it from dust and scratches.
- Clean the exterior of the drive with a soft, dry cloth. Avoid using liquid cleaners.
- Do not attempt to open the drive casing, as this may void the warranty and cause damage.
- Handle discs carefully to prevent scratches, which can affect playback and burning quality.

10. WARRANTY AND SUPPORT

The ORIGBELIE External CD/DVD Drive comes with a worry-free **24-month warranty**. If you encounter any problems or have questions, please contact ORIGBELIE customer service. Our friendly support team is available 7 days a week, 24 hours a day, and is committed to resolving any issues you may have.

For customer service, please refer to the contact information provided in your product packaging or visit the official ORIGBELIE website.

