

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Asyko](#) /

> [Asyko 46-inch Low Profile Ceiling Fan with Light and Remote Control Instruction Manual](#)

Asyko 8511

Asyko 46-inch Low Profile Ceiling Fan with Light and Remote Control Instruction Manual

Model: 8511

Safety Information

Package Contents

Setup &
Installation

Operating Instructions

Maintenance

Troubleshooting

Specifications

Warranty & Support

1. SAFETY INFORMATION

Read all instructions carefully before installation and use. Retain this manual for future reference.

- Ensure the main power supply is disconnected before installation or maintenance.
- Installation must be performed by a qualified electrician or in accordance with local electrical codes.
- Mount the fan securely to a ceiling joist or a suitable support structure capable of holding the fan's weight.
- Do not install any dimmer switch if you intend to use the remote control for dimming. Use a simple on/off wall switch.
- Keep hands and objects clear of the fan blades during operation.

2. PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning installation.

Image 2.1: Overview of fan components including motor, blades, light kit, remote, and mounting hardware.

- Fan Motor Assembly
- Fan Blades (3 or 6, reversible brown/black)
- LED Light Kit
- Light Shade (Plastic)
- Remote Control with Receiver
- Mounting Bracket
- Downrod (Optional: 5-inch and 10-inch extensions may be included)
- Canopy
- Hardware Pack (screws, washers, wire nuts)
- User Manual

3. SETUP & INSTALLATION

Detailed instructions and installation videos are provided to assist with the setup process. Ensure power is off before starting.

3.1 Unboxing and Component Identification

Carefully remove all components from the packaging. Identify each part using the 'Package Contents' section.



Image 3.1: Reversible fan blades, showing both brown wood grain and black sides.



Image 3.2: Detail of the fan's quiet DC motor and integrated LED light.

3.2 Mounting the Bracket

1. Attach the mounting bracket to the ceiling electrical box. Ensure it is securely fastened to a structural support.
2. Feed the electrical wires from the ceiling box through the center hole of the mounting bracket.

3.3 Assembling the Fan

3. If using a downrod, thread the wires from the fan motor through the downrod. Secure the downrod to the motor.
4. Carefully lift the fan motor assembly and hang it onto the mounting bracket.
5. Connect the electrical wires (live, neutral, ground) from the ceiling to the fan's receiver unit, following the wiring diagram in the manual.
6. Attach the fan blades to the motor housing. Ensure they are firmly screwed in. Choose your preferred blade finish (brown or black).
7. Connect the LED light kit wires to the fan motor assembly.
8. Attach the light shade by twisting it into place or securing it with screws, depending on the design.

3.4 Installation Video

Video 3.1: A detailed video demonstrating the unboxing and installation process of the Asyko Ceiling Fan. This video covers attaching the mounting bracket, assembling the fan motor and blades, wiring connections, and installing the light kit and shade.

4. OPERATING INSTRUCTIONS

The Asyko Ceiling Fan is controlled via the included remote control, offering various settings for comfort and convenience.

4.1 Remote Control Functions



Image 4.1: The remote control allows adjustment of fan speed, light color temperature, dimming, and timing functions.

- **Power On/Off:** Turn the fan and light on or off.
- **Fan Speed:** Select from 6 adjustable fan speeds (Levels 1-2: Low, Levels 3-4: Medium, Levels 5-6: High).
- **Light Control:**
 - **Color Temperature:** Cycle through 3000K (warm white), 4000K (natural white), and 6000K (cold white).
 - **Dimming:** Adjust light brightness from 10% to 100%.
 - The fan and light can be operated independently.
- **Timer Function:** Set the fan to turn off automatically after 1 or 2 hours.
- **Memory Function:** The fan remembers the last used brightness, color temperature, and fan speed settings when turned off for at least 10 seconds.

4.2 Reversible Motor Function

The reversible DC motor allows for year-round use:

- **Summer Mode (Forward Rotation):** Blades rotate counter-clockwise to push cool air downwards, creating a cooling effect.
- **Winter Mode (Reverse Rotation):** Blades rotate clockwise to draw cool air up, circulating warm air trapped near the ceiling.



Image 4.2: Visual representation of the reversible motor function for summer cooling and winter air circulation.

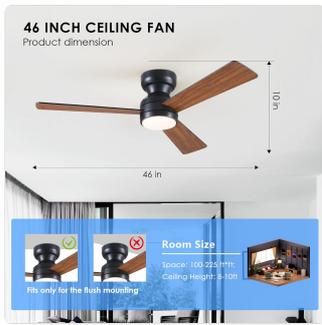


Image 4.3: Explanation of the 6-speed adjustable fan settings.

4.3 Quiet Operation

The fan features a quiet DC motor, ensuring a peaceful environment suitable for bedrooms, living rooms, and offices.

Video 4.4: This video demonstrates the various operational features of the Asyko Ceiling Fan, including fan speed adjustments, light color temperature changes, dimming, and the reversible motor function for different seasons.

5. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

- **Cleaning:** Use a soft, damp cloth to clean the fan blades and motor housing. Do not use abrasive cleaners or solvents.
- **Blade Inspection:** Periodically check that all blade screws are tight. Loose screws can cause wobbling and noise.
- **Light Shade:** Clean the light shade gently with a soft cloth to maintain light output.
- **Electrical Connections:** Ensure all electrical connections remain secure. If you notice any loose wiring, consult a qualified electrician.

6. TROUBLESHOOTING

If you encounter issues with your Asyko Ceiling Fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not operate	No power supply; Loose wiring; Remote control issue	Check circuit breaker; Verify all wire connections; Replace remote batteries or re-pair remote.

Problem	Possible Cause	Solution
Light does not work	Loose wiring; LED module failure; Remote control issue	Check light kit connections; Contact customer support for LED module replacement; Verify remote functionality.
Fan wobbles or is noisy	Loose blade screws; Unbalanced blades; Improper mounting	Tighten all blade screws; Use a balancing kit (not included) to balance blades; Ensure mounting bracket is secure.
Remote control not responding	Dead batteries; Not paired correctly; Interference	Replace batteries; Follow pairing instructions in the manual; Reduce interference from other devices.
Light color temperature changes unexpectedly	Power cycle within 10 seconds	Allow at least 10 seconds after turning off the light for the memory function to save the setting.

7. SPECIFICATIONS

Feature	Detail
Brand	Asyko
Model Name	Ceiling Fans with Lights (Model 8511)
Electric Fan Design	Ceiling Fan
Size	46 inches (3-Blade)
Color	Brown (reversible blades)
Power Source	DC
Motor Type	Brushless DC (Quiet Operation)
Wattage	40 watts
Light Type	Dimmable LED
Color Temperatures	3000K (Warm White), 4000K (Natural White), 6000K (Cold White)
Brightness Adjustment	10%-100%
Number of Fan Speeds	6

Feature	Detail
Control Method	Remote Control
Special Features	Reversible Motor, Memory Function, Timer (1/2 hour)
Installation Type	Flush Mount (Self-install)
Product Dimensions	6"D x 6"W x 6"H (Note: This appears to be packaging dimensions, actual fan dimensions are 46" diameter)
Item Weight	7.13 pounds
Indoor/Outdoor Usage	Indoor

8. WARRANTY & SUPPORT

Asyko is committed to customer satisfaction. For any questions, concerns, or warranty claims, please contact our customer support team.

- **Customer Support:** We offer prompt customer support with a 24-hour response time. Refer to your purchase documentation for specific contact details.
- **Warranty:** Please refer to the warranty information provided with your purchase for details on coverage and terms.